

# MZ-R2

## SERVICE MANUAL

Ver 1.0 2001.05  
With SUPPLEMENT-1  
(9-959-214-89)  
With SUPPLEMENT-2  
(9-959-799-81)



*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model  
Tourist Model*



Model Name Using Similer Mechanism	NEW
Mechanism Type	MT-MZR2-109
Optical Pick-up Type	KMS-190A

### SPECIFICATIONS

#### System

Audio playing system  
MiniDisc digital audio system  
Laser diode properties  
Material: GaAlAs  
Wavelength:  $\lambda = 780 \text{ nm}$   
Emission duration: continuous  
Laser output: less than  $44.6 \mu\text{W}$   
(This output is the value measured at a distance of 200 mm from the lens surface on the optical pick-up block.)  
Revolutions  
400 rpm to 900 rpm (CLV)  
Error correction  
Advanced Cross Interleave Reed Solomon Code (ACIRC)  
Sampling frequency  
44.1 kHz  
Coding  
Adaptive TRansform Acoustic Coding (ATRAC)  
Modulation system  
EFM (Eight to Fourteen Modulation)  
Number of channels  
2 stereo channels  
Frequency response  
20 to 20,000 Hz  $\pm 1 \text{ dB}$   
Wow and Flutter  
Below measurable limit

#### Inputs

	Jack Type	Rated Input	Minimum Input
Microphone	Stereo mini-jack	0.78 mV	0.22 mV
Line In	Stereo mini-jack	194 mV	69 mV

#### Outputs

	Jack Type	Rated Output	Maximum Output Level	Load Impedance
Headphones	Stereo mini-jack	—	5 mW + 5 mW	16 ohm
Line Out	Stereo mini-jack	194 mV	—	10 kilohm

#### General

Power requirements  
• LIP-12 Rechargeable Battery (Lithium-ion Battery Pack, supplied)  
• Three R6 (size AA) batteries (not supplied)  
• Sony AC Power Adaptor (supplied) connected at the DC IN 6V jack:  
220–230 V AC, 50/60 Hz (AEP model)  
120 V AC, 60 Hz (US, Canadian model)  
240 V AC, 50Hz (UK, Austrarian model)  
100–240 V AC, 50/60 Hz (E, Tourist model)  
Battery operation time  
120 minutes of consecutive recording with fully charged LIP-12  
150 minutes of consecutive playback with fully charged LIP-12  
Dimensions  
Approx. 84 × 29.9 × 106.8 mm (w/h/d) ( $3 \frac{3}{8} \times 1 \frac{3}{16} \times 4 \frac{1}{4} \text{ in.}$ )  
Mass  
Approx. 310 g (10.9 oz) incl. rechargeable battery

— Continued on next page —

9-959-214-12  
2001E0200-1  
© 2001.5

**Sony Corporation**  
Personal Audio Company  
Shinagawa Tec Service Manual Production Group

PORTABLE MINIDISC RECORDER  
**SONY®**

## Accessories

### Optional

- LIP-12 Lithium-ion Battery Pack
- ACP-MZ60A AC Power Adaptor/Battery Charger
- POC-MZ1, POC-MZ2 Optical Cable
- CPM-MZR2K Car Mount Kit
- CPA-8 Car Connecting Pack
- ECM-909A, ECM-727P Stereo Microphones
- MDR-D55, MDR-D77 Stereo Headphones
- SRS-58 Sony Active Speakers
- Recordable MDs: MDW-60, MDW-74
- CK-MD4 MiniDisc Carrying Case
- CK-MD10 MiniDisc Filing Box

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information about the accessories in your country.


US and foreign patents licensed from Dolby Laboratories Licensing Corporation.

Design and specifications are subject to change without notice.

### Note

This appliance conforms with EEC Directive 89/336/EEC regarding interference suppression.

## For Customers in Europe




This MiniDisc Recorder is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the bottom exterior.

## For Customers in Canada

This apparatus complies with the Class B limits for radio noise emissions set out in Radio Interference Regulations.

## For Customers in the United Kingdom



This MiniDisc Recorder is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the bottom exterior.

The built-in battery should be replaced by qualified personnel only.

## For Customers in Australia

If the supply cord of AC power adaptor is damaged the AC power adaptor must be returned to the manufacturer or his agent for the cord to be replaced.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM ANY DEFECTIVE PRODUCT OR THE USE OF ANY PRODUCT.

"MD WALKMAN" is a trademark of Sony Corporation.

## TABLE OF CONTENTS


Section	Title	Page	Section	Title	Page
1.	SERVICING NOTE .....	3	5.	ELECTRICAL ADJUSTMENTS	
2.	GENERAL			Laser Diode Emission Checking Precautions .....	27
	Looking at the controls .....	4		Optical Pick-up Block (KMS-190A) Using Precautions .....	27
	Let's Start! .....	5		Adjusting Precautions .....	27
	Choosing power sources .....	6		Laser Power Adjustment .....	27
	Setting the clock .....	7		Offset Adjustment .....	28
	Recording from a CD, etc. ....	8		MO Traverse Adjustment .....	28
	Three ways of recording .....	8		MO P-TOC Traverse Adjustment .....	29
	Recording from a microphone .....	11		MO Error Rate Check .....	29
	Playing an MD .....	13		CD Traverse Adjustment .....	30
	Playing tracks repeatedly .....	13		CD RF Level Adjustment .....	30
	Useful tips on playing an MD .....	14		CD Error Rate Check .....	31
	Track marking a recording .....	15		Adjusting/ Connecting Points .....	31
	Erasing recordings .....	16	6.	DIAGRAMS	
	Connecting to a stereo system .....	16	6-1.	Semiconductor Lead Layouts .....	32
	Using in a car .....	16	6-2.	IC Pin Functions	
	Error messages .....	16		• IC601 EFM/ACIR Encoder/ Decoder (CXD2525R-1) ....	34
	What is the MD? .....	17		• IC602 Shock Proof Memory Controller (CXD2526AR) ...	36
3.	DISASSEMBLY			• IC803 Sub System Control (MB89133A-PFM-170) .....	38
3-1.	Lid Cover Block .....	18		• IC805 Main System Control (CXP81848-603R) .....	39
3-2.	Main Board, Spindle Motor and Loading Motor .....	18	6-3.	Block Diagram .....	42
3-3.	Mechanism Deck (MT-MZR2-109) .....	19	6-4.	Printed Wiring Boards .....	45
3-4.	Sled Motor and Optical Pick-up Block (KSM-190A) .....	19	6-5.	Schematic Diagram — RF/ Servo Section — .....	49
4.	TEST MODE		6-6.	Schematic Diagram — Process Section — .....	53
	Outline .....	20	6-7.	Schematic Diagram — Audio Section — .....	57
	Setting the Test Mode .....	20	6-8.	Schematic Diagram	
	Releasing the Test Mode .....	20		— Micro Computer/ MD Section — .....	61
	Test Mode Operations .....	20	6-9.	IC Block Diagrams .....	65
	Test Mode Structure .....	20	7.	EXPLODED VIEWS	
	Servo Mode .....	20	7-1.	Cabinet Block .....	71
	Audio Mode .....	24	7-2.	Main Board Block .....	72
	Mechanism Mode .....	25	7-3.	Mechanism Deck 1 (MT-MZR2-109) .....	73
	Power Mode .....	25	7-4.	Mechanism Deck 2 (MT-MZR2-109) .....	74
	Table of Dot Area Dispalys .....	26	8.	ELECTRICAL PARTS LIST .....	75
	Other Displays .....	26			

## SECTION 1

### SERVICING NOTE

Open the cover assembly when measuring the REC board, etc. This will prevent the unit from operating.

- ① Secure the open/close detection switch claw with tape in the direction of the arrow.
- ② Secure the mechanism chassis with tape so that it does not move.

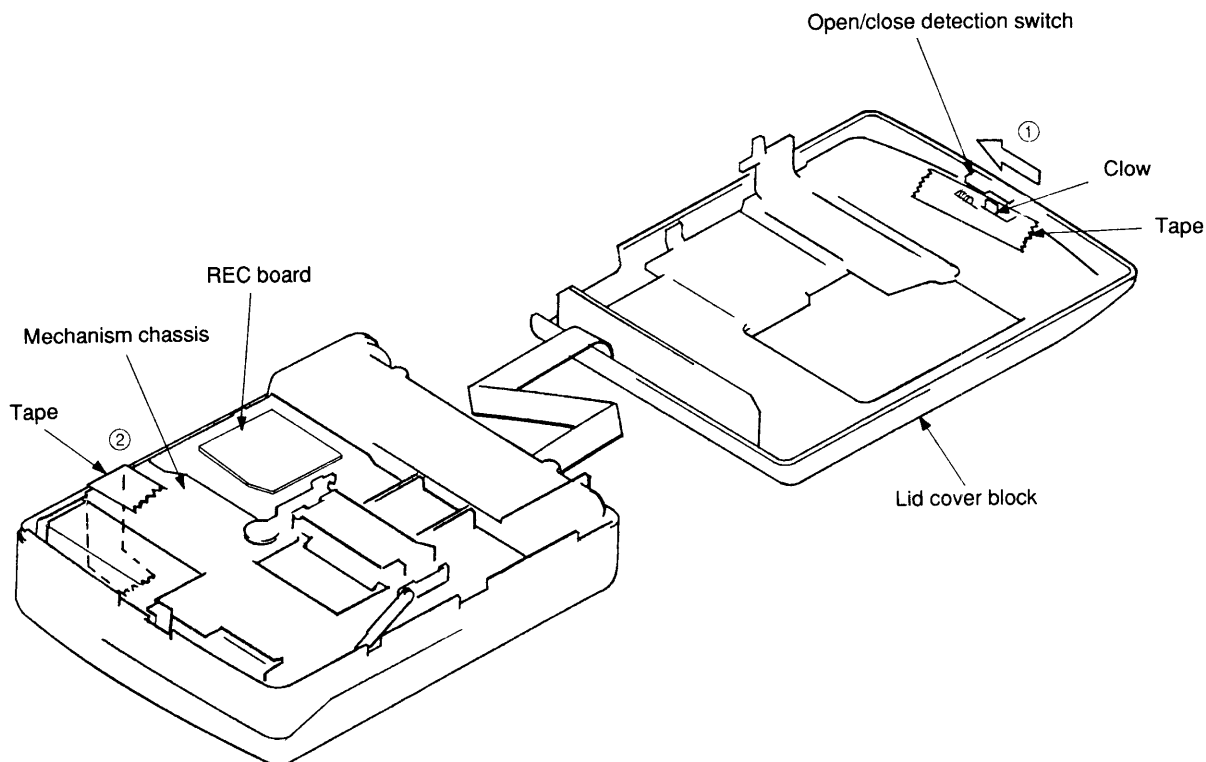



#### Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.


#### Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

#### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


## SECTION 2 GENERAL

This section is extracted from instruction manual.

### Looking at the controls

See pages in ( ) for more details.

#### The recorder

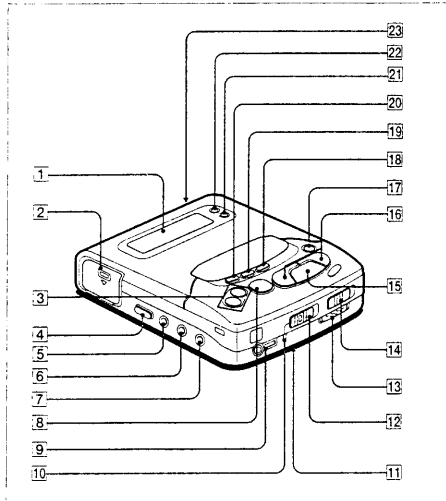


- 1 Display window (43, 64)
- 2 Rechargeable battery compartment (11)
- 3 VOL(volume) +/- buttons (14, 36)
- 4 BASS BOOST (41)  
Select to emphasize low frequency (bass) sounds.
- 5 LINE OUT jack (49)
- 6 OPT(optical)/LINE IN jack (7, 16, 17)
- 7 MIC PLUG IN POWER jack (30)
- 8 ■ (stop) button (8, 9, 37)
- 9 □ (headphones)/REMOTE jack (9, 22, 34, 36, 50)
- 10 Record indicator (28, 33)
- 11 CLOCK SET (14)  
Press here with a pen nib to set the clock.
- 12 REC (record) (8, 20, 22, 25, 27, 30)
- 13 HOLD (40)  
Slide to lock the controls of the recorder.
- 14 OPEN (8, 20, 21, 24, 26, 37)  
Slide here to open the lid and insert or remove an MD.
- 15 ► (play) button (9, 22, 36)
- 16 ◀▶ (search, AMS) buttons (14, 22, 35, 37)
- 17 II (pause) button (20, 22, 24, 25, 26, 30, 37, 46)
- 18 ERASE (48)  
Press to erase the recorded tracks.
- 19 END SEARCH (25)  
Press to search for the end of recording.
- 20 TRACK MARK (34, 44, 46)  
Press to add or erase track marks on a recording.
- 21 PLAY MODE (39)  
Each time you press here the recorder plays the MD in different play modes: normal play, all repeat, single repeat, or shuffle repeat.
- 22 DISPLAY (42)  
Press to display the current play mode, the remaining time of the current track, the remaining time of the disc, or the date and time recorded.
- 23 DC IN 6 V jack (7, 10, 11, 50)  
Connect the supplied AC power adaptor here.

62 For your information

For your information 63

### Looking at the controls

#### The display window

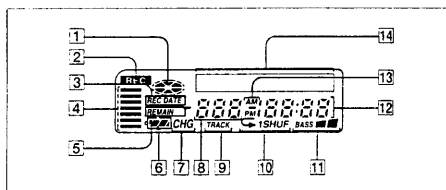

- 1 Disc indication  
Shows that the MD is rotating for recording, playing or editing.
- 2 REC(record) indication (21, 23, 26, 31, 32, 34)  
Lights up while recording. When it is flashing, the recorder is in recording standby mode.
- 3 REC DATE (recorded date) indication (14, 43)  
Lights up along with the date and time the MD was recorded. When only "DATE" lights up, the current date and time are displayed.
- 4 Level meter (32)  
Shows the volume of the MD being played or recorded.
- 5 REMAIN(remaining time) indication (20, 22, 31, 36, 43)  
Lights up along with the remaining number of tracks or remaining time of the track or the MD.
- 6 Battery indication (11, 13)  
Shows battery condition.
- 7 CHG(charging) indication (11)  
Lights up while the rechargeable battery is charged.
- 8 Track number indication (20, 21, 43)
- 9 TRACK indication (43)  
Lights up along with the track number and elapsed time indications.
- 10 Play mode indication (39)  
Shows the play modes of the MD.
- 11 BASS BOOST indication (41)  
Lights up when low frequency (bass) sound is emphasized.
- 12 Time display (14, 20, 43)  
Shows the time recorded and the current time.
- 13 AM/PM indication (14, 15)  
Lights up along with the time indication in 12-hour system.
- 14 Character information display (14, 20, 21, 34, 36, 43)  
Displays the disc and track names, date, error messages, etc.


64 For your information

For your information 65



⇒ Looking at the controls

## The remote controller

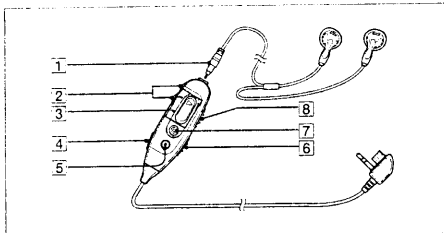

- |  |  |
|--|--|
| <p>1 Microplug (6)</p> <p>2 VOL(volume) +/- buttons (36)</p> <p>3 ► (play)/◀◀/▶▶ (search, AMS) button (37)<br/>While the recorder isn't operating, press ► to play. While playing, press the ◀◀ side to find the beginning of the current or preceding tracks or search backward, or press the ▶▶ side to find the beginning of the succeeding tracks or search forward.</p> | <p>4 TRACK MARK (34, 44)<br/>Press to add track marks while recording.</p> <p>5 II (pause) button (37)</p> <p>6 AVLS (Automatic Volume Limiter System) (42)<br/>Slide to ON to limit the maximum volume.</p> <p>7 ■ (stop) button (37)</p> <p>8 HOLD (40)<br/>Slide to lock the controls of the remote controller.</p> |
|--|--|



66 For your information

## Let's Start!


Start recording a MiniDisc (MD) from a CD and play it using your MD recorder and the supplied accessories.

### Unpacking

Use the following accessories to start the operation on the next three pages.

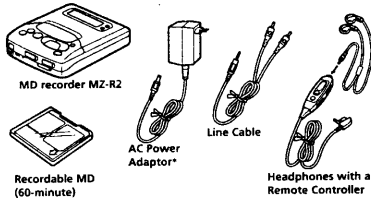


\* Illustration conforms to European model.



6 Let's Start!


## → Connecting to a CD player →

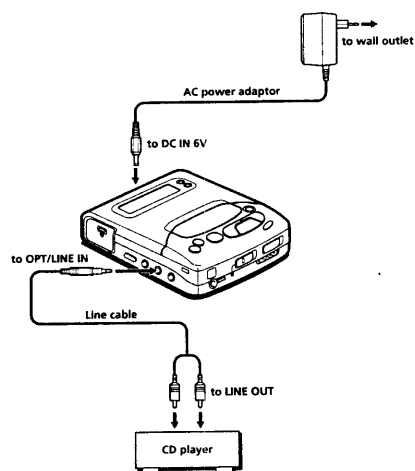

Ⓔ  
To hook up a digital sound source (for example, another MD player, CD player or digital amplifier) —page 16  
To hook up an analog sound source with stereo-mini type line out jacks —page 17

Let's Start! 7

## → Recording an MD →

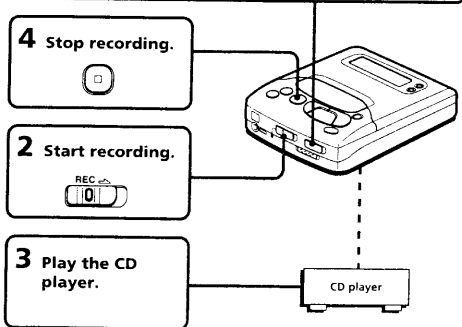


**To start recording precisely**

While holding down the **II** (pause) button, slide the REC switch to the right. Play the source. When the source comes to the part you want to record, press **II** again.

## 8 | Let's Start!

## → Listening to an MD

Play the MD you have just recorded.

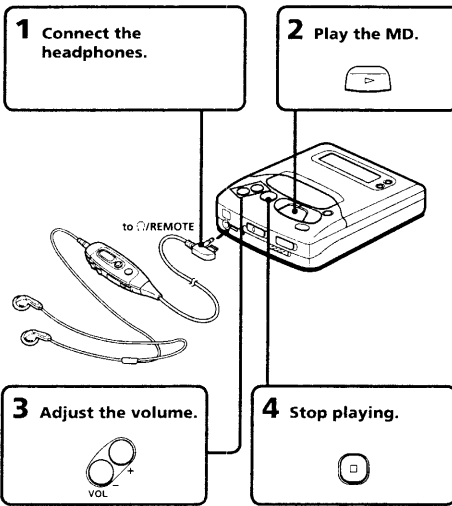

- After you stopped recording, press ►. The recorder will play from the point where you started recording.
- When you have stopped playing the MD partway through, press ► to resume playing from the point where the MD stopped.
- If you have opened the lid or taken the MD out after you stopped playing it partway, the recorder will play from the first track when you press ►.

Let's Start! | 9


## Choosing power sources

The recorder is operable on AC, rechargeable battery, and dry battery power.

### Using on AC power

To record for hours, you should operate the recorder on AC power. If you use the rechargeable battery or dry batteries, the batteries may weaken and interrupt the recording.

**Connect the supplied AC power adaptor to the DC IN 6V jack of the recorder and the wall outlet.**

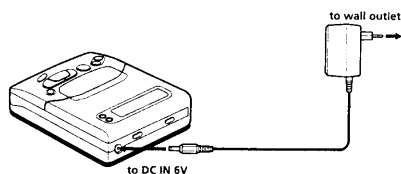

③ After using, leave the recorder connected to the AC power for about 24 hours to charge the built-in battery for the clock and the recorder's memory.

The built-in battery operates the clock and powers the recorder's memory. It requires charging when you use the recorder for the first time or after a long period of disuse.

The recorder will automatically charge the built-in battery while connected to AC power, rechargeable battery, or dry

batteries. Once charged, the built-in battery should last about 2 months without connecting to any of the power sources.

### Note on the AC power adaptor

Use the supplied AC power adaptor only. Do not use any other AC power adaptor.

### Polarity of the plug




### Using on the rechargeable battery


Before using the supplied rechargeable battery for the first time, you must charge it.  
The battery can be recharged about 300 times.

The battery can be recharged about 300 times.

- 1 Connect the supplied AC power adaptor.

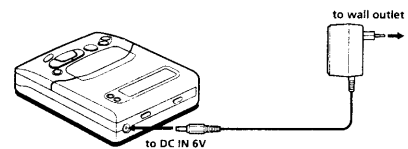

**2** Open the battery compartment lid and insert the battery.



"CHG" and the battery indication appear in the display and charging begins.

While charging. . . . . Charging completed. "CHG" disappears.

Charging a completely discharged battery takes:  
about 3 hours for 80% charging, or  
about 5 hours for 100% charging.

## 10 | Setting up

Setting up | 11

## Choosing power sources

### 3 Disconnect the AC power adaptor.

As long as the recorder is connected to the AC power, the power will be supplied from AC.

#### Notes on recharging


- Be sure to use the supplied AC power adaptor.
- When you use the battery for the first time or after a long period of disuse, the battery life may be diminished. In this case, charge and discharge the battery several times. The battery life will be restored.

#### Notes on the rechargeable battery

- To charge the battery, use only the recorder or the specified charger.
- Do not disassemble or short-circuit the battery.
- Do not leave the battery at high temperature for an extended period of time.
- Keep the battery away from the fire.
- Do not expose the battery to water.
- Do not drop the battery or subject it to mechanical shock.

#### Battery charging tips


- **You can charge the battery at any time.**  
The rechargeable battery does not need discharging before recharging. You can recharge a half-charged battery. However, the rechargeable battery discharges little by little even while it is not in use. We recommend that you charge it before every use.
- **Keep a few spare batteries.**  
To avoid power shortage, prepare a few rechargeable batteries LIP-12 (not supplied). To remind yourself of the battery's condition, set the switch on the battery to the position where no mark is visible when the battery has finished charging. Set the switch to the position where the red mark is visible when the battery has been discharged.




- **To ensure the maximum number of chargings and dischargings,** we recommend storing the battery in a cool place and charging it under temperatures ranging from 50° to 86°F (10° to 30°C). When the battery is not to be used for a long time, be sure to remove it from the recorder.

## Using on dry batteries

### 1 Mount the battery case.



### 2 Install three R6 (size AA) alkaline batteries.



After you install a battery in the lower compartment, put the black tape, and install another battery on it. And then, install the other battery as illustrated.

#### When to replace the batteries

You can check the battery condition with the battery indication displayed while using the recorder.

##### Used batteries

- **Weak batteries. Replace all the batteries.**  
The batteries have gone out. "LOW BATT" flashes in the display, and the power goes off.


#### Battery life

Batteries	Recording	Playback
Rechargeable Battery**	Approx. 2 hours	Approx. 2.5 hours
R6 size (AA) alkaline batteries	Approx. 2 hours	Approx. 2.5 hours
Rechargeable and R6 size AA1 batteries	Approx. 4.5 hours	Approx. 6.5 hours

- \* When you record, use a fully charged battery or new dry batteries.
- \*\* If the rechargeable battery capacity becomes half the normal life, replace it with a new one.


## Setting the clock

To stamp the date and time on the MD when you record, you need to set the time. When you use the recorder for the first time or after a long time of disuse, charge the built-in battery for the clock and the recorder's memory before setting the clock (See *Using on AC power*, page 10.) Set the clock while the recorder isn't operating after connecting to the power source.

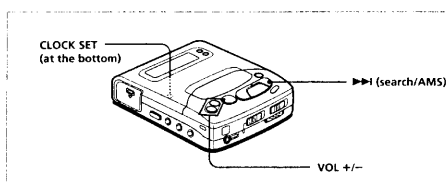

### 1 Press CLOCK SET at the bottom of the recorder with a pen nib.

The digits of the year flash.




### 2 Enter the current year by pressing VOL + or -.

To change the digits rapidly, keep pressing + or -.


### 3 Press ►►.

The year you set is stored in memory and the digit of the month flashes.



### 4 Repeating steps 2 and 3, enter the current month, date, hour, and minute.

The time display appears with "AM" or "PM". ("AM 12:00" means midnight and "PM 12:00" means noon.) When you press ►► to set the minute, the clock starts operating.

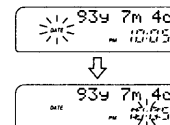

#### If you make a mistake while setting the clock

Press ■, and set the clock again from step 1.

#### On the clock display

- **To display the time**  
Press DISPLAY twice in stop mode. The time indication disappears after 5 seconds.

#### If the clock loses time or the display flashes

The built-in battery is weak. If you keep using the weak battery, the recorder will not record the recorded date and time. Note that the built-in clock normally loses about 2 minutes a month.


#### To display the time in the 24-hour system

While setting the clock, press DISPLAY. To display the time in the 12-hour system, press DISPLAY again.

## Recording from a CD, etc.

When you connect the MD recorder to a sound source, the recorder automatically recognizes the sound source and switches to digital or analog recording.

### Hooking up a digital source

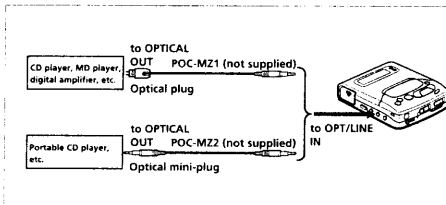


**Connect the optical cable (POC-MZ1 or POC-MZ2, not supplied) to the OPT/LINE IN jack.**

The recorder switches to digital input automatically.


#### Notes

- The MD recorder's sampling frequency is 44.1 kHz. A digital source which has a different sampling frequency (such as the DAT recorder/player) cannot be recorded using the digital connection. Use instead the analog (line out) connection (see the next section).
- You can make a digital recording only from an optical type output.

- If you use the digital (optical out) connection to record your MD, you will not be able to make copies from the recorded disc copy. You can only make copies from a home-recorded MD by using the analog (line out) connection.

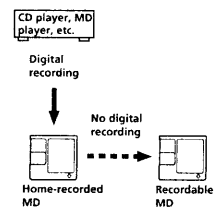

### Hooking up an analog source

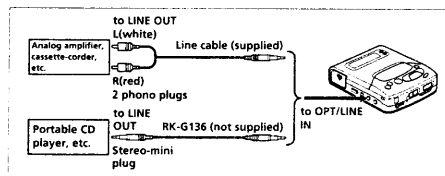

**Connect the supplied line cable (or RK-G136, not supplied) to the OPT/LINE IN jack.**

The recorder switches to analog input automatically.

#### Note

If a microphone is connected, the recorder will not switch to analog input. To record from the analog source, you must first disconnect the microphone.

- When the recorder has different sound sources connected at the same time

The recorder switches to digital, microphone, and analog source in this order of priority.

## Three ways of recording



You can record an MD in three ways according to the points where the recording should start on the MD.

### ●Recording from the first track of an MD (page 20)

When recording on a brand new MD, recording starts from the first track of the MD. To record over a previous recording to be erased entirely, recording should also start from the first track of the MD.


**Note that all the tracks will be erased as soon as you start recording.**

Even if the previous recording is longer than the new tracks you are going to record, all of the previous recording will be erased.

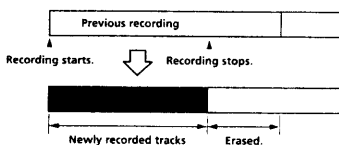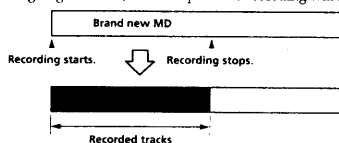


### ●Recording from a specific point of a previous recording (page 22)

To keep a part of a recorded MD and record over the remaining previous recording, start recording at the end of the part you want to keep (at the beginning of the part you want to erase). **Note that all the succeeding tracks will be erased as soon as you start recording.**

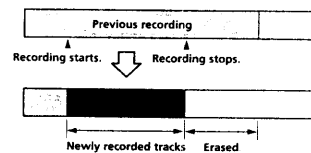

### ●Recording on the blank portion of a recorded MD (page 25)


To keep all of the previous recording and record new tracks on the blank portion of the MD, start recording from the last point of the previous recording.

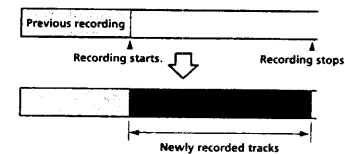

⇒Recording from a CD, etc.

## Recording from the first track of an MD


Before you start recording, connect the MD recorder to a sound source. When you record on the first track of a used MD, note that all the succeeding tracks will be erased as soon as you start recording.

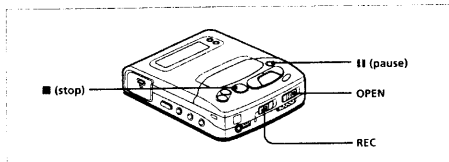

### 1 Insert the recordable MD.

Slide OPEN to open the lid, insert the recordable MD with the arrow pointing toward the opening, and close the lid.

Once you open the lid, the recorder will start recording from the beginning of the first track.

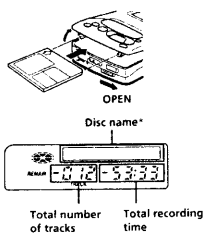


\* No indication appears with MDs that have not been electronically labeled.

20 Recording an MD

⇒Recording from a CD, etc.

## Recording from a specific point of a previous recording

You can record over a part of the previous recording. Note that all the succeeding tracks will be erased as soon as you start recording.

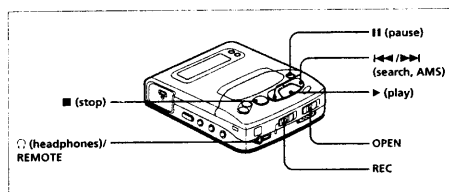


### 1 Connect the headphones to (headphones)/REMOTE.

### 2 Insert the recordable MD.

### 3 Press >> to find the start point of recording.

The recorder plays the previous recording. To find the beginning of the next track, press >>. To find the beginning of succeeding tracks, press >> repeatedly. If you keep pressing >>, you can fast-forward the playback while listening to the sound. To find the beginning of the current or preceding tracks, use <<.

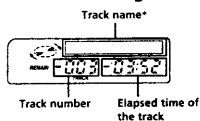

\* No indication appears with MDs that have not been electronically labeled.


22 Recording an MD

### 2 While holding down II, slide REC to the right pressing the red button in the center of REC.

"REC" flashes in the display and the recorder enters recording standby mode.

#### Note


When you record over a previous recording, all the succeeding tracks will be erased as soon as you start recording.

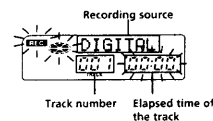

### 3 Play the sound source.

### 4 Press II again to release standby and start recording.

"REC" lights up and recording starts. The recording level is adjusted automatically (AGC—Automatic Gain Control).



### 5 Press ■ to end recording.

"Toc Edit" flashes and the recorder starts writing the new data to the MD. The indication goes out when writing is completed.

#### Note

Do not move or jog the recorder while "Toc Edit" is flashing in the display.



To	Press/Slide
Pause/release pause	II
Eject the MD	After stop (■), slide OPEN and open the lid

Recording an MD 21

### 4 Press ■ to stop at the point you want to start recording over.

### 5 While holding down II, slide REC to the right pressing the red button in the center of REC.

"REC" flashes in the display and the recorder enters recording standby mode. Check the display to make sure the recording will start from the right track.

#### Note

All tracks following this point will be erased as soon as you start recording.




### 6 Play the sound source.

### 7 Press II again to release standby and start recording.

The new track is recorded as a succeeding track from this point.

The recording level is adjusted automatically (AGC—Automatic Gain Control).




Recording an MD 23

⇒Recording from a CD, etc.

## 8 Press ■ to end recording.

"Toc Edit" flashes and the recorder starts rewriting the new data to the MD. The indication goes out when rewriting is completed.



### Note

Do not move or jog the recorder while "Toc Edit" is flashing in the display.

To	Press/Slide
Pause/ release pause	II
Eject the MD	After stop (■), slide OPEN and open the lid

### If you want to keep the latter tracks of the recorded MD

Erase the preceding tracks so that the latter tracks are renumbered from the beginning of the MD (see *Erasing recordings*, page 48). Then start recording new tracks from the last point of the track you want to keep.

⇒Recording from a CD, etc.

## 3 While holding down II, slide REC to the right pressing the red button in the center of REC.


"REC" flashes in the display and the recorder enters recording standby mode.



## 4 Play the sound source.


## 5 Press II again to release standby and start recording.

The recording level is adjusted automatically (AGC—Automatic Gain Control).



## 6 Press ■ to end recording.

"Toc Edit" flashes and the recorder starts rewriting the new data to the MD. The indication goes out when rewriting is completed.




### Note

Do not move or jog the recorder while "Toc Edit" is flashing in the display.

To	Press/Slide
Pause/ release pause	II
Eject the MD	After stop (■), slide OPEN and open the lid

## Recording on a blank portion of a recorded MD


You can record new tracks after the previous recording.

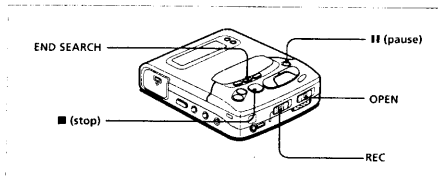

## 1 Insert the recordable MD.

## 2 Press END SEARCH.

The recorder quickly searches for the end of the previous recording and displays the remaining time available for recording. Recording will be made from this point.

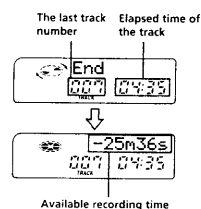

## Useful tips on recording

### To monitor the sound being recorded

Connect the headphones to ◯/REMOTE and adjust the volume by pressing VOL +/-. Sound levels are copied to the MD automatically and independently of the volume for monitoring.

### To check the tracks recorded

Connect the headphones to ◯/REMOTE and press ► after you stop recording. The recorder will play from the point where you stopped recording.

### To resume recording from the point the MD stopped (Resume function)

If you stop recording and do not eject the MD nor open the lid, the recorder will resume recording from the point where the MD stopped.

### Note

As soon as you start recording, all the succeeding tracks of the previous recording will be erased.

### To start recording quickly

You can start recording simply by sliding REC to the right. In some cases, however, the recorder does not enter the recording mode immediately after you slide the switch—when you try to start recording as soon as you insert an MD, when you try to start recording over from a specific point of a previous recording as soon as you search the point, and so on. In these cases, start playing the sound source after the record indicator lights up.

## ⇒Recording from a CD, etc.

### How sources and their track divisions are marked

Recording source	Track divisions are
Digital source (CDs, MDs)	Marked (copied)
Analog source (tapes)	Marked (copied) after more than 2 seconds of silence
Microphone	Not marked (copied) (can be added manually)

When you press **II** while recording from any source, the recorder recognizes it as a track division. When pause is released, the recording resumes on a new track number.

To add and erase track marks, see *Track marking a recording*, page 44.

#### Track divisions may be copied incorrectly

- when you record from some CD players or multi disc players.
- when the source is in shuffle or program play mode.

In this case, play the source in normal play mode.

### Knowing the recording condition

The record indicator shows the recording condition.

Condition	Record indicator
Recording	lights up
Recording standby	flashes
Recording with less than 3 minutes' recording time available	slowly flashes


#### Notes

- When you record from a portable CD player using the digital connection, "NO SIGNAL" may appear in the display after you set the recorder to recording standby mode. This happens when the sound source does not send the digital signals correctly. In this case set the CD player to play pause before you start recording.
- This recorder does not label or copy character information such as disc names and track names.

Maximum number of tracks  
On this MD recorder 254 tracks can be recorded.

#### Protecting a recorded MD


To record-protect an MD, slide open the tab at the side of the MD (so the tab is concealed). In this position, the MD cannot be recorded.

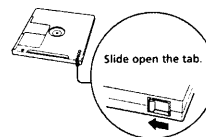

## Recording from a microphone

### Recording

This section explains how to record from the first track of an MD. To record from a specific point of a previous recording, see page 22. To record on a blank portion of a recorded MD, see page 25. When you record over a previous recording, note that all the succeeding tracks will be erased as soon as you start recording.

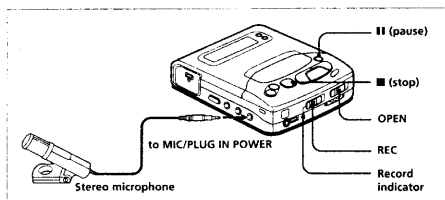

#### 1 Connect a microphone at MIC/PLUG IN POWER.


Use a stereo microphone (ECM-909A, ECM-727P, etc., not supplied).

##### Note

To record from a microphone, you must first disconnect the digital source. If connected, the recorder will not switch to microphone input.

#### 2 Insert a recordable MD.


Slide OPEN to open the lid, insert a recordable MD (supplied) with the arrow pointing toward the opening, and close the lid. Once you open the lid, the recorder will start recording from the beginning of the first track.

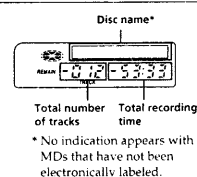

\* No indication appears with MDs that have not been electronically labeled.

#### 3 While pressing the red button in the center of REC, slide REC to the right.

Recording starts when the record indicator lights up. The recording level is adjusted automatically (AGC—Automatic Gain Control).

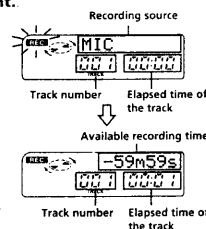


##### Note

When you record over a previous recording, all the succeeding tracks will be erased as soon as you start recording.

#### 4 Press ■ to end recording.

"Toc Edit" flashes and the recorder starts writing the new data to the MD. The indication goes out when writing is completed.



##### Note

Do not move or jog the recorder while "Toc Edit" is flashing in the display.

## ⇒Recording from a microphone

### To start recording precisely


- 1 While holding down II, slide REC to the right pressing the red button in the center of REC.  
The recorder enters recording standby mode.
- 2 When you want to record, press II again.

### Adjusting the recording level (Manual recording)

Sound levels of digital sources are automatically copied to the MD. However, if you are recording from a microphone or an analog source, you can set the recording level manually.

- 1 While holding down II, keep sliding REC to the right for more than 2 seconds.

"ManualREC" appears. To return to the automatic control, repeat the same operation.

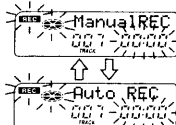

- 2 Play the source.

- 3 While observing the level meter, adjust the recording level using I◀◀/▶▶I.


Press ▶▶I to increase. Press I◀◀ to decrease.

Adjust the level to around the middle of the level meter.

Excessive level will make the playback sound distorted.

#### Note

Once you start manual recording, you cannot adjust the recording level or the volume for monitoring. Adjust the level or the volume while the recorder is in standby mode.



- 4 Press II to release pause and start recording.

- 5 Press ■ to end recording.

The recording level control is switched to automatic control.

### Knowing the recording condition

The record indicator shows the recording condition while recording from a microphone.


Condition	Record indicator
Recording	flashes according to loudness of the source (voice mirror)
Recording standby	flashes
Recording with less than 3 minutes' recording time available	slowly flashes

## ⇒Recording from a microphone

### Track marking while recording


Track marking essentially adds tracks while recording and enables you to quickly find and play from the marked position. The track marking feature is useful particularly when recording from a microphone. For example, when recording a discussion where a number of people are speaking, insert a track mark (a new track number) every time the speaker changes. You can also insert a track mark when recording from a digital or analog source connected to the OPT/LINE IN jack.

The remote controller will help you easily insert a track mark while recording.

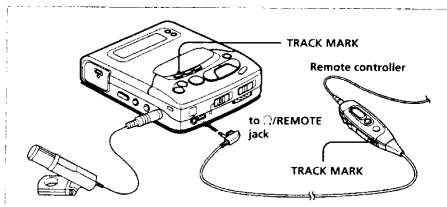

#### While recording, press TRACK MARK.

The record indicator flashes and a short beep sounds in the headphones. The track number will increase by one.

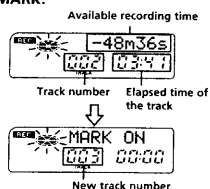


### Searching for the marked point

After recording, press I◀◀/▶▶I to find the points where you inserted track marks.




## Playing an MD

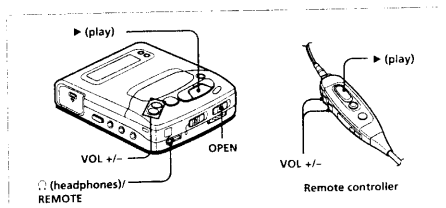

### 1 Connect the headphones at (headphones)/REMOTE.

### 2 Insert an MD.


Slide OPEN to open the lid, insert an MD with the label side up and the arrow pointing toward the opening, and close the lid.

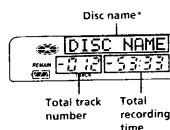

\* No indication appears with MDs that have not been electronically labeled.

### 3 Press ►.

The recorder will play from the beginning of the first track.

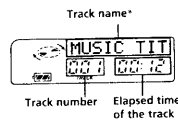

\* No indication appears with MDs that have not been electronically labeled.

### 4 Adjust the volume by pressing VOL +/-.



#### Note

If you cannot increase the volume, the AVLS switch on the remote controller is set to ON. Set the switch to OFF. When you try to increase the volume while the switch is set to ON, the volume indication flashes and you cannot increase the volume to the maximum. (See Useful tips on playing an MD on page 42.)


To	Press	Beep on the headphones (when operating on the remote controller)
pause / release pause	II	..... (continuous short beep)
stop	■	— (one long beep)
search while listening	keep pressing ◀▶ / ▶▶	(none)
quickly search without listening	II (pause) and keep pressing ◀▶ / ▶▶	(none)
find the beginning of the current or preceding tracks (AMS)	slightly press ◀▶	--- (three short beeps)
find the beginning of the next or succeeding tracks (AMS)	slightly press ▶▶	— (two short beeps)
eject the MD	after ■ (stop), slide OPEN and open the lid	(none)

## Playing an MD


### Playing specific tracks

You can find a specific track before playing an MD and start playing from that track. For this operation, only the controls on the recorder can be used.

#### 1 Press ▶▶ or ◀◀ on the recorder to find a specific track.



#### 2 Press ► on the recorder.




#### Notes

- This recorder has a shock-resistant memory. However, if it is subject to continuous vibration, the sound may skip or mute while playing an MD. In this case, use the recorder in a stable place.
- Tracks that are very short, such as a brief narration or introduction, may cause the sound to skip while being played.

**You can resume playing from the point the MD stopped (Resume function).**  
If you stop playing partway and do not eject the MD nor open the lid, the recorder will resume playing from the point where the MD stopped.

## Playing tracks repeatedly

You can play tracks repeatedly in three ways—all repeat, single repeat, and shuffle repeat.



### Press PLAY MODE while the MD is playing.

Each time you press PLAY MODE, the play mode indication changes as follows.



Play mode indication

To play	Indication
all the tracks once (normal play)	(none)
all the tracks repeatedly (all repeat)	↺
a single track repeatedly (single repeat)	↺ 1
all the tracks in random order repeatedly (shuffle repeat)	↺ SHUF


## Useful tips on playing an MD

### Locking the controls (Hold function)

To prevent the buttons from being accidentally operated while you are walking, use the Hold function.

#### Slide HOLD in the direction of the arrow.

On the recorder, slide HOLD to lock the controls of the recorder.  
On the remote controller, slide HOLD to lock the controls of the remote controller.



### Emphasizing the bass (Bass Boost feature)

The Bass Boost feature intensifies low frequency sound for richer bass reproduction.

#### While the MD is playing, press BASS BOOST.

Each time you press BASS BOOST, you can get two stages of the Bass Boost.



Bass Boost indication

To emphasize	Indication
no emphasis (normal play)	(none)
slightly	BASS ■
strongly	BASS ■■

#### Note

If the volume is too high, the sound may crack or distort. If this happens, turn down the volume.

### Useful tips on playing an MD


#### Adjusting the sound to an appropriate level (AVLS function)

The AVLS (Automatic Volume Limiter System) function allows you to limit the maximum volume of the recorder without degrading the sound quality.

Hearing experts advise against continuous, loud and extended play. Use the AVLS function to avoid excessive pressure to your ears.

#### Set AVLS on the remote controller to ON.

The volume is kept at a moderate level without degradation of the sound quality, even if you attempt to turn the volume up higher.




#### Displaying disc and track names


If you are playing a premastered or recorded MD that has been electronically labeled, you can display information on the MD while it is playing.

#### While the MD is playing, press DISPLAY.

Each time you press the button, the display changes as follows.

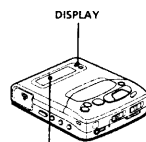

Display window


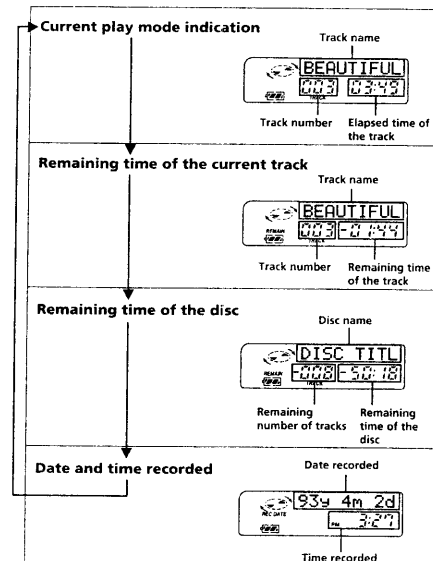


#### Notes

- No character information appears with MDs that have not been electronically labeled.
- This recorder does not label or copy any character information such as disc names and track names.


## Track marking a recording

You can add track marks so that you can quickly find and play from the marked position.  
The track numbers will increase as follows.

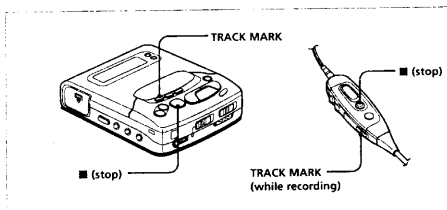

**While playing or recording, press TRACK MARK on the recorder at the point you want to mark.**

The TRACK MARK button on the remote controller can be used only while recording. If you want to add more marks, press the button at the desired points.

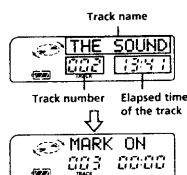

## To erase the track mark

Refer to the next section, *Erasing a track mark*, page 46.

### Notes

- When you press ■ after adding track marks, "Toc Edit" flashes and the recorder starts writing the new data to the MD. Do not move or jog the recorder while "Toc Edit" is flashing in the display.
- You cannot add track marks if the MD has the tab open for record-protection. Before adding track marks, close the tab on the side of the MD.

### ☞ Date and time recorded

The recorder adds the elapsed time of the previous track to the date and time it was recorded. These will be stamped on the new track.


### ☞ Maximum number of tracks

On this recorder 254 tracks can be recorded.


## Track marking a recording

### Erasing a track mark

When a track mark is erased, the two tracks preceding and following the mark will be combined. The track numbers will change as follows.



To erase a track mark, use TRACK MARK on the recorder. You cannot erase a track mark with TRACK MARK on the remote controller.

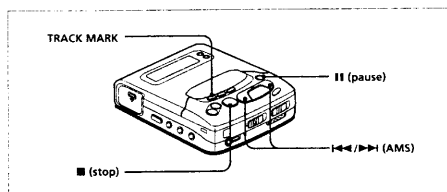

**1 While the MD is playing, press II to pause.**

## 2 Find the track mark you want to erase by pressing I<< or I>> slightly.

For example, if you want to erase the third track mark, find the beginning of the third track. "00:00" flashes in the display.



## 3 Press TRACK MARK on the recorder to erase the mark.

The track mark is erased and the two tracks are combined. The pause is released and the recorder starts to play from the point you erased the track mark. If you want to erase more marks, repeat steps 1, 2 and 3.



### To add a track mark again

Search for the position and add a track mark again. Refer to the previous section, *Track marking a recording*.

### Notes

- When you press ■ after erasing track marks, "Toc Edit" flashes and the recorder starts writing the new data to the MD. Do not move or jog the recorder while "Toc Edit" is flashing in the display.
- You cannot erase track marks if the MD has the tab open for record-protection. Before erasing track marks, close the tab on the side of the MD.
- If you have recorded or erased many times on the same disc, the data of a single track may be scattered throughout the disc.


When the data is scattered in groups of less than 8 seconds long, the recorder will not be able to combine the tracks. In this case you cannot erase track marks. This is one of the features of the MD system, not a malfunction.

### ☞ Date and time recorded

The combined track whose mark has been erased is recorded with the date and time of the beginning of the first of the two combined tracks.

## Erasing recordings

You can quickly erase a recorded track. **Note that once a recording has been erased, you cannot retrieve it.**

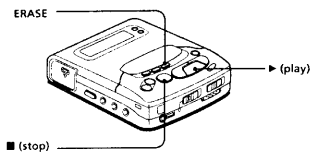

### 1 Play the track you want to erase.

Check the tracks preceding and succeeding the track you want to erase, and make sure it is the right one.

### 2 Press ERASE.

"Erase OK?" and "PushErase" appear in the display alternately, and the recorder enters pause mode. Check the track number again in the display. To cancel erasing, press ■.

### 3 Press ERASE again to erase the track.

The track is erased from the MD and the remaining tracks are renumbered. The recorder then starts to play the succeeding track. If you have erased the last track of the MD, the recorder pauses at the end of the preceding track. To erase more tracks, repeat steps 1, 2, and 3.


#### Notes

- When you press ■ after erasing recordings, "Toc Edit" flashes and the recorder starts writing the new data to the MD. Do not move or jog the recorder while "Toc Edit" is flashing in the display.
- You cannot erase tracks if the MD has the tab open for record-protection. Before erasing tracks, close the tab on the side of the MD.

48 | Editing recorded tracks

## Connecting to a stereo system

### Hooking up an amplifier or a tape player

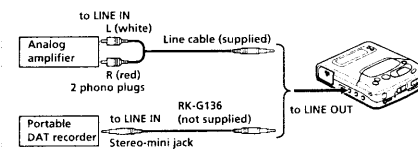

**Connect the line cable (supplied, or RK-G136, not supplied) to the LINE OUT jack of the recorder and the LINE IN jack of your stereo system.**

The output is analog.


Playing an MD with other equipment | 49

## Using in a car

### Hooking up a car stereo system

You can listen to MDs with your car stereo system using the following equipment.

– Car Mount Kit CPM-MZR2K (not supplied, contents: Car mount unit, Car connecting pack, Car battery cord)  
Refer to the operating manual of the equipment for more details.

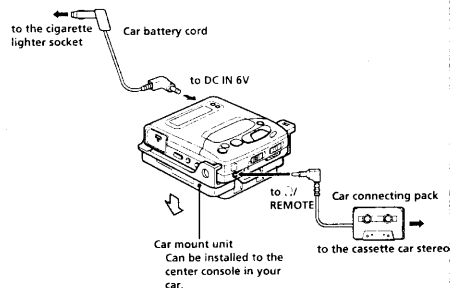

#### Note

Do not put the recorder on a dashboard or leave it in a car parked in direct sunlight since the temperature may rise excessively.

50 | Playing an MD with other equipment

## Error messages

If the recorder cannot carry out an operation, one of the following error messages may flash in the display window.

This message will flash	If
BLANKDISC	you try to play an MD with no recording on it.
BUSY	you try to operate the recorder while it is accessing the recorded data. Wait until the message goes out (in rare cases, it may take 2-3 minutes).
CANNOT	<ul style="list-style-type: none"> <li>• you try to record over or edit a track which has been track protected.*</li> <li>• you try to erase a track mark at the beginning of the first track.</li> <li>• you try to erase a track mark to combine tracks the recorder cannot combine.**</li> </ul>
DISC ERR	the recorder cannot read the MD (it is scratched or dirty). Reinsert the MD. If the same message still appears, replace the MD.
DISC FULL	there is no more space on the MD (less than 12 seconds available).
ERR STOP	<ul style="list-style-type: none"> <li>• there is a malfunction while you are recording.</li> <li>• the recorder cannot read the recorded data on the MD. Replace the MD.</li> </ul>
HOLD	• you try to operate the recorder with the HOLD switch slid in the direction of the arrow.
LOW BATT	• the rechargeable battery or dry batteries are weak. Charge the rechargeable battery or replace the dry batteries.
NO COPY	• you try to make a copy from an MD that is protected by the Serial Copy Management System. You cannot make copies from a digitally connected source which was itself recorded using the digital connection. Use the analog connection instead.
NO DISC	• you try to play or record with no MD in the recorder.

56 | For your information

This message will flash	If
NO SIGNAL	<ul style="list-style-type: none"> <li>the recorder cannot detect digital input signals. Make sure that the source is connected firmly and it has the same sampling frequency as the recorder (44.1 kHz).</li> </ul>
PB DISC	<ul style="list-style-type: none"> <li>you try to record or edit on a pre-mastered MD (PB means playback.)</li> </ul>
PROTECTED	<ul style="list-style-type: none"> <li>you try to record or edit on a MD with the tab in the record-protect position.</li> </ul>
TEMP OVER	<ul style="list-style-type: none"> <li>heat has built up in the recorder. Leave the recorder to cool down.</li> </ul>
TRK FULL	<ul style="list-style-type: none"> <li>there is no more space for new data when you are recording or editing the MD. The MD cannot be edited nor recorded any further.</li> </ul>

\* Track-protected MDs — Some MD recorders will let you protect individual tracks from being recorded over. This recorder, however, does not offer this feature.

\*\* If you have recorded or erased many times on the same MD, the data of a single track may be scattered throughout the MD. When the data is scattered in groups of less than 8 seconds long, the recorder will not be able to combine the tracks.

For your information | 57

## What is the MD?

### How MiniDiscs work

MiniDiscs (MD) come in two types: premastered (prerecorded) and recordable (blank). Premastered MDs, recorded at music studios, can be played back almost endlessly. However, they cannot be recorded on or over like cassette tapes. To record, you must use a "recordable MD".

#### Premastered MDs

Premastered MDs are recorded and played like regular CDs. A laser beam focuses on the pits in the surface of the MD and reflects the information back to the lens in the recorder. The recorder then decodes the signals and plays them back as music.


#### Recordable MDs

Recordable MDs, which use magneto-optical (MO) technology, can be recorded again and again. The laser inside the recorder applies heat to the MD, demagnetizing the magnetic layer of the MD. The recorder then applies a magnetic field to the layer. This magnetic field corresponds exactly to the audio signals generated by the connected source. (The north and south polarities equate to digital "1" and "0".) The demagnetized MD adopts the polarity of the magnetic field, resulting in a recorded MD.

### How the MiniDisc got so small

The 2.5-inch MiniDisc, encased in a plastic cartridge that looks like a 3.5-inch diskette (see illustration below), uses a new digital audio compression technology called ATRAC (Adaptive TRansform Acoustic Coding). To store more sound in less space, ATRAC extracts and encodes only those frequency components actually audible to the human ear.

#### Parts making up a MiniDisc

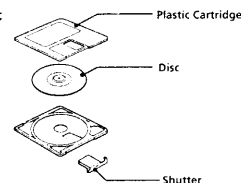

60 | For your information

### Quick Random Access

Like CDs, MDs offer instantaneous random access to the beginning of any music track. Premastered MDs are recorded with location addresses corresponding to each music selection.

### Shock-Resistant Memory


One major drawback of optical read systems is that they can skip or mute when subject to vibration. The MD system resolves this problem by using a buffer memory that stores audio data.

For your information | 61


## SECTION 3 DISASSEMBLY

**Note :** Follow the disassembly procedure in the numerical order given.


### 3-1. LID COVER BLOCK

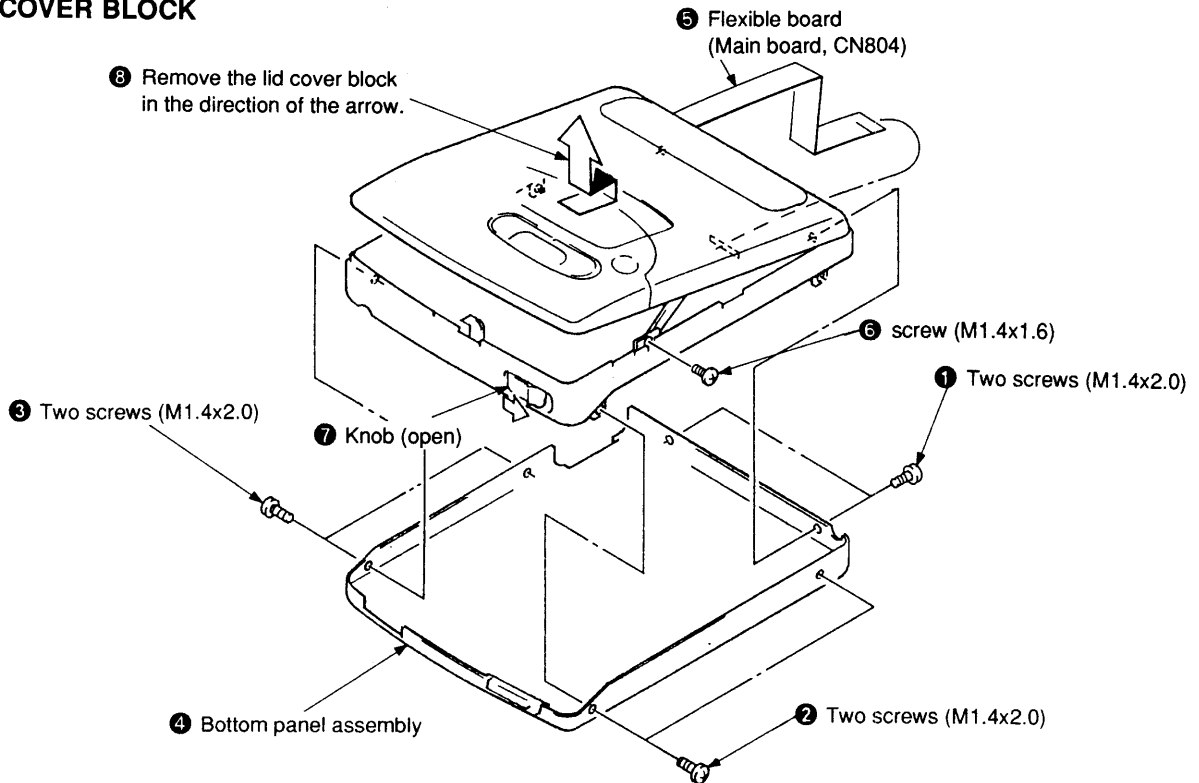


### 3-2. MAIN BOARD, SPINDLE MOTOR AND LOADING MOTOR

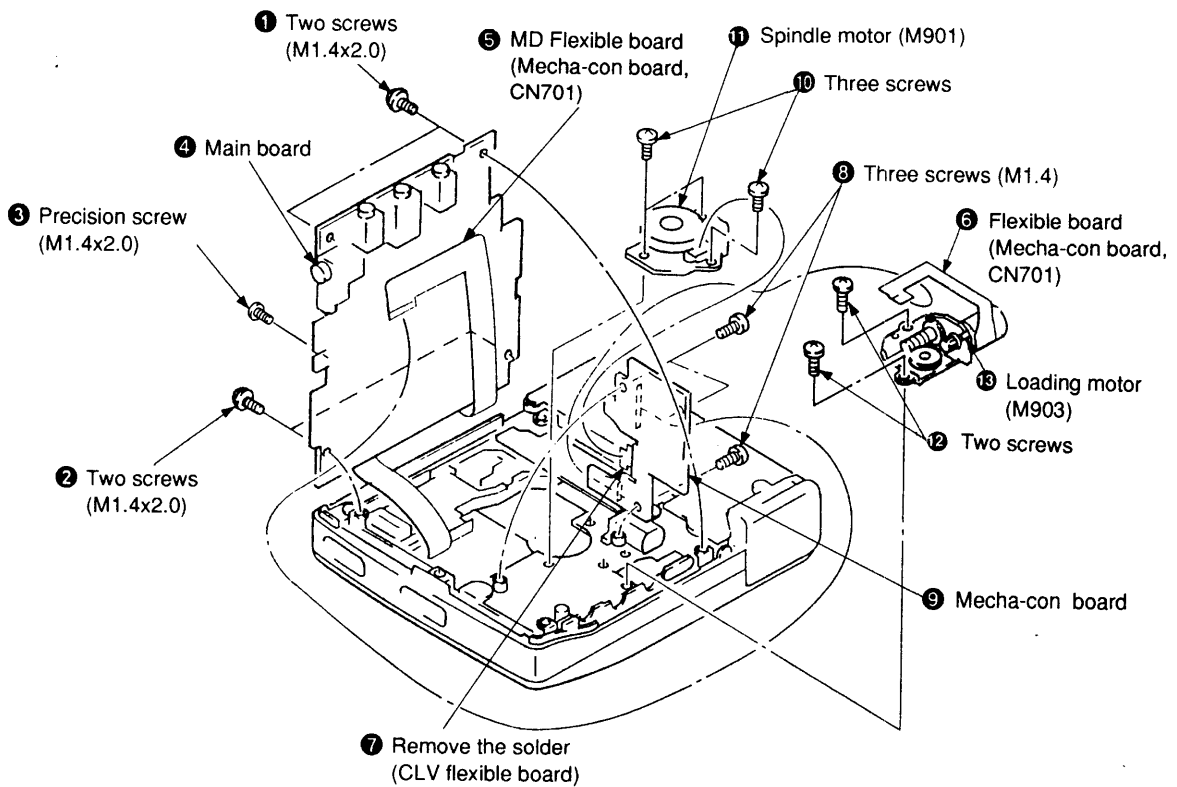

### 3-3. MECHANISM DECK (MT-MZR2-109)

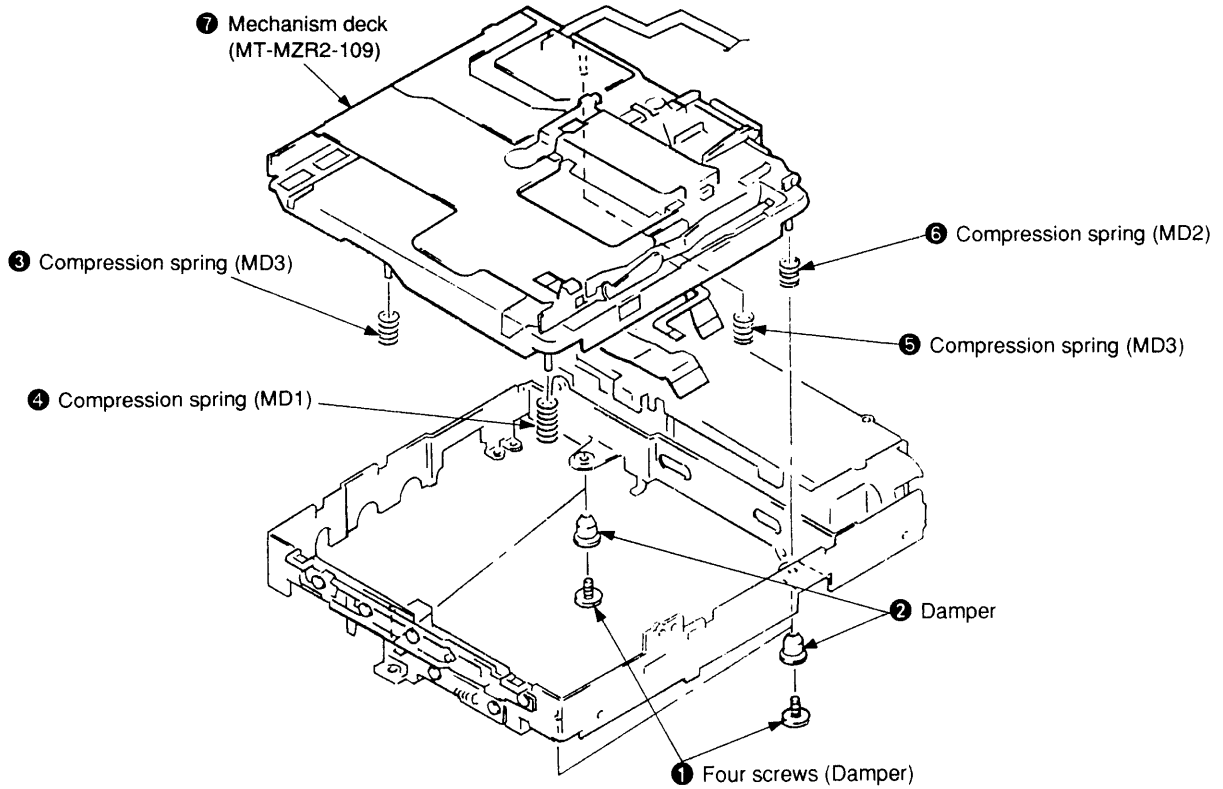

### 3-4. SLED MOTOR AND OPTICAL PICK-UP BLOCK (KSM-190A)

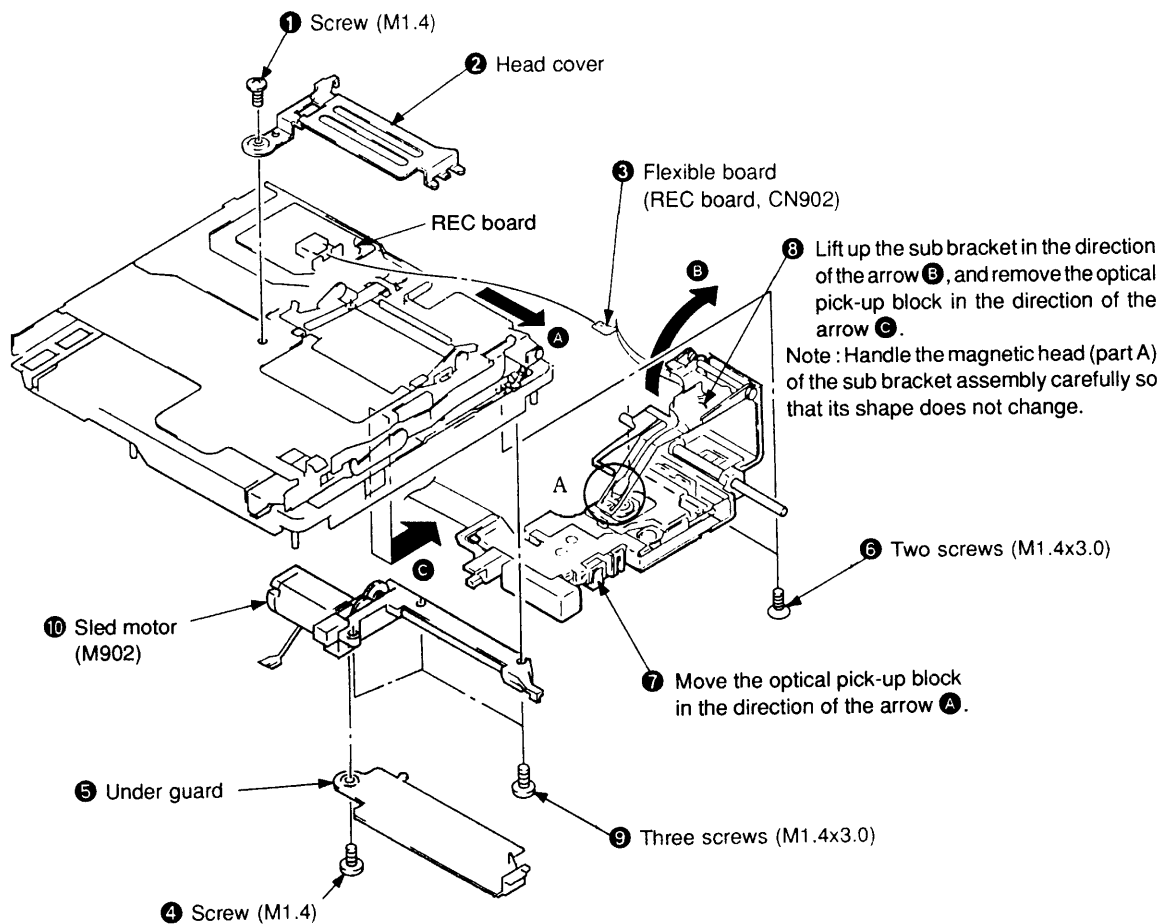

## SECTION 4

### TEST MODE

#### OUTLINE

This unit uses an EVR (electric variable resistor) instead of the conventional semi-fixed resistor as its adjusting device. The EVR is controlled by the main microprocessor (IC805). The main microprocessor reads the data written in the EEPROM (IC804) and the EVR D-A converts this data to produce the adjusting voltage. Therefore, when adjusting this unit, this adjustment data written in the EEPROM must be rewritten. It can be rewritten by setting the unit into the test mode.

#### SETTING THE TEST MODE

Method 1 : Short-circuit the soldering bridge of JP801 (TEST) of the main board (connect Pin ⑧ of IC803 to GND) and supply the power. (If the test mode is not set, press the RESET switch at the bottom of the unit or turn on and off the power four to five times.)

Method 2 : Set the HOLD switch of the unit to "HOLD" and supply the power while pressing the ► key and ■ key of this unit and ■ key of the headphone remote controller.


#### RELEASING THE TEST MODE

When set using method 1 : Turn off the power and open the soldering bridge of JP801 (TEST) of the main board.

When set using method 2 : Turn off the power.

#### TEST MODE OPERATIONS

When the test mode is set, the LCD will display the following.

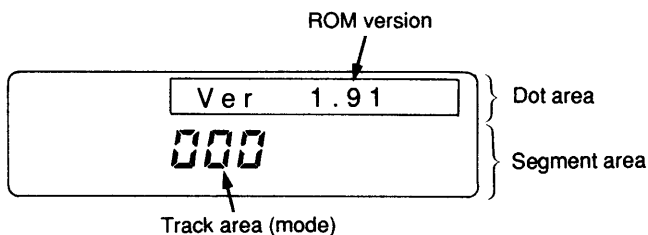

- Dot area : Repeats the following.  
→ ROM version→All light up→All go off→
- Segment area:Repeats the following.  
→Mode 000→All light up→All go off→
- While the ■ key is pressed, the display will be preserved and therefore can be checked.
- As a 1 kHz, 0 dB signal will be output from the line output and headphone output, the audio system can be checked.

#### TEST MODE STRUCTURE


The test mode of this unit is made up of the following four modes.

- Servo mode (0XX displayed at mode)
- Audio mode (1XX displayed at mode)
- Mechanism mode (2XX displayed at mode)
- Power mode (3XX displayed at mode)

#### SERVO MODE


- When the test mode is set and the mode displayed is set to 000 using the VOL +, - key, the servo mode will be set and displayed as "Test Mode Operations".
- When the ►► or ◀◀ key is pressed, the optical pick-up will move to the external or internal periphery.
- To set other modes, press the VOL +, - key.

##### • Structure of Servo Mode

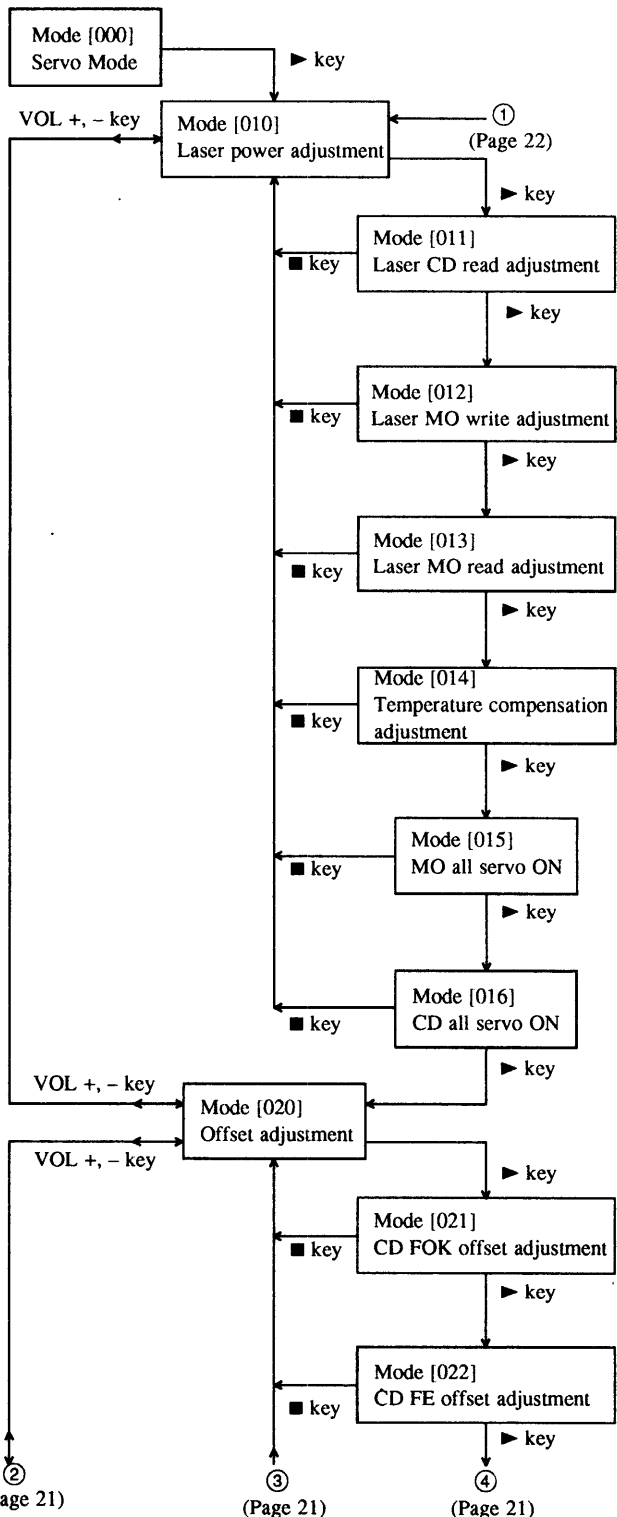




(Page 20)

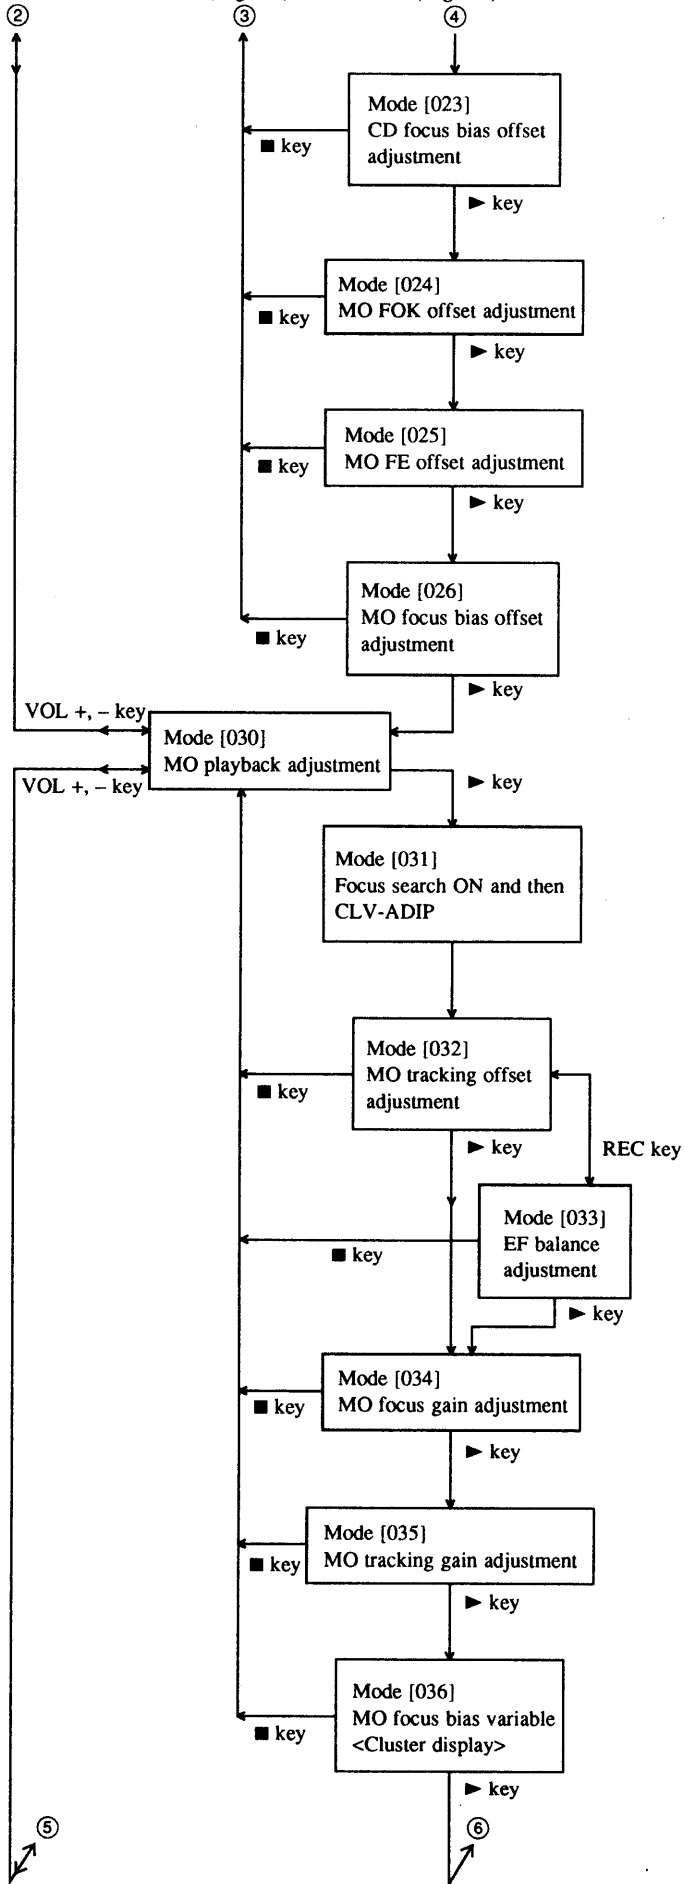


(Page 20)

(Page 20)

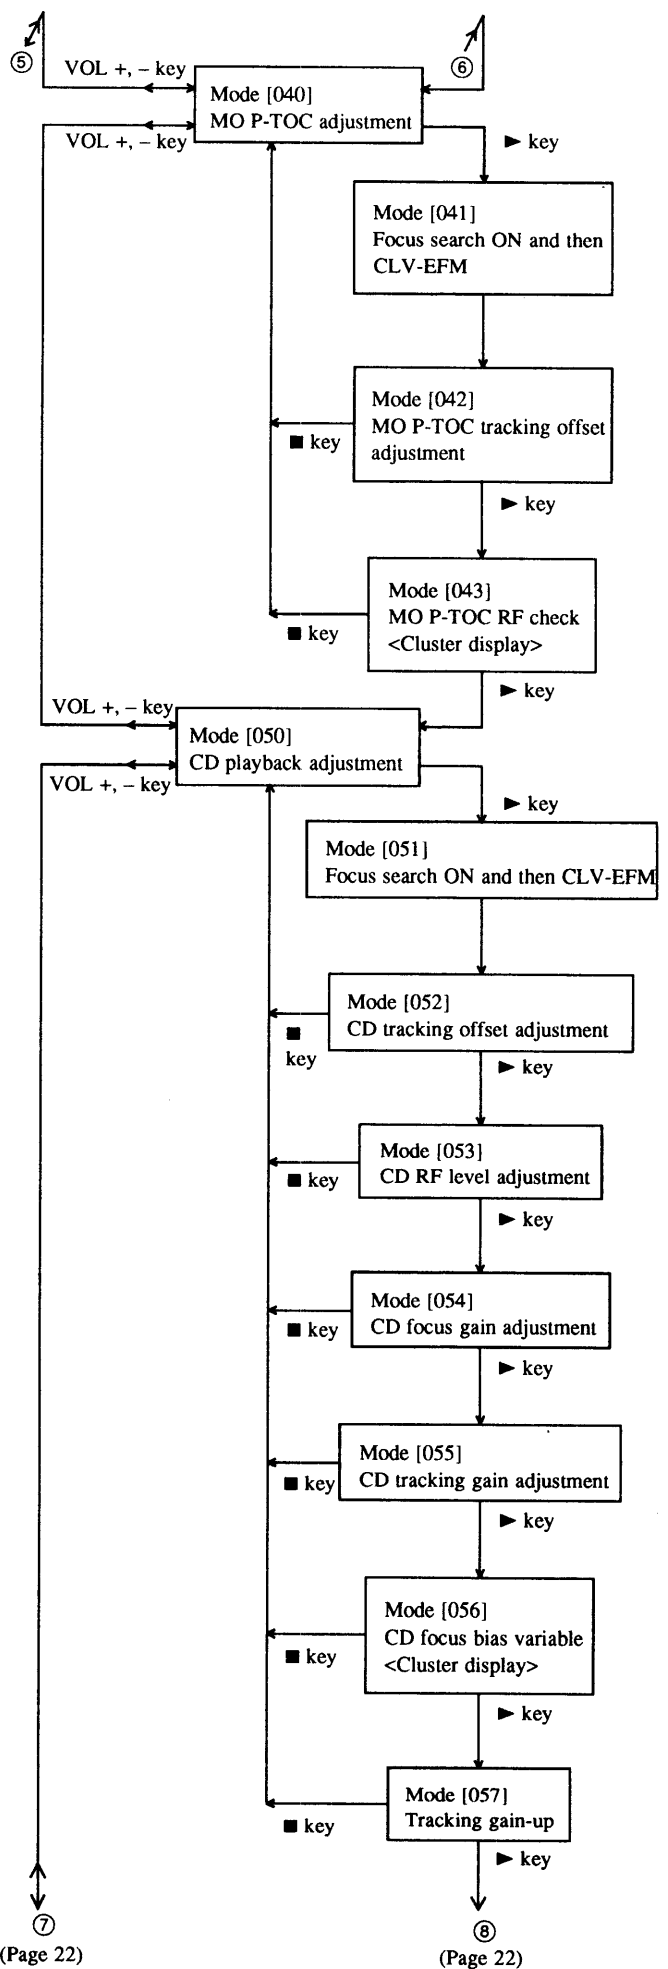

(Page 22)


(Page 22)

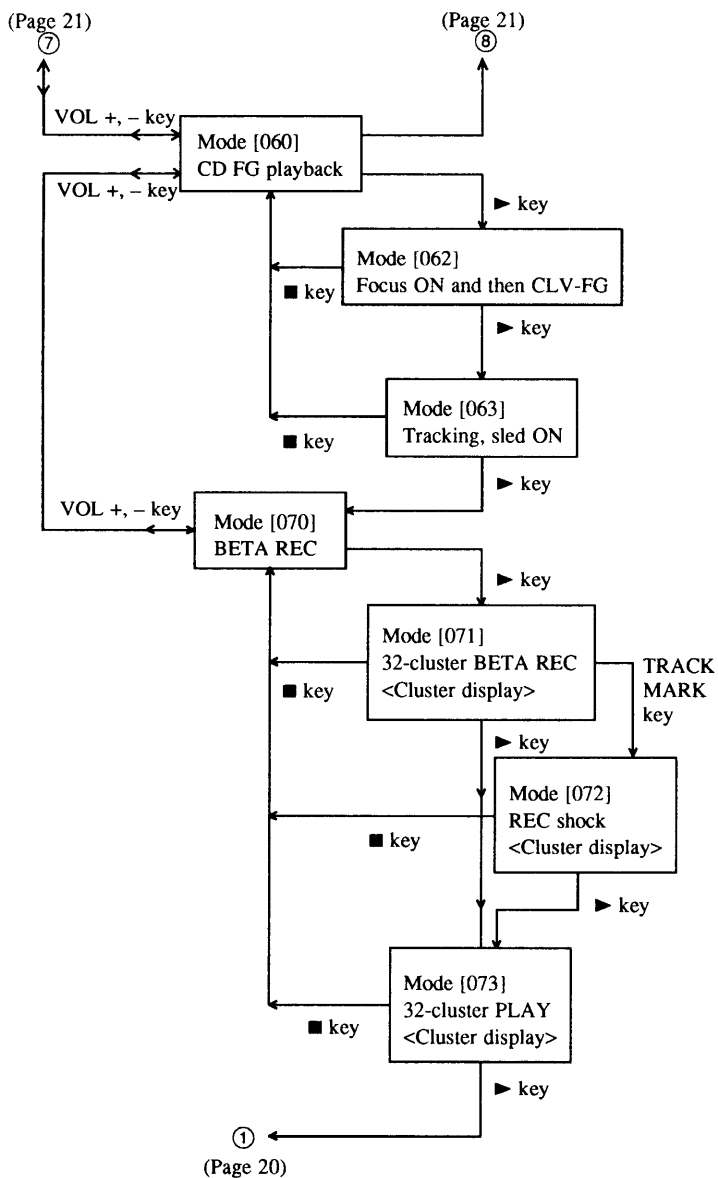

### • Adjusting Method


1. Press the VOL +, - key and ► key, and set the adjustment mode.

(The values written in the EEPROM will be displayed blinking.)

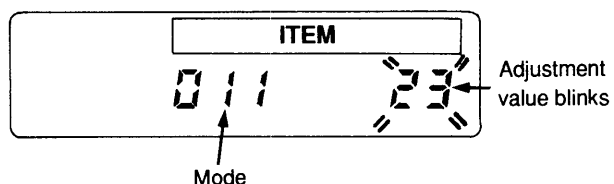


2. Press the VOL +, - key and change the adjustment value.

(The adjustment value changes and blinks.)

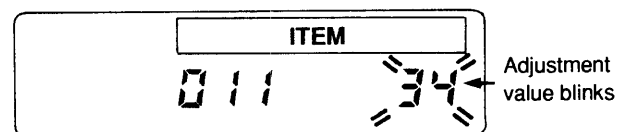


3. Press the ■ key. The adjustment data written in the EEPROM will be rewritten.

(The adjustment value lights up.)

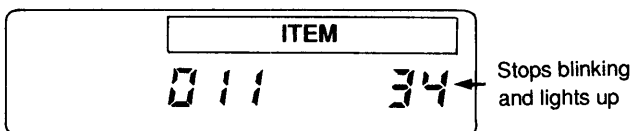


**Note :** The adjustment data will not be rewritten if the ■ key is not pressed and the original data will remain.

4. Press the VOL +, - key again and set the adjustment mode again.

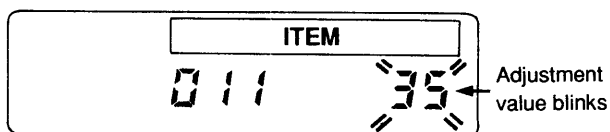


## • Cluster Display

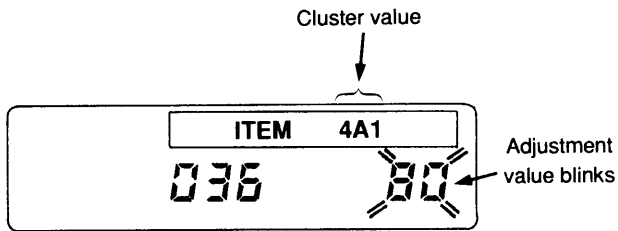


Mode No.	Mode	Dot Area Display
036	MO playback focus bias variable	MO _ ALL<Cluster Value>
043	MO P-TOC RF check	CDL _ AL <Cluster Value>
056	CD playback focus bias variable	CD _ ALL <Cluster Value>
071	32-cluster BETA REC	BETA _ R <Cluster Value>
072	REC shock	RSHOCK <Cluster Value>
073	32-cluster PLAY	RCHECK <Cluster Value>

## • Continuous Recording


1. Set the BETA REC mode (mode 070).

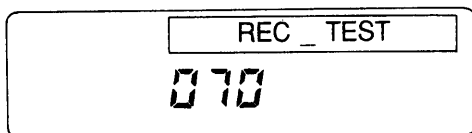


2. Press the ► key. Focus search will turn on, servo all will turn on, 32-cluster access will start, and continuous recording by laser MO writing will start.

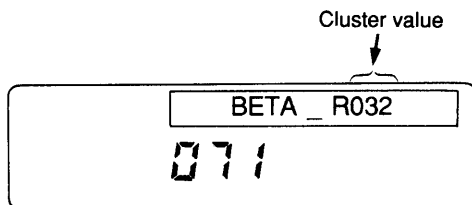

3. Press the TRACK MARK key. REC shock will start and a track jump to the external periphery will occur.

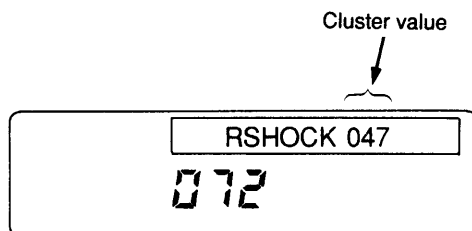

4. Press the ► key. Laser MO reading will start and after the head of the 32-cluster is accessed, PLAY will start.

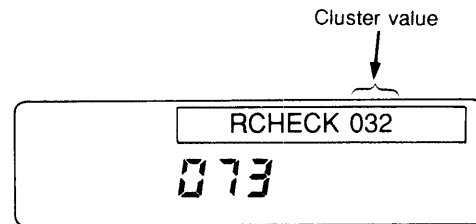


5. Press the ■ key. The BETA REC mode will be set again.

## AUDIO MODE

- To set the audio mode, set the test mode, and set the mode display to 100 using the VOL +, – key.
- To set other modes, press the VOL +, – key.

### Audio Mode Structure

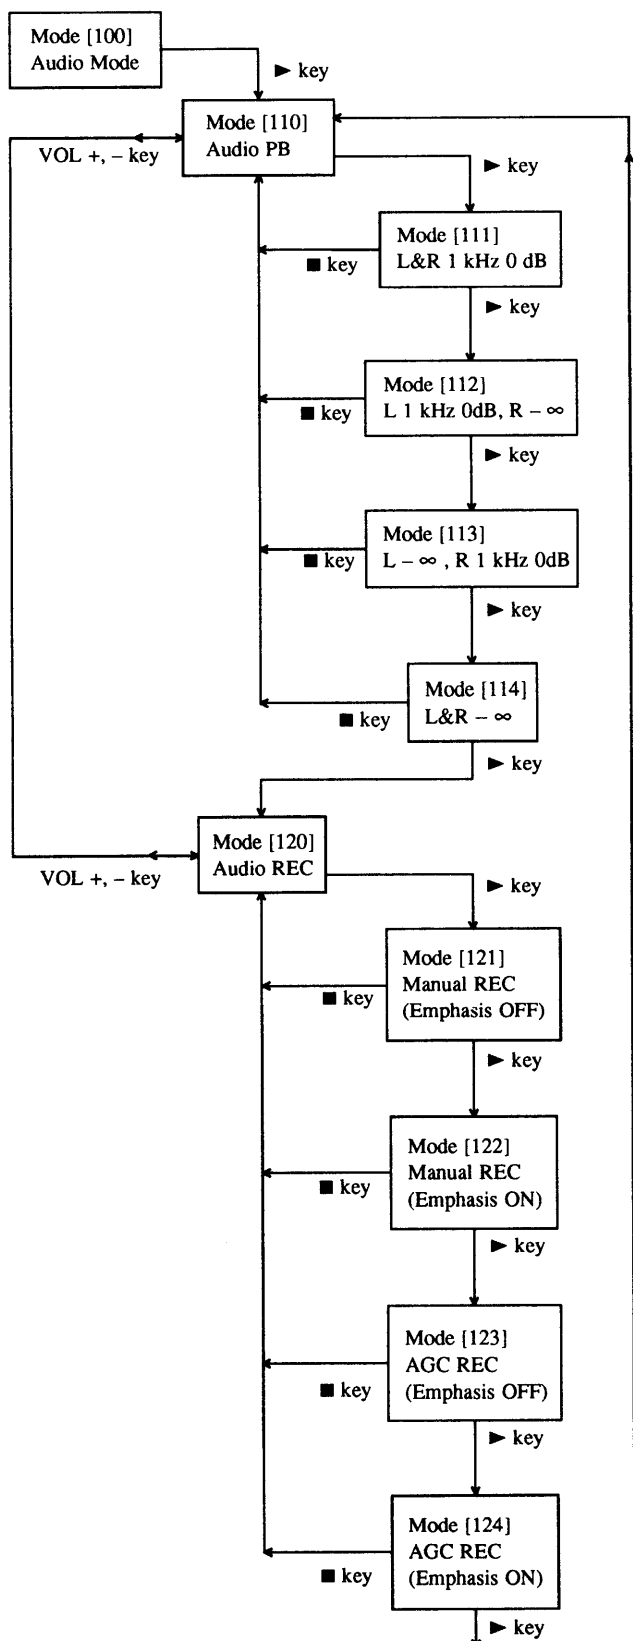


- When the ■ key is pressed when the mode number is [111], [112], or [113], the buzzer will sound for approximately 1 second. (When the buzzer sounds, it indicates that the Lch and Rch can be muted. The channels can also be switched even if the ■ key is not pressed.)
- When the VOL +, – key is pressed when the mode number is [111], [112], or [113], the headphones output volume will move up and down. When the ◀◀ or ▶▶ key is pressed, the headphones output volume will become minimum and maximum.
- When the VOL +, – key is pressed when the mode number is [121] or [122], the recording level will move up and down. When the ◀◀ or ▶▶ key is pressed, the recording level will become minimum and maximum.
- When the VOL +, – key is pressed when the mode number is [123] or [124], the headphones output volume will move up and down. When the ◀◀ or ▶▶ key is pressed, the recording level will become minimum and maximum.
- When the mode number is [121], [122], [123], and [124], the recording LED will be lit.

## MECHANISM MODE

- To set the mechanism mode, set the test mode, and set the mode display to 200 using the VOL +, – key.
- When the ►► or ◀◀ key is pressed, the optical pick-up will move to the external or internal periphery.
- To set other modes, press the VOL +, – key.


### • Mechanism Mode Structure

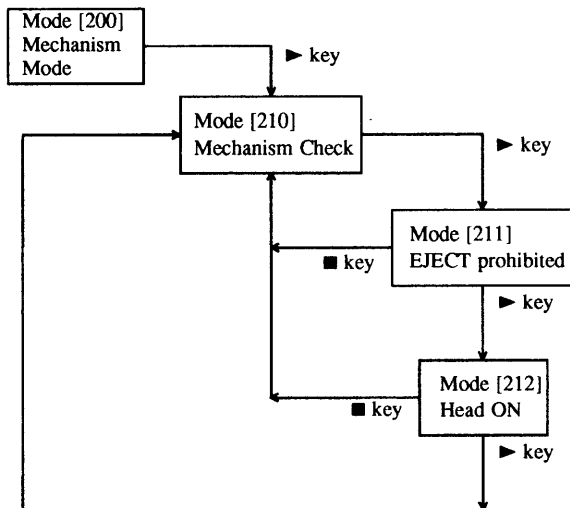

## POWER MODE

- To set the power mode, set the test mode, and set the mode display to 300 using the VOL +, – key.
- To set other modes, press the VOL +, – key.

### • Power Mode Structure

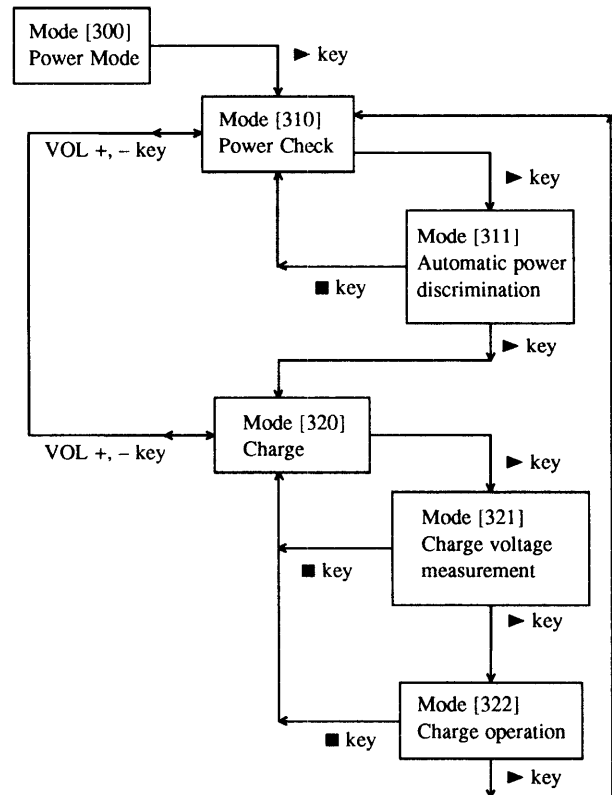


## TABLE OF DOT AREA DISPLAYS

Mode	Dot Area Display	Mode	Dot Area Display	Mode	Dot Area Display	Mode	Dot Area Display
000	ROM VERSION	036	MO_ALL <Cluster>	100	AUDIO	200	MECHANIZM
010	LD_POWER	040	CDL_TEST	110	AUDIO_PB	210	MECHATEST
011	LD_CD_RD	041	CDL_FOCUS	111	L/R=1K0dB	211	EJECT
012	LD_MO_WR	042	CDL_TRKOF	112	L=1K0dB	212	HEAD_ON
013	LD_MO_RD	043	CDL_AL <Cluster>	113	R=1K0dB		
014	TEMP_MO_W	050	CD_TEST	114	INFI_ZERO	300	PWR_TEST
015	ALLON_MOR	051	CD_FOCUS	120	AUDIO_REC	310	PWR_SUPLY
016	ALLON_CDR	052	CD_TRKOFs	121	DEMP_LINA	311	LI_ION
020	OFFSET	053	LD_CD_RD		DEMP_OPTA		AM3
021	CD_FOKOFS	054	CD_FCS_GA		DEMP_MICA		DC_IN
022	CD_FEOFS	055	CD_TRK_GA	122	LINE_REC	320	CHG_TEST
023	CD_FCBIAS	056	CD_ALL <Cluster>		OPT_REC	321	CHG_AUTO
024	MO_FOKOFS	057	CD_TG_UP		MIC_REC	322	CHG_ON
025	MO_FEOFS	060	CDFG_TEST	123	DEMP_LINM		
026	MO_FCBIAS	062	CDFG_FON		DEMP_OPTM		
030	MO_TEST	063	CDFG_AL1		DEMP_MICM		
031	MO_FOCUS	070	REC_TEST	124	LINE_MANU		
032	MO_TRKOFs	071	BETA_R <Cluster>		OPT_MANU		
033	MOW_EFBA	072	RSHOCK <Cluster>		MIC_MANU		
034	MO_FCS_GA	073	RCHECK <Cluster>				
035	MO_TRK_GA						

## OTHER DISPLAYS

- During the test mode, the displays shown for the detection switch of the disc are as follows.

	Segment Area Display
Disc low reflectance rate detection	
Disc present/absent detection	SHUF
Non-erasable switch detection	1
OPEN/CLOSE switch detection	OF*

\* : Displayed at the dot area when OPEN in mode number [010].

## SECTION 5


### ELECTRICAL ADJUSTMENTS

#### LASER DIODE EMISSION CHECKING PRECAUTIONS

When checking the laser diode emission during adjustments, never check it from directly above as this can be blinding.

#### OPTICAL PICK-UP BLOCK (KMS-190A) USING PRECAUTIONS

As the laser diode in the optical pick-up is easily damaged by static electricity, make a solder bridge on the laser tap of the flexible board when using it. Also carry out thorough anti-static electricity measures. Handle the flexible board carefully as it damages easily.

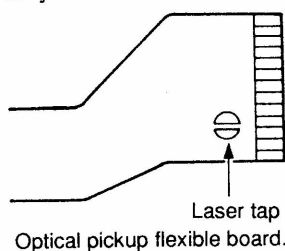


#### ADJUSTING PRECAUTIONS

- 1) To perform adjustments, set the test mode.
- 2) After completing adjustments, exit the test mode.
- 3) Use the following jigs and measurement tools.
  - CD test disc TDYS-1 (Parts No : 4-963-646-01)
  - SONY MO disc available on the market.
  - LPM-8001 laser power meter (Parts No. : J-2501-046-A)
  - MDPE-1 error rate counter (Parts No. : J-2501-047-A)
  - Oscilloscope (Above 40 MHz band. Measure after calibrating the probe.)
  - Digital voltmeter
  - Thermometer
- 4) Unless specified otherwise, supply a power of DC6V to the DC IN 6V jack.
- 5) Positions of switch and knob
  - HOLD switch...OFF(Opposite )
  - AVLS switch (remote controller)...OFF

#### LASER POWER ADJUSTMENT

Connection :

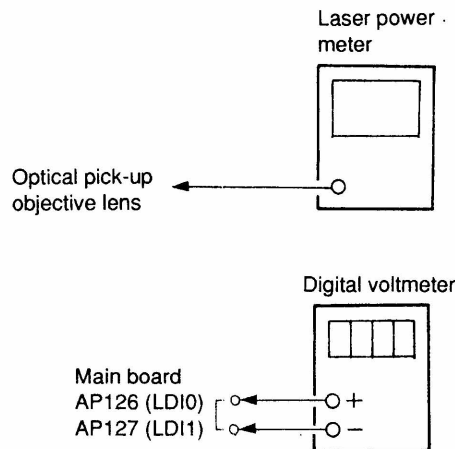


#### Adjusting Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the key and set the laser power adjustment mode (Mode display : 010).
3. Press the key and move the optical pick-up to the inner-most periphery.
4. Open the lid and set the laser power meter above the optical pick-up objective lens.
5. Press the key and set the laser CD read adjustment mode (Mode display : 011).
6. Check that the laser power meter reads  $0.4 \pm 0.1$  mW.
7. Press the key and set the laser MO write adjustment mode (Mode display : 012).
8. Press the VOL +, - key so that the laser power meter reads  $6.8 \pm 0.05$  mW.
9. Press the key and fix the adjustment data.
10. Check that the voltage between AP126 (LDI0) and AP127 (LDI1) is below 600 mV.
11. Press the key and set the laser MO read adjustment mode (Mode display : 013).
12. Press the VOL +, - key so that the laser power meter reads  $0.85 \pm 0.05$  mW.
13. Press the key and fix the adjustment data.
14. Check that the voltage between AP126 (LDI0) and AP127 (LDI1) is below 350 mV.
15. Press the key and set the temperature compensation adjustment mode (Mode display : 014).
16. Measure the temperature of the periphery of the main board using the thermometer.
17. Press the VOL +, - key so that the value measured shown at the LCD segment becomes  $\pm 1$ .
18. Press the key and fix the adjustment data.
19. Release the test mode.

## OFFSET ADJUSTMENT

Connection :

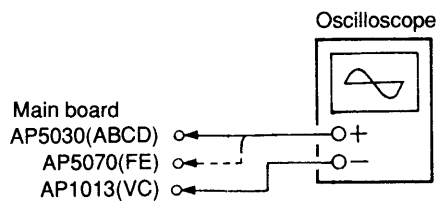


### Adjusting Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL + key, and set the offset adjustment mode (Mode display : 020).
3. Press the ► key and set the CD FOK offset adjustment mode (Mode display : 021).
4. Press the VOL +, – key so that the voltage between AP5030 (ABCD) and AP1013 (VC) becomes  $0 \pm 50$  mV.
5. Press the ■ key and fix the adjustment data.
6. Press the ► key and set the CD FE offset adjustment mode (Mode display : 022).
7. Press the VOL +, – key so that the voltage between AP5070 (FE) and AP1013 (VC) becomes  $0 \pm 50$  mV.
8. Press the ■ key and fix the adjustment data.
9. Press the ► key and set the CD focus bias offset adjustment mode (Mode display : 023).
10. Press the VOL +, – key so that the voltage between AP5070 (FE) and AP1013 (VC) becomes  $0 \pm 50$  mV.
11. Press the ■ key and fix the adjustment data.
12. Press the ► key and set the MO FOK offset adjustment mode (Mode display:024).
13. Press the VOL +, – key so that the voltage between AP5030 (ABCD) and AP1013 (VC) becomes  $0 \pm 50$  mV.
14. Press the ■ key and fix the adjustment data.
15. Press the ► key and set the MO FE offset adjustment mode (Mode display : 025).
16. Press the VOL +, – key so that the voltage between AP5070 (FE) and AP1013 (VC) becomes  $0 \pm 50$  mV.
17. Press the ■ key and fix the adjustment data.
18. Press the ► key and set the MO focus bias offset adjustment mode (Mode display : 026).
19. Press the VOL +, – key so that the voltage between AP5070 (FE) and AP1013 (VC) becomes  $150 \pm 50$  mV.
20. Press the ■ key and fix the adjustment data.
21. Release the test mode.

## MO TRAVERSE ADJUSTMENT


Connection :

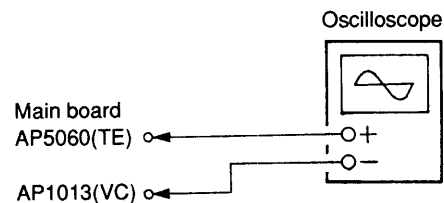

### Adjusting Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL + key (twice), and set the MO playback adjustment mode (Mode display : 030).
3. Press the ►| or |◄ key and move the optical pick-up near the center.
4. Insert a MO disc. (Any available on the market.)
5. Press the ► key and after the focus search turns on, set the CLV ADIP mode (Mode display : 031). (After the focus is turned on, the MO tracking offset adjustment mode is set (Mode display : 032).)
6. Slide the REC key and set the EF balance adjustment mode (Mode display : 033).
7. Press the VOL +, – key so that the traverse waveform of AP5060 (TE) becomes symmetrical in respect to 0V.


(Traverse Waveform)

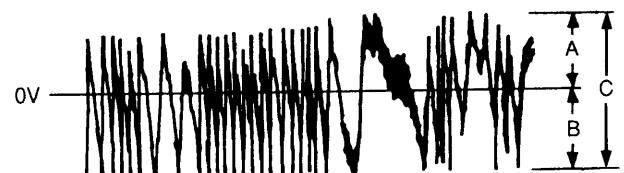

Specification :  $A=B$ ,  $C \geq 2.0$  Vp-p

8. Press the ■ key and fix the adjustment data.
9. Check that this traverse level is above 2.0 Vp-p.
10. Slide the REC key and set the MO tracking offset adjustment mode (Mode display : 032).
11. Press the VOL +, – key so that the traverse waveform of AP5060 (TE) becomes symmetrical in respect to 0V.

(Traverse Waveform)

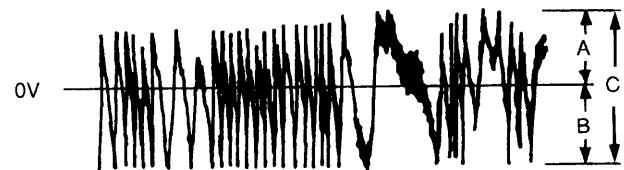

Specification :  $A=B$ ,  $C \geq 2.0$  Vp-p


12. Press the ■ key and fix the adjustment data.
13. Check that this traverse level is above 2.0 Vp-p.
14. Repeat steps 6 to 13 until the specification is satisfied.
15. Press the ■ key.
16. Release the test mode.

Note : The data will be erased if a recorded disc is used for this adjustment.



## MO P-TOC TRAVERSE ADJUSTMENT


### Connection :

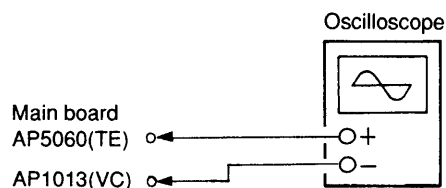

### Adjusting Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL + key (three times), and set the MO P-TOC adjustment mode (Mode display : 040).
3. Insert a MO disc. (Any available on the market.)
4. Press the ► key and after the focus search turns on, set the CLV EFM mode (Mode display : 041). (After the focus is turned on, the MO P-TOC tracking offset adjustment mode is set (Mode display : 042).)
5. Press the VOL +, – key so that the traverse waveform of AP5060 (TE) becomes symmetrical in respect to 0V.

(Traverse Waveform)

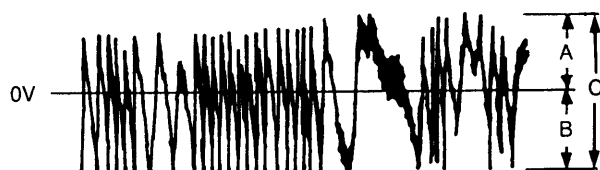


Specification :  $A=B$ ,  $C \geq 2.0$  Vp-p

6. Press the ■ key and fix the adjustment data.
7. Check that this traverse level is above 2.0 Vp-p.
8. Press the ■ key.
9. Release the test mode.

## MO ERROR RATE CHECK

### Connection :

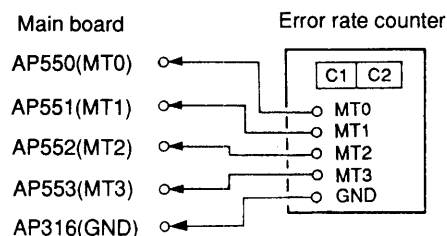


### Checking Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL + key (six times), and set the BETA REC mode (Mode display:070).
3. Press the ► or ◀ key and move the optical pick-up near the center.
4. Insert a MO disc. (Any available on the market.)
5. Press the ► key and set the 32-cluster BETA REC mode (Mode display : 070). (After the focus search is turned on and the 32-cluster is accessed, continuous recording is started.)
6. Record for approximately 10 seconds.
7. Press the ► key and set the 32-cluster PLAY mode (Mode display : 073).
8. Check that the error rate (C1) shown on the error rate counter is below 100 and there is no compensation (C2).
9. Press the ■ key.
10. Release the test mode.

## CD TRAVERSE ADJUSTMENT


### Connection :

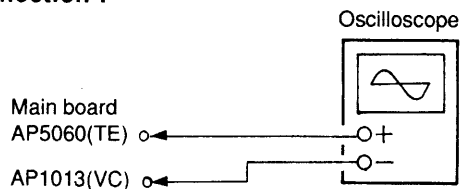

### Adjusting Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL +, – key (four times), and set the CD playback adjustment mode (Mode display : 050).
3. Press the ►► or ◄◄ key and move the optical pick-up near the center.
4. Insert the CD test disc (TDYS-1).
5. Press the ► key and after the focus search turns on, set the CLV EFM mode (Mode display : 051). (After the focus is turned on, the CD tracking offset adjustment mode is set (Mode display : 052).)
6. Press the VOL +, – key so that the traverse waveform of AP5060 (TE) becomes symmetrical in respect to 0V.



(Traverse Waveform)

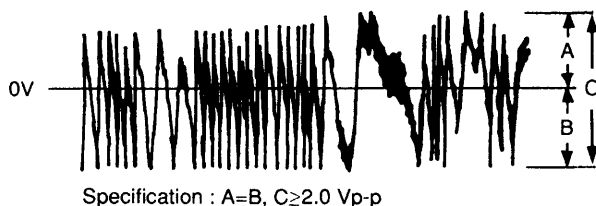

7. Press the ■ key and fix the adjustment data.
8. Check that this traverse level is above 2.0 Vp-p.
9. Press the ■ key.
10. Release the test mode.


## CD RF LEVEL ADJUSTMENT

### Connection :

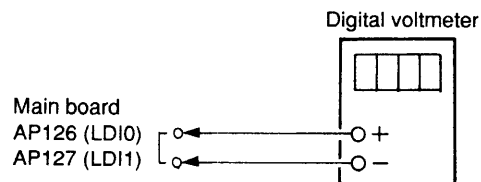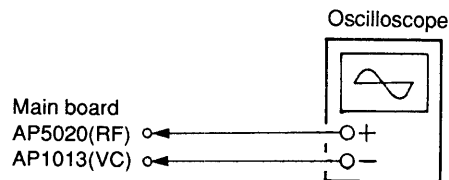

### Adjusting Method :


1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL + key (four times), and set the CD playback adjustment mode (Mode display : 050).
3. Press the ►► or ◄◄ key and move the optical pick-up near the center.
4. Insert the CD test disc (TDYS-1).
5. Press the ► key (twice) and set the CD RF level adjustment mode (Mode display : 053).
6. Press the VOL +, – key so that RF level of AP5020 (RF) becomes  $0.8 \pm 0.1 \text{ Vp-p}$ .

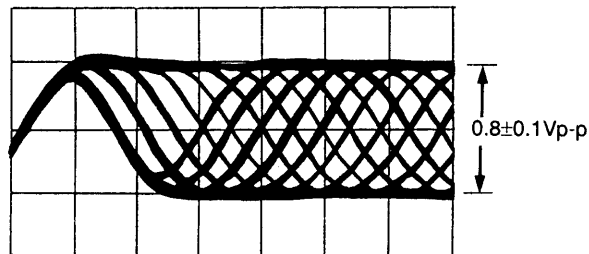

7. Press the ■ key and fix the adjustment data.
8. Check that the voltage between AP126 (LDI0) and AP127 (LDI1) is below 300 mV.
9. Press the ■ key.
10. Release the test mode.

## CD ERROR RATE CHECK


### Connection :

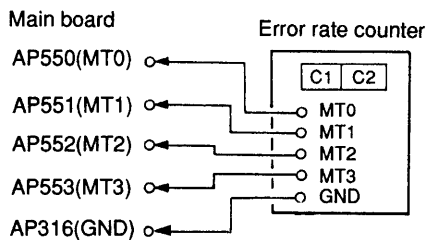

### Checking Method :

1. Set the servo mode of the test mode (Mode display : 000).
2. Press the ► key and VOL + key (four times), and set the CD playback adjustment mode (Mode display : 050).
3. Press the ►► or ◀◀ key and move the optical pick-up near the center.
4. Insert the CD test disc (TDYS-1).
5. Press the ► key (five times) and set the CD focus bias variable mode (Mode display : 056).
6. Check that the error rate (C1) shown on the error rate counter is below 100 and there is no compensation (C2).
7. Press the ■ key.
8. Release the test mode.


## ADJUSTING/CONNECTING POINTS

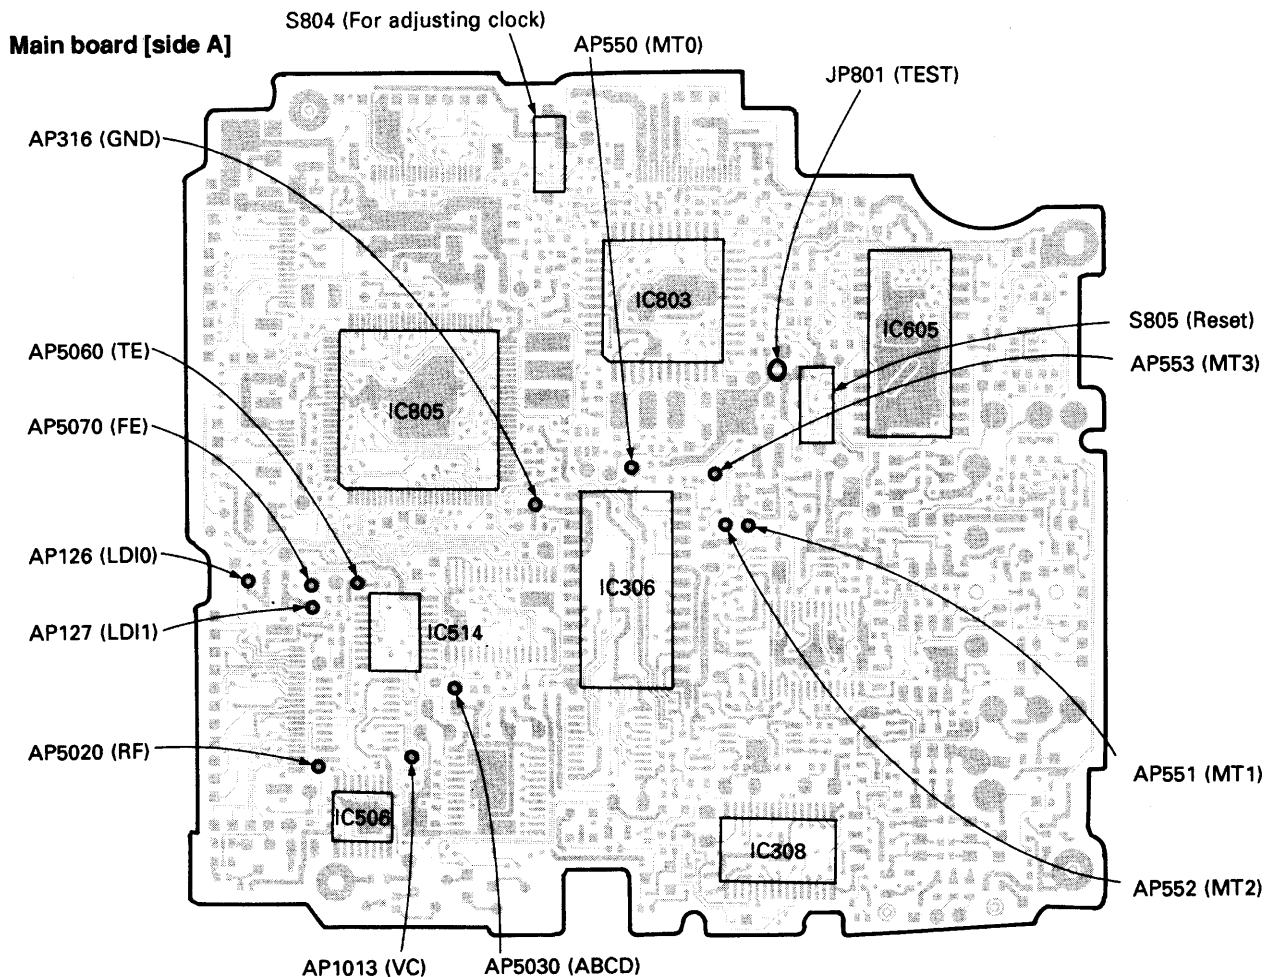


## SECTION 6 DIAGRAMS

### 6-1. SEMICONDUCTOR LEAD LAYOUTS


**AK4502-VS-E1**

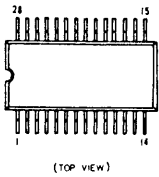


**CXD2525R-1  
CXD2526AR  
CXD2531BR**

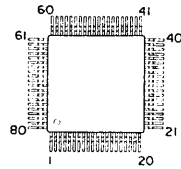


**MB89133A-PFM-170**

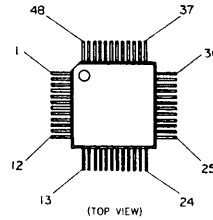


**TK11230MTL  
TK11245AMTL  
TK15210MTL**

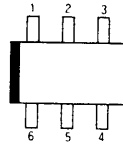


**CXA1380N  
CXA8027N**

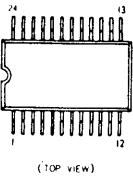


**CXK41V4400ATM-10**

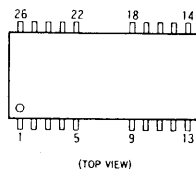


**MPC1718FU**

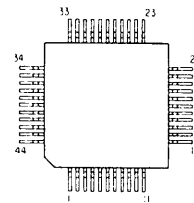


**XC61AN1102MR  
XC61AN1902MR  
XC62AP3102MR  
XC62AP3201MR**

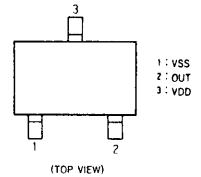


**CXA1497N  
CXD8498N-ELL2000  
LA4805V-TLM**

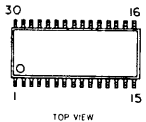

**CXP81848-603R**

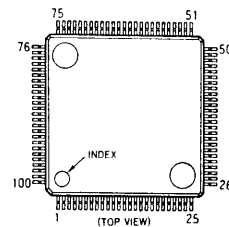


**NJM2107F  
NJM2107F  
S-80725SL-AN  
S-80745SL-A9  
TC4S66F  
TC7S04FU  
TC7S08FU  
TC7S66FU**




**DTA114YE  
DTA144EE  
DTA144EE  
DTA144EU  
DTC114YE  
DTC143TE  
DTC144EE  
DTC144TE  
2SA1774R  
2SC4617TL-QR  
2SD2228-D44D45**




**CXA1602R**

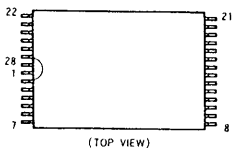


**DS1267-50  
DS1267E-10  
MC74ACT540DTEL  
MPC1730VMEL**

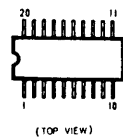


**NJM4580E-D  
RS5RJ3720B  
TC4W53FU  
TLV2362IPW-ELM1500**




**FMG2**

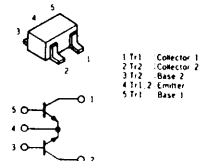


**CXA1861R**

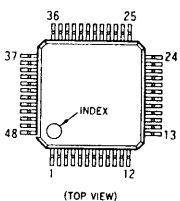


**MB88347ATFV-EF**




**S-2900AUT**

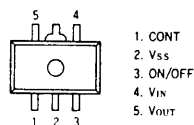


**UMD2  
UMD3  
UMZ1**




**UMH2**




**DAN222  
KV1450  
MA786WK**




**SB01-05CP**




**XN4404**




**F1J6TP**

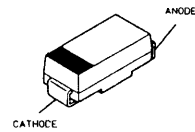


**CL-181UR-C-TS**

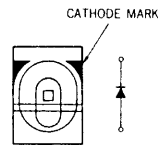


**2SB1308-QR**



**MA2S082  
MA2S111  
MA2S728**



**2SJ305  
2SK2035**




**MA724**


- 1. CATHODE
- 2. CATHODE
- 3. ANODE
- 4. ANODE



**2SK2315TYTR**

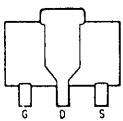


**RB110C**

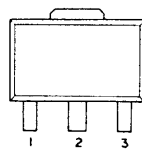

**DA221  
SB007-03Q  
SB007T03Q**



**RB715F  
RB717F**



## 6-2. IC PIN FUNCTIONS

### IC601 EFM/ACIR ENCODER/DECODER (CXD2525R-1)

\* (3) represents state output and (A) represents analog output in I/O column.

Pin No.	Signal Name	I/O	Function
1	MDP	O (3)	Spindle motor servo control
2	MDS	O (3)	Spindle motor servo control
3	EFMI	I	Playback EFM input
4	ASY	O	Playback EFM full swing output
5	LOCK	O	Spindle servo (CLV) lock monitor. "H": Lock
6	VCOO	O	EFM decoder analog PLL oscillation output (196 Fs=8.6436 MHz)
7	VCOI	I	EFM decoder analog PLL oscillation input (196 Fs=8.6436 MHz)
8	TEST1	I	Test pin. Normally GND
9	PDO	O (3)	EFM decoder analog PLL phase comparison output
10	VSS	—	Digital GND
11	EFMO	O	EFM output during recording
12	ATER	O	ADIP CRC flag output. "H": Error
13	CNIN	I	Track jump number count signal input
14	SENS	O (3)	Internal status output for serial bus address
15	SYPL	I	SQSY, ADSY, DQSY polarity switching input. Active high when "H"
16	FILO	O (A)	Digital PLL master PLL filter output
17	FILI	I	Digital PLL master PLL filter input
18	PCO	O (3)	Digital PLL master PLL phase comparison output
19	AVSS	—	Analog GND
20	CLTV	I	Digital PLL master PLL VCO control voltage input
21	AVDD	—	Analog power supply
22	XRST	I	System reset input. Active low
23	REC	I	"L": Decoder, "H": Encoder
24	TEST8	I	Test pin. Normally GND
25	SCLK	I	Serial bus clock input
26	XLAT	I	Serial bus latch input
27	SWDT	I	Serial bus write data input
28	SRDT	O (3)	Serial bus read data output
29	ADSY	O	ADIP sync output
30	SQSY	O	Subcode Q sync output
31	VDD	—	Digital power supply
32	DQSY	O	Subcode Q sync (SCOR) output of digital in U-bit CD format
33	TEST7	O	Open
34	DTI	I	Recording audio signal input
35	DTO	O (3)	Playback audio signal output. High impedance during recording
36	C2PO	O	C2PO: Playback, D. In-VFLAG: Digital REC, 0: Analog REC
37	BCK	O	2.8224 MHz output (MCLK system)
38	XBCK	O	BCK inversion output (MCLK system)
39	LRCK	O	44.1 kHz (=Fs) (MCLK system)
40	WDCK	O	88.2 kHz (MCLK system)

Pin No.	Signal Name	I/O	Function
41	FS4	O	176.4 kHz (MCLK system)
42	GTOP	O	“H”: Releases sync protection window (INPUT EFM SYNC monitor output)
43	XUGFS	O	“L”: Unguarded frame sync (INPUT EFM SYNC monitor output)
44	XPLCK	O	EFM decoder PLL clock output (98 Fs=4.3218 MHz)
45	GFS	O	“H”: Frame sync OK (INPUT EFM SYNC monitor output)
46	EPDO	O (3)	EFM encoder external PLL phase comparison output Frequency: Low → “H”
47	RFCK	O	7.35 kHz output (MCLK system)
48	EVCI	I	EFM encoder external PLL oscillation input (196 Fs=8.6436 MHz)
49	EVCO	O	EFM encoder external PLL oscillation output (196 Fs=8.6436 MHz)
50	VSS	–	Digital GND
51	MCLK	O	22.579 MHz output
52	XTAI	I	Crystal oscillation input (512 Fs=22.5792 MHz)
53	XTAO	O	Crystal oscillation output (512 Fs=22.5792 MHz)
54	TEST9	I	Fixed at “L”
55	MVCI	I	Digital in PLL oscillation input (512 Fs=22.5792 MHz)
56	MVCO	O	Digital in PLL oscillation output (512 Fs=22.5792 MHz)
57	TEST2	O	Fixed at “open”
58	DIPD	O (3)	Digital in PLL phase comparison output Frequency: Low → “H”
59	RAOF	O	RAM overflow output (decoder monitor output)
60	MT3	O	Correction status monitor output during playback
61	MT2	O	Correction status monitor output during playback
62	MT1	O	Correction status monitor output during playback
63	MT0	O	Correction status monitor output during playback
64	WFCK	O	7.35 kHz (EFM decoder PLL system during playback, EFM encoder PLL system during recording)
65	DIN	I	Digital audio input
66	MD2	I	Digital audio out ON/OFF. “H”: ON
67	DOUT	O	Digital audio output
68	DIDT	O	Audio data output for digital audio input
69	DODT	I	16-bit data input for digital audio output
70	DOVF	I	Validity flag input for digital audio
71	VDD	–	Digital power supply
72	TEST3	I	Fixed at “L”
73	TEST4	O	Fixed at “open”
74	TEST5	I	Fixed at “L”
75	TEST6	I	Fixed at “L”
76	FMCK	I	ADIP read clock input (6.3 kHz) (TTL Schmidt input)
77	FMDT	I	ADIP data input (TTL schmidt input)
78	ADFG	I	ADIP carrier signal input (20.05 kHz) (TTL schmidt input)
79	FSW	O (3)	Spindle motor output filter switching output. “Z”: CLV-P, “L”: Others
80	NON	O	Spindle motor ON/OFF control output. “H”: ON

**Note:**

- XUGFS is a Frame Sync (negative pulse) created from EFM signal. This signal has not been sync protected.
- As for XPLCK, PLL is adjusted so that EFM PLL clock inversion and falling edge coincide with its changing point.
- GFS becomes “H” when Frame Sync coincides with insertion protection timing.
- C2PO represents data error status.
- RAOF is generated when 32 kRAM exceeds  $\pm 4F$  jitter margin.

**IC602 SHOCK PROOF MEMORY CONTROLLER (CXD2526AR)**

Pin No.	Signal Name	I/O	Function
1	A16	O	SRAM address bus A16 when RMSL="H", WFOVF when "L" (Note)
2	A17	O	SRAM address bus A17 when RMSL="H", WDTM when "L" (Note)
3	A18	O	SRAM address bus A18 when RMSL="H", ZERO when "L" (Note)
4	A19	O	SRAM address bus A19 when RMSL="H", MDTSC when "L" (Note)
5	A20	O	SRAM address bus A20 when RMSL="H", CMPSY when "L" (Note)
6	LRCK	I	LRCK input from EFM encoder/decoder
7	BCK	I	BCK input from EFM encoder/decoder
8	C2PO	I	C2PO input from EFM decoder
9	DATA	I/O	Input/output data from decoder during playback and to encoder during recording
10	VSS	—	GND
11	TEST	I	Test pin. Normally fixed at "L"
12	XRST	I	Reset input. "L": Reset
13	MIN	I	Monitor signal input for external input. Inputs a desired monitor signal
14	SRDT	(HiZ) O	Microprocessor serial data output. "Hi-z" when CXD2526 read register is not selected
15	SWDT	I	Microprocessor serial data input
16	XSLT	I	Microprocessor serial data latch signal input
17	SCK	I	Microprocessor serial data shift clock input
18	SCTX	I	Data output enable signal input during recording mode
19	RCPB	I	"L": Playback mode, "H": Recording mode
20	WRMN	I	"H": Write mode, "L": Monitor mode
21	SBMN	I	"H": Records input signal according to SDCT, "L": Records according to DCT
22	XINT	O	Interruption request output. "L" when interruption status occurs
23	MDSY	O	Input data MD sync detection signal
24	MEMFUL	O	"H" when main data area becomes full with data
25	MEMEMP	O	"H" when main data area is empty
26	UNDER	O	"H" when RMS < THUND
27	OVER	O	"H" when RMS ≥ THOVR
28	ERWR	O	"H" when data which C2PO is effective is written into RAM
29	BTOV4	O	"H" when BCT ≥ 400 (Hex)
30	TXST	O	"H" during data transfer
31	VDD	—	System power supply
32	BUSY	I/O	"H": RAM access
33	ZZ2	I	Test signal. Fixed at "L"
34	ZZ1	I	Test signal. Fixed at "L"
35	ZZ0	I	Test signal. Fixed at "L"
36	XALT	O	Data ready or latch signal to CXD2527
37	ADT1	I	Data input from CXD2527
38	ADTO	O	Data output to CXD2527
39	ACK	O	Data input/output clock output to CXD2527
40	AC2	O	Output data C2PO output to CXD2527
41	XRQ	I	Data request input signal from CXD2527
42	SDCK	I	External sub data I/F shift clock input
43	SBDT	I/O	External sub data I/F data output during playback mode, data input during recording mode



Pin No.	Signal Name	I/O	Function
44	XWT	O	External sub data I/F wait signal. Clock for reading a new data should not be transferred when "L"
45	SRDY	O	External sub data I/F access enable signal. Ignores clock for sub data R/W when "H"
46	MCK	O	128 fs output
47	F256	O	256 fs output
48	XTLO	O	System clock output (22.5792 MHz)
49	XTLI	I	System clock input (22.5792 MHz)
50	VSS	—	GND
51	TEST	I	Fixed at "L"
52	RMSL	I	External RAM select signal. "H": SRAM, "L": DRAM
53	ERR	I/O	EXTC2R="H": C2PO input
54	D7	O	SRAM data bus D7 when RMSL="H", Test signal when "L"
55	D4	I/O	RAM data bus D4 when RMSL="H", Test signal when "L"
56	D0	I/O	RAM data bus D0
57	D1	I/O	RAM data bus D1
58	D3	I/O	RAM data bus D3
59	D2	I/O	RAM data bus D2
60	XCAS	I/O	RMSL="L": DRAM $\overline{\text{CAS}}$ output, "H": Data bus D6
61	XOE	O	RAM output enable
62	A10	O	RAM address bus A10
63	XWE	O	RAM write enable
64	XRAS	I/O	DRAM $\overline{\text{RAS}}$ output when RMSL="L", Data bus D5 when "H"
65	A11	O	RAM address bus A11
66	A9	O	RAM address bus A9
67	A0	O	RAM address bus A0
68	A1	O	RAM address bus A1
69	A2	O	RAM address bus A2
70	A3	O	RAM address bus A3
71	VDD	O	System power supply
72	A8	O	RAM address bus A8
73	A7	O	RAM address bus A7
74	A6	O	RAM address bus A6
75	A5	O	RAM address bus A5
76	A4	O	RAM address bus A4
77	A12	O	RAM address bus A12 when RMSL="H", CS output when "L"
78	A13	O	RAM address bus A13 when RMSL="H", SYOK output when "L"
79	A14	O	SRAM address bus A14 when RMSL="H", WFFUL when "L" (Note)
80	A15	O	SRAM address bus A16 when RMSL="H", RFEMP when "L" (Note)

**Note:** WFOVF: "H" When write FIFO becomes overflow.  
WDTM: Outputs window timing within DI block.  
ZERO: Outputs "H" when BCT=0.  
MDTSC: "H" when input data header selector becomes 00 to 1F, "L" when others.  
CMPSY: Insertion sync timing  
WFFUL: "H" when write FIFO becomes full.  
RFEMP: "H" when read FIFO becomes empty.

**IC803 SUB SYSTEM CONTROL (MB89133A-PFM-170)**

Pin No.	Signal Name	I/O	Function
1	AVCC	—	3.7V
2	$\overline{\text{RST}}$	I	Reset signal
3	MODE0	I	Mode setting (Connected to GND)
4	MODE1	I	
5	X0	I	System clock (4.19 MHz)
6	X1	O	
7	VCC	—	3.1V
8	X0A	I	Time clock (32.768 kHz)
9	X1A	O	
10	CE	O	Chip enable signal to 3.7V regulator
11	MRST	O	Reset signal to main microprocessor
12		O	Not used
13	PCONT	O	DC-DC converter ON/OFF control. “H”: ON
14	CHG	O	Charge ON/OFF control. “H”: ON
15		O	Not used
16	BATCHK	O	Battery voltage check switch ON/OFF control. “H”: ON
17	PMUTE	O	Not used
18	$\overline{\text{TEST}}$	I	Test mode setting. “L”: Test mode
19	VSS	—	GND
20	3.5V	I	External power supply present/absent detection. “H”: Present
21	OP/CL	I	OPEN/CLOSE switch input. “H”: Open
22	$\overline{\text{PACK IN}}$	I	Disc present/absent detection. “H”: Present
23	AVLSPB	I	Not used
24	CLOCK	I	CLOCK SET key input
25	AVLSI	I	Headphone remote controller AVLS switch input
26	$\overline{\text{50I0}}$	I	Fixed at “L” in this unit
27	$\overline{\text{4.5V}}$	I	External power supply 4.5V present/absent detection. “L”: Present
28		O	Not used
29	$\overline{\text{BOOST}}$	I	BASS BOOST key input
30	$\overline{\text{PLAY}}$	I	PLAY key input
31	$\overline{\text{RECKEY}}$	I	REC key input
32	$\overline{\text{HOLD}}$	I	HOLD switch input. “L”: ON
33	POK	O	Laser power OK signal output
34		O	Not used
35	BEEP	O	Headphone buzzer output
36	WP2	I	Key wake-up input
37	WP1	I	Wake-up input for power supply and disc detecting
38	SLVREQ	I	Request signal from main microprocessor
39	KEYON	O	Key of remote controller reception switch. “H”: ON
40	SDO1	I	Serial data from main microprocessor
41	SDI1	O	Serial data to main microprocessor
42	SCK1	I	Serial clock from main microprocessor
43	AVSS	—	GND
44	AVR	—	Reference voltage
45	KEY0	I	Unit key input (A/D input)
46	KEY1	I	Headphones remote controller key input (A/D input)
47	BATMNT	I	Rithium ion battery – terminal voltage input (A/D input)
48	UNREG	I	Power supply voltage input (A/D input)


**IC805 MAIN SYSTEM CONTROL (CXP81848-603R)**

Pin No.	Signal Name	I/O	Function	Connection
1	TX	O	Data output enable signal during REC. "L": Active	
2	REC	O	"H": REC mode, "L": PLAY mode	
3	RFSW0	O	"H": High reflectance disc "L": Low reflectance disc	CXA1861R
4	RFSW1	O	"H": PIT area "L": GROOVE area	
			SW0 SW1	
			H H PREMASTER	
			L H PTOC	
			L L MO	
5	MODON	O	High frequency module ON/OFF control. "H": ON	CXD8498N
6	AGCTCI	O	RF AGC amplifier time constant control "L" when WRITE ↔ READ laser power switching (approx. 30 msec) and when focus search (until focus is successful)	CXD8498N
7	SDIO4	O	Serial data to EVR (IC314, IC315) and EEPROM	
8 to 10			Not used	
11	INSL	O	Digital input/analog input switching. "H": Digital input	CXD2531AR
12			Not used	
13	DB7	I/O	Data BIT7 to LCD driver and BUSY check	
14 to 20	DB6 to DB0	O	Data BIT6 to BIT0 to LCD driver	
21	DSP-E	O	Enable signal to LCD driver	
22	DSP-RW	O	READ/WRITE signal to LCD driver	
23	DSP-RS	O	Display register select signal to LCD driver	
24	ASYMUTE	O	ASY reference voltage muting during track jump (MO disc only) (Not used)	
25	LDON	O	Laser ON signal. "H": ON	
26	LOAD	O	Load signal to EVR (IC506)	
27	SLVREQ	O	Request signal to sub-microprocessor	MB89133A
28			Not used	
29	XSHKEN	O	Enable signal to REC shock detection IC	CXD8948N
30	LAT	O	Latch signal to REC shock detection IC	CXD8948N
31	STCONT	O	Stepping motor control. "L": ON	
32	ADIPCONT	O	Servo system power supply ON/OFF control. "L": ON	
33	RECCONT	O	REC driver control. "L": ON	
34	RECLED	O	REC LED control. "L": ON	
35			Not used	
36	DTCONT	O	Dead time control	MPC1718FU
37	MP		Connected to GND	
38	MRST	I	Reset signal from sub-microprocessor	MB89133A
39	VSS	—	GND	
40	X1	I	System clock (12 MHz)	
41	X2	O		
42	CSO		Connected to 3.1V	
43	SDI1	I	Serial data from sub-microprocessor	MB89133A
44	SDO1	O	Serial data to sub-microprocessor	MB89133A
45	SCK1	O	Serial clock to sub-microprocessor	MB89133A

Pin No.	Signal Name	I/O	Function	Connection
46	OUTSEL	O	REC monitor signal switching	
47	DBB1	O	DBB (dynamic bass boost) control	
48	DBB2	O		
49			Not used	
50	AVSS	—	GND	
51	AVREF	—	3.1V	
52	AVDD	—		
53	SHOCK	I	Shock detection signal during REC	
54	SENSEO	I	SENSE signal	CXD2525R-1, CXD8498N
55	FOK	I	Focus OK signal	CXA1861R
56	JACDET	I	LINE IN jack detection signal. “L”: Jack insertion	
57			Not used	
58	TEMPMNI	I	Temperature detection (A/D input)	
59	OUTLS	I	Pick-up outer periphery detection (A/D input) (Not used)	
60			Not used	
61	FGIN	I	Spindle FG input	
62	TOK	I	Tracking OK signal	CXD8498N
63	MIC DET	I	MIC jack detection signal. “L”: Jack insertion	
64	DIN/AIN	I	Digital in/analog in detection. “H”: Digital in	
65	PROTECT	I	Disc write protect switch input. “H”: Write protect	
66	REFLECT	I	Disc reflectance detection switch input. “H”: Low reflectance disc	
67	5010/5011	I	Fixed at GND in this unit	
68	INTSW	I	Stepping motor initial position detection switch input	
69	SPMUTE	O	Spindle motor mute signal. “H”: Mute	
70	AMUTE	O	Audio mute signal. “H”: Mute	
71	DEEMP	O	Audio de-emphasis control. “H”: De-emphasis on	
72			Not used	
73	SLMUTE	O	Sled motor mute signal. “H”: Mute (PWM output)	
74	FGSV	O	FG servo (PWM output)	
75	DQSY	I	Subcode Q sync of digital in U-bit CD format	CXD2525R-1
76	DATASY	I	ADIP sync/subcode Q sync	CXD2525R-1
77	SDI2	I	Serial data	CXD2525R-1, CXD2526AR
78	SDO2	O	Serial data	CXD2525R-1, CXD2526AR, CXD2531AR, CXD8498N
79	SCK2	I/O	Serial clock	CXD2525R-1, CXD2526AR, CXD2531AR, CXD8498N
80	INT	I	Interruption request from shock proof memory controller	CXD2526AR
81	SCK3	O	Serial clock to EVR (IC508, IC513, IC514)	
82	SDO3	O	Serial data to EVR (IC506, IC513, IC514)	
83	CSSV	O	Enable signal to EVR (IC513, IC514)	
84	XT1	I	Not used	
85	XT2	O		

Pin No.	Signal Name	I/O	Function	Connection
86	VSS	—	GND	
87	VDD	—	3.1V	
88	NC	—	Not used	
89	CSAU	O	Chip select signal to EVR (IC314, IC315)	
90	CSNV	O	Chip select signal to EEPROM	
91	RST	O	Reset signal	
92	AGC	O	Audio AGC ON/OFF control. "H": ON	
93			Not used	
94	SCK4	O	Serial clock to EVR (IC314, IC315) and EEPROM	
95	ST1 SOU	O	Stepping motor signal	MPC1730VM
96	ST2 SOU	O		
97	PDAD	O	A/D converter power down detect during playback. "H": Power down	AK4502-VS
98	PDDA	O	D/A converter power down detect during recording. "H": Power down	AK4502-VS
99	SUB MAIN	O	"H": Sub data, "L": Main data	CXD2526AR
100	WRTMON	O	"H": Write mode, "L": Monitor mode	CXD2526AR

6-3. BLOCK DIAGRAM

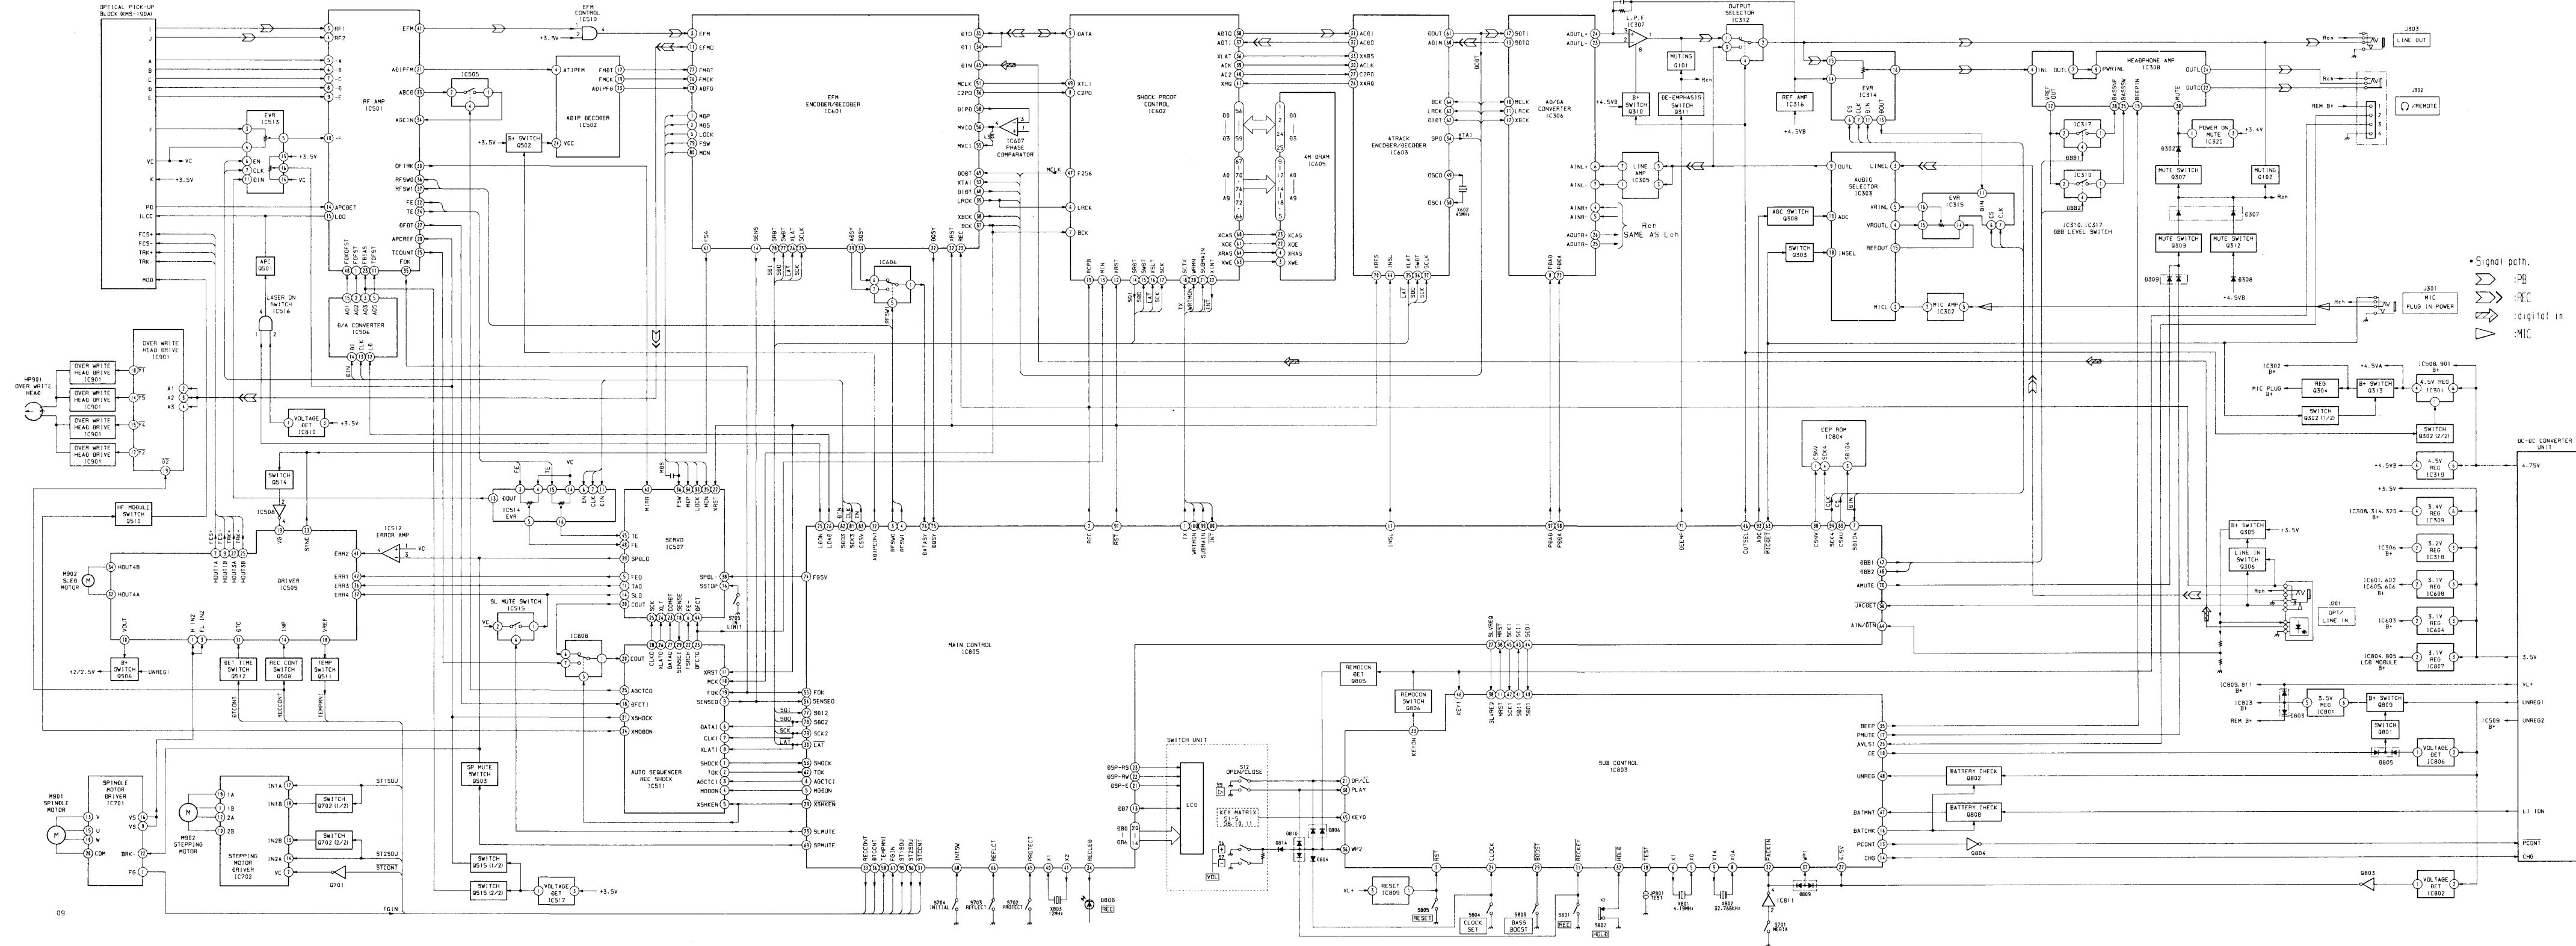




6-4. PRINTED WIRING BOARDS  
• See page 32, 33 for Semiconductor Lead Layouts.

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D301	I-15	IC601	F-23
D302	J-16	IC602	D-22
D303	H-18	IC603	C-25
D304	I-18	IC604	B-17
D305	I-18	IC605	D-17
D307	D-18	IC606	E-22
D308	D-18	IC607	E-25
D309	D-18	IC608	D-24
D310	J-12	IC701	F-3
D501	C-12	IC702	E-3
D504	B-27	IC801	A-25
D505	B-27	IC802	A-26
D506	G-28	IC803	C-14
D601	E-24	IC804	E-27
D801	B-23	IC805	D-11
D802	B-15	IC806	A-25
D803	E-14	IC807	D-27
D804	B-13	IC808	H-28
D805	B-26	IC809	B-26
D806	C-13	IC810	E-26
D808	J-24	IC811	C-16
D809	B-15	IC901	I-3
D810	C-26		
D811	I-28	Q101	I-26
D812	B-16	Q102	E-18
D813	E-14	Q201	G-25
D814	B-11	Q202	E-18
D901	I-3	Q302	H-23
D902	I-3	Q303	H-24
		Q304	G-23
IC301	H-22	Q305	F-18
IC302	G-17	Q306	E-21
IC303	G-16	Q307	H-23
IC304	H-15	Q308	H-23
IC305	F-15	Q309	D-18
IC306	F-14	Q310	F-25
IC307	F-25	Q311	F-25
IC308	I-15	Q312	C-18
IC309	H-25	Q313	H-23
IC310	H-13	Q501	G-29
IC311	H-25	Q502	G-12
IC312	I-25	Q503	F-28
IC314	I-25	Q506	C-11
IC315	H-14	Q508	A-28
IC316	H-26	Q510	I-29
IC317	I-14	Q511	A-27
IC318	F-26	Q512	B-29
IC319	E-16	Q514	B-26
IC320	I-14	Q515	I-9
IC501	G-28	Q701	E-7
IC502	H-12	Q702	E-4
IC505	H-27	Q801	B-25
IC506	I-11	Q802	D-13
IC507	E-28	Q803	B-26
IC508	A-27	Q804	D-15
IC509	C-29	Q805	C-13
IC510	F-27	Q806	B-26
IC511	F-12	Q808	D-26
IC512	B-30	Q809	B-16
IC513	H-11	Q901	J-2
IC514	G-11	Q902	J-3
IC515	D-29	Q903	J-4
IC516	H-28	Q904	H-4
IC517	I-10		

- Note:
- : parts extracted from the component side.
  - ○ : Through hole.
  - △ : internal component.
  - : Pattern on the side which enable seeing.
  - : Pattern of the rear side.

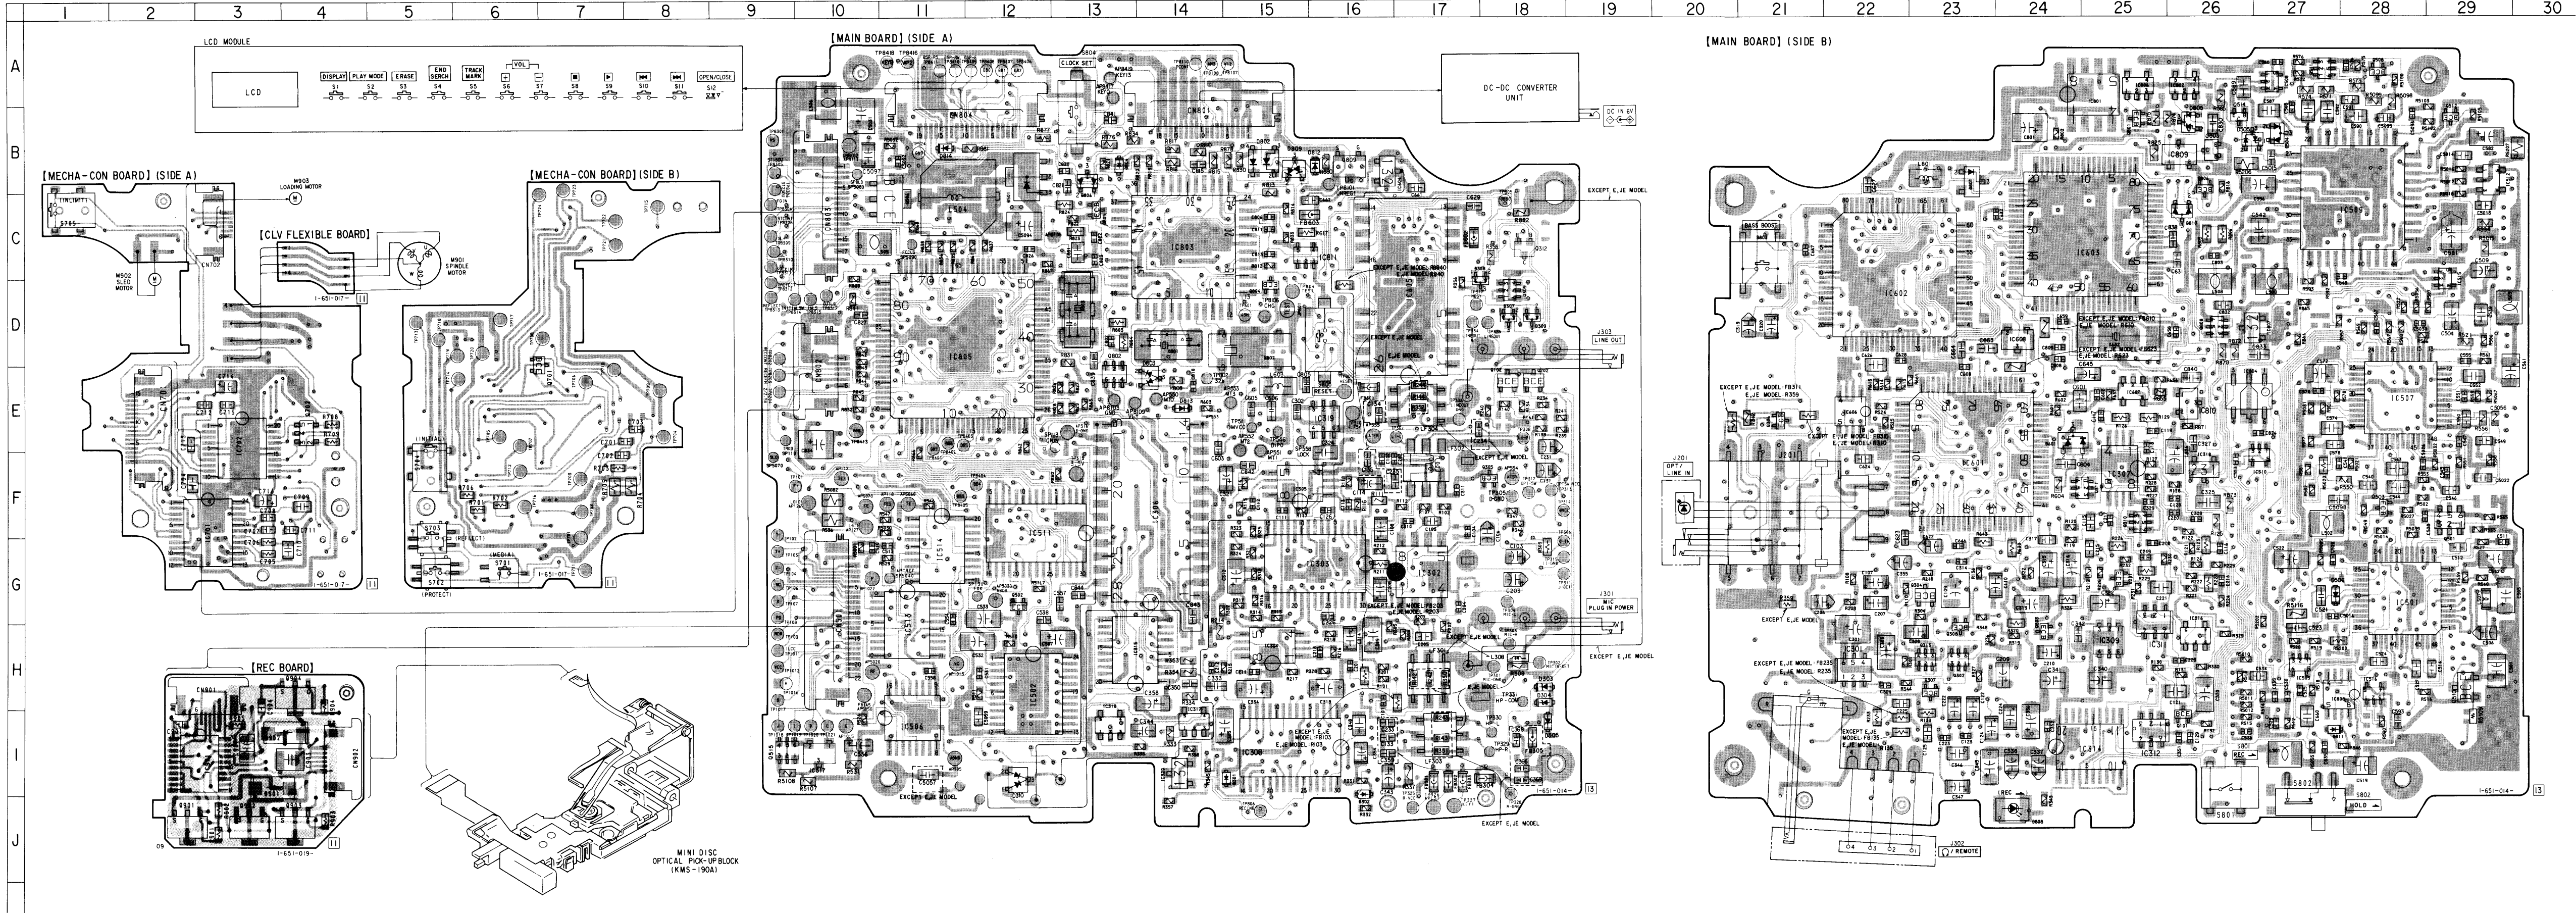






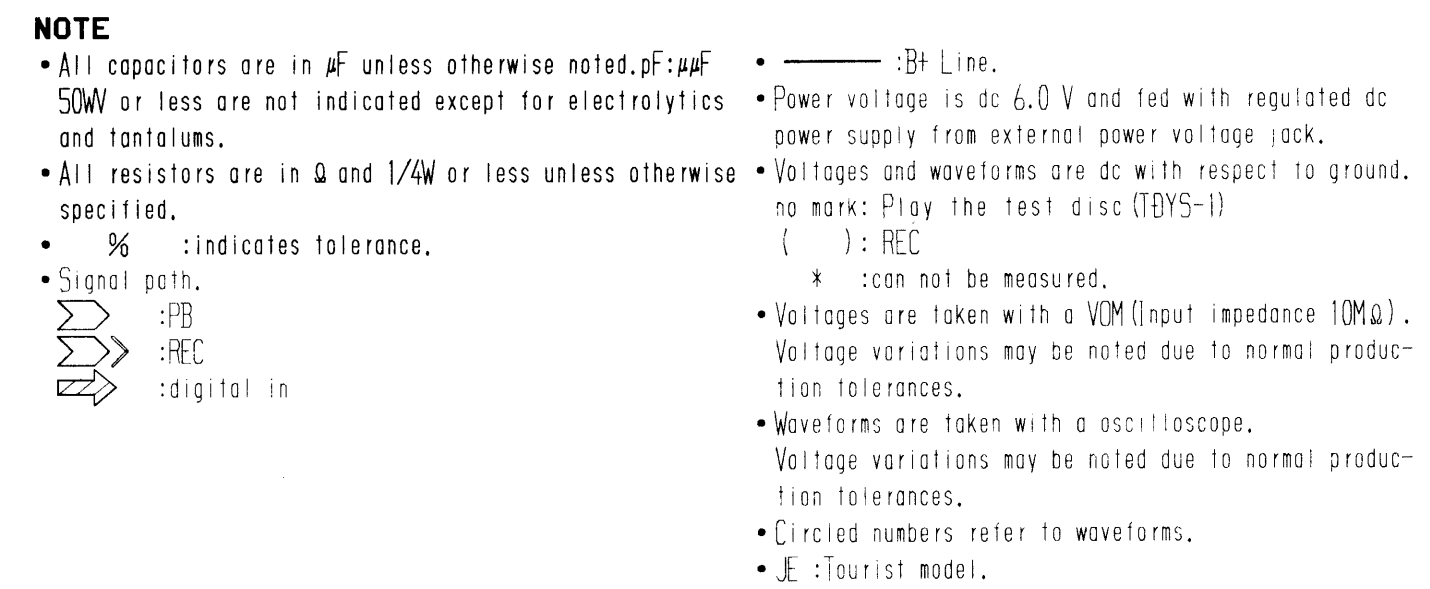






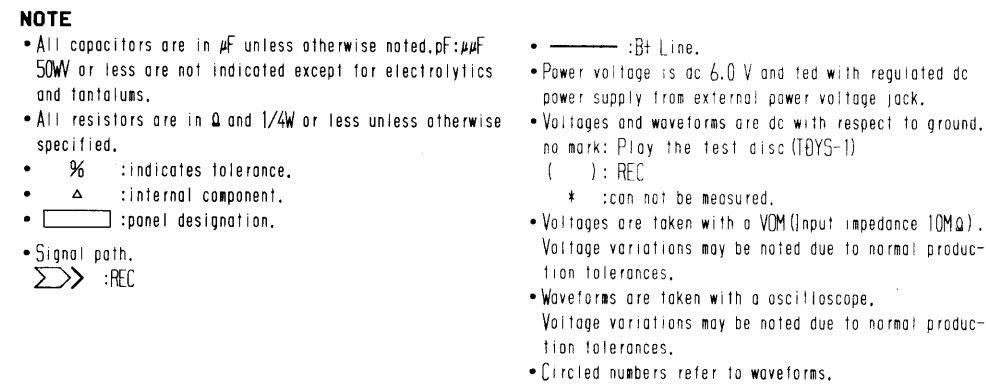


IC303 CXA1497N-E2




IC502 CXA1380N




IC506 MB88347ATFV-EF

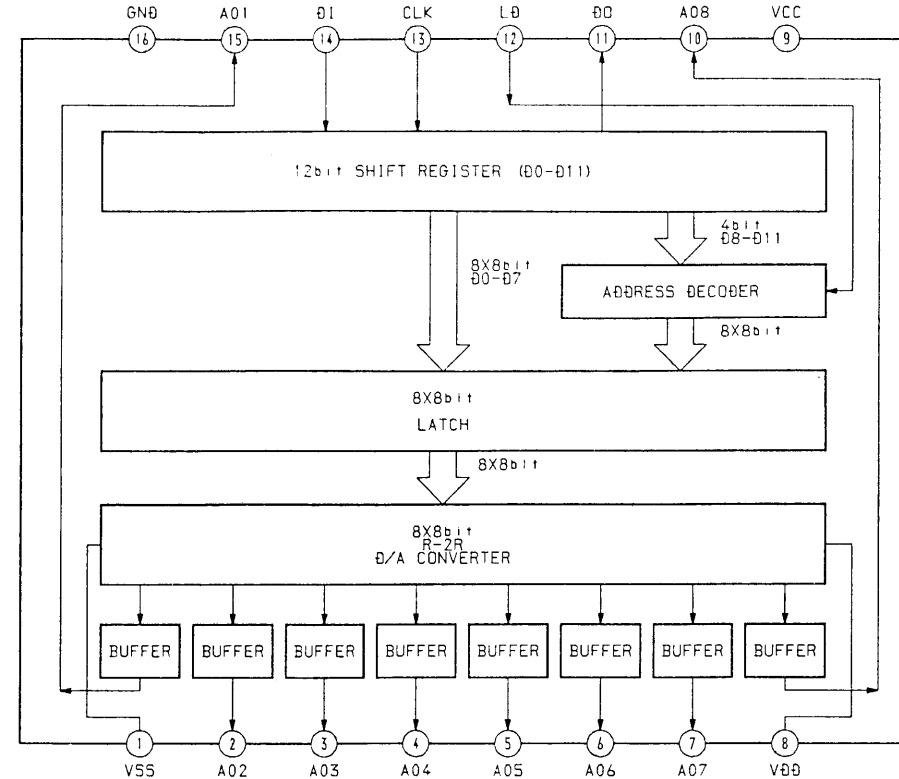


IC507 CXA1602R

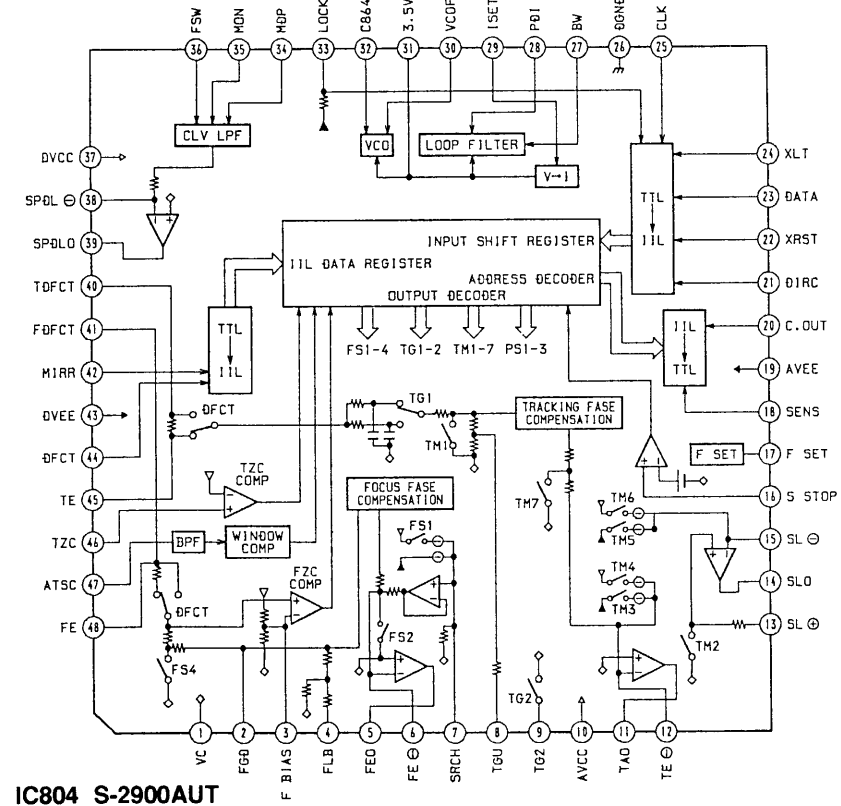


IC804 S-2900AUT

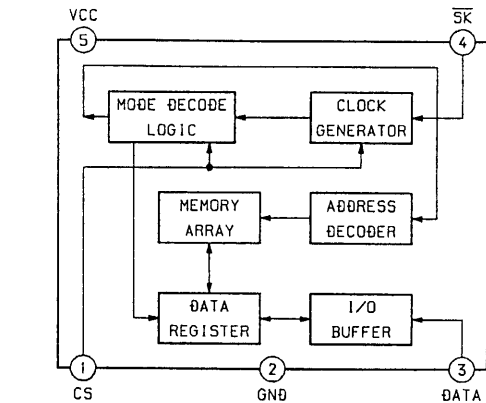


IC509 MPC1718FU

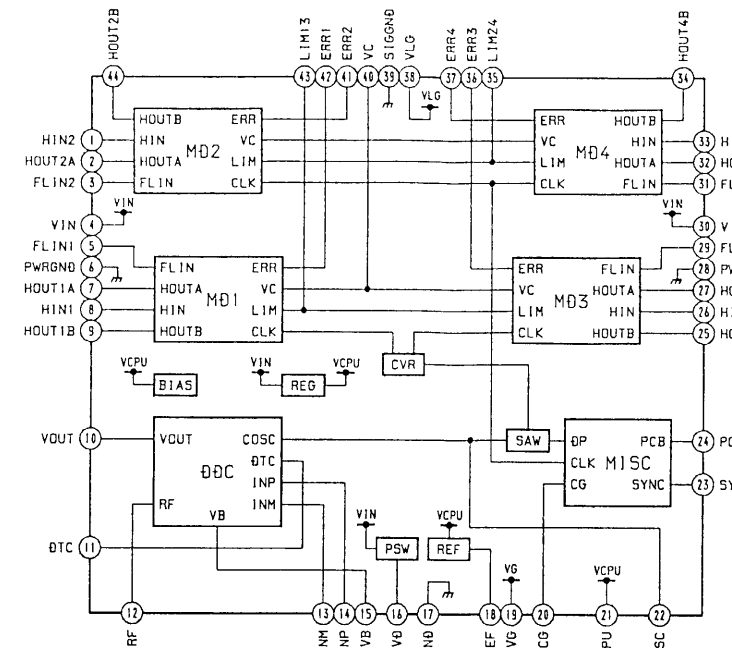


IC511 CXD8498N-ELL2000

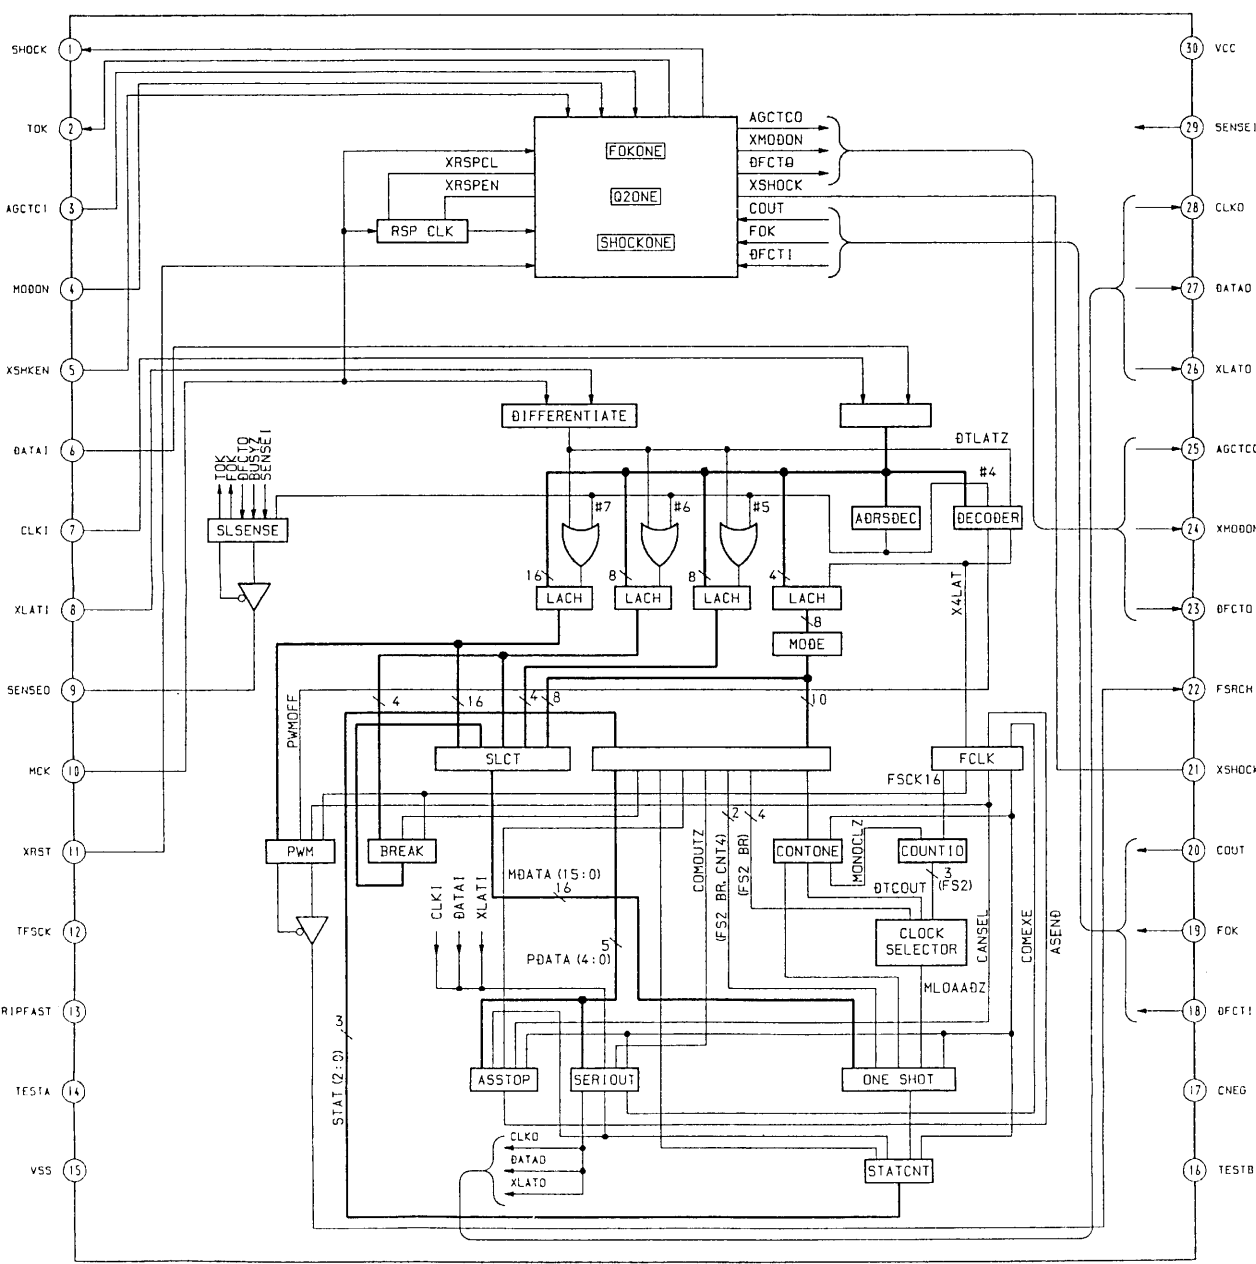


IC605 CXK41V4400ATM-10

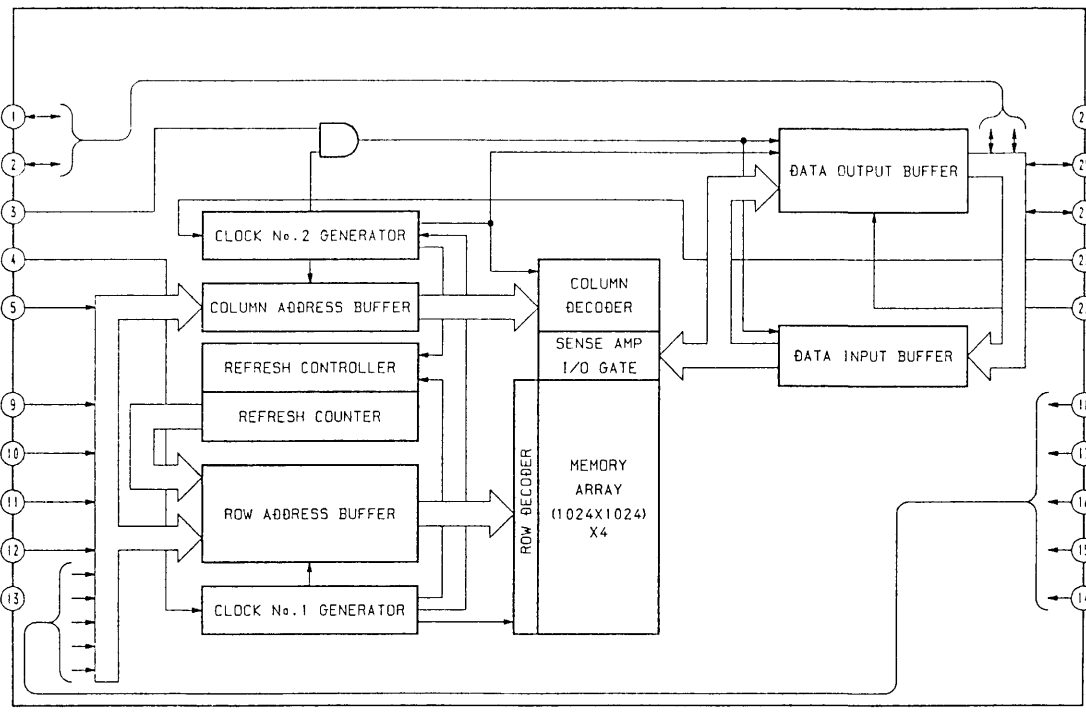


IC702 MPC1730VMEL

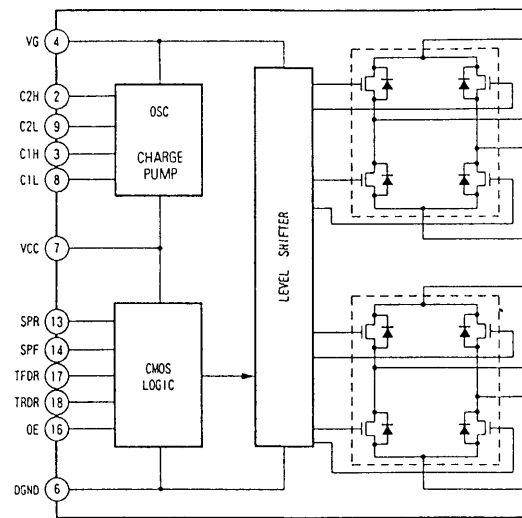


IC801 RS5RJ3720B

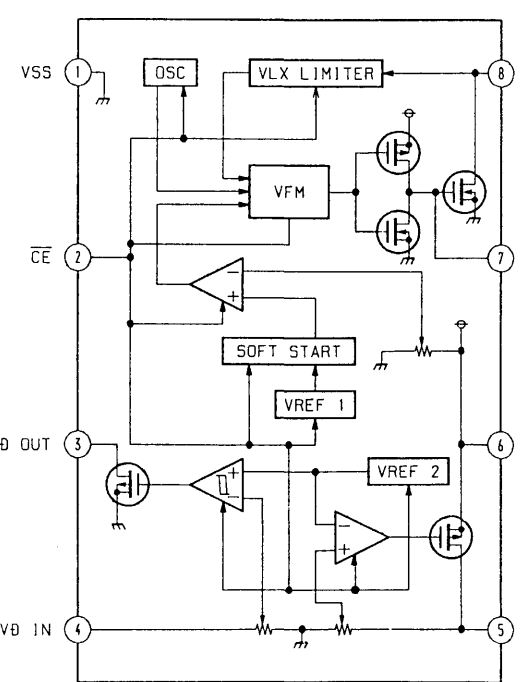


IC901 MC74ACT540DT

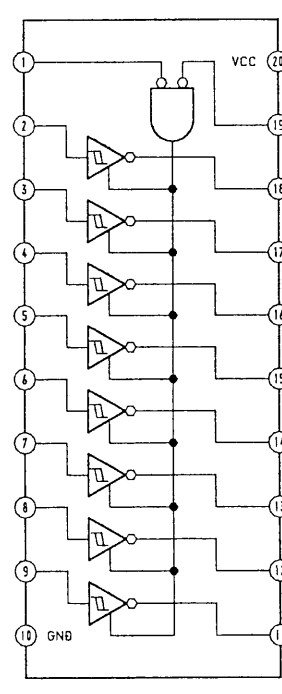

IC601 CXD2525R-1

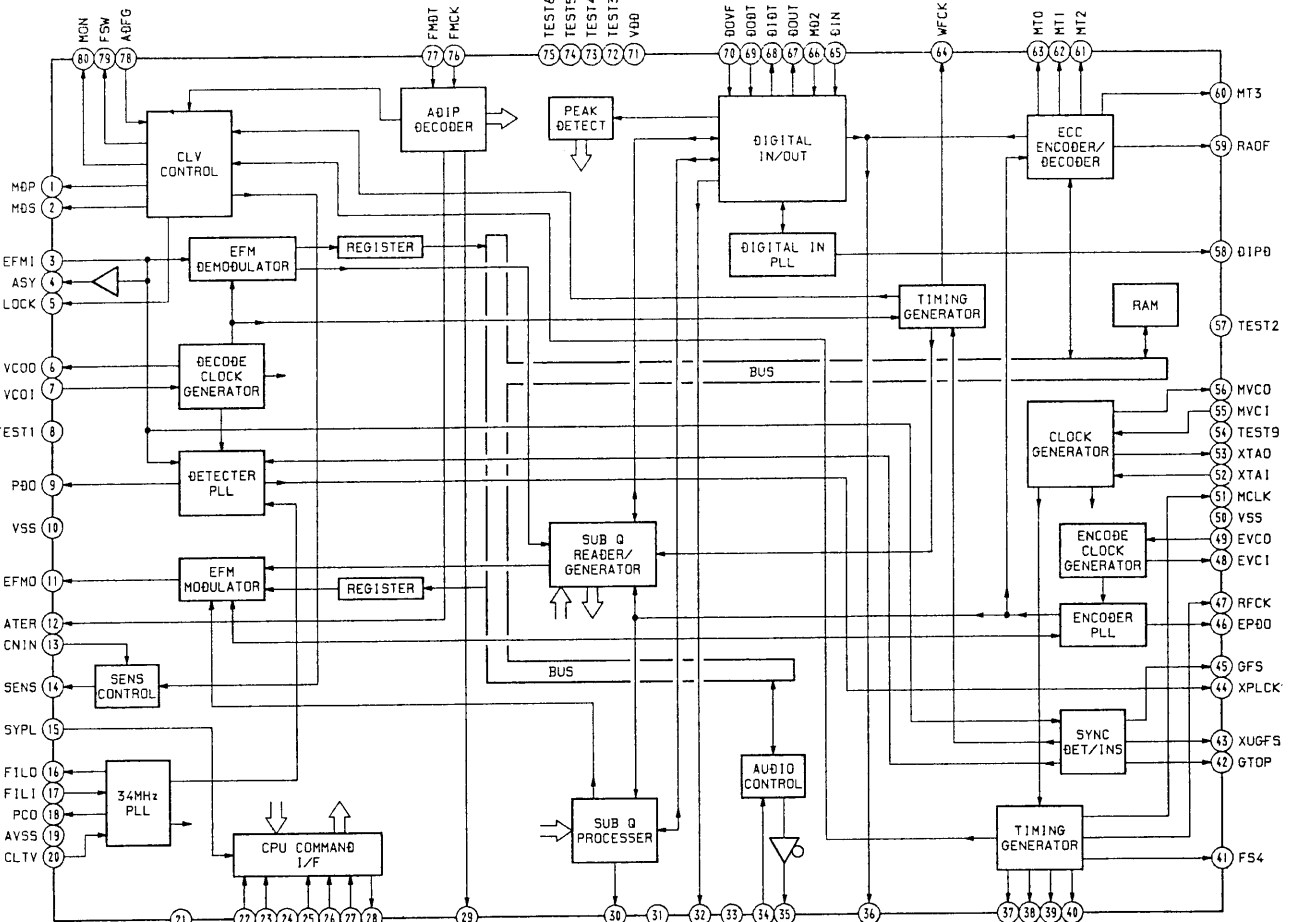


IC603 CXD2531BR

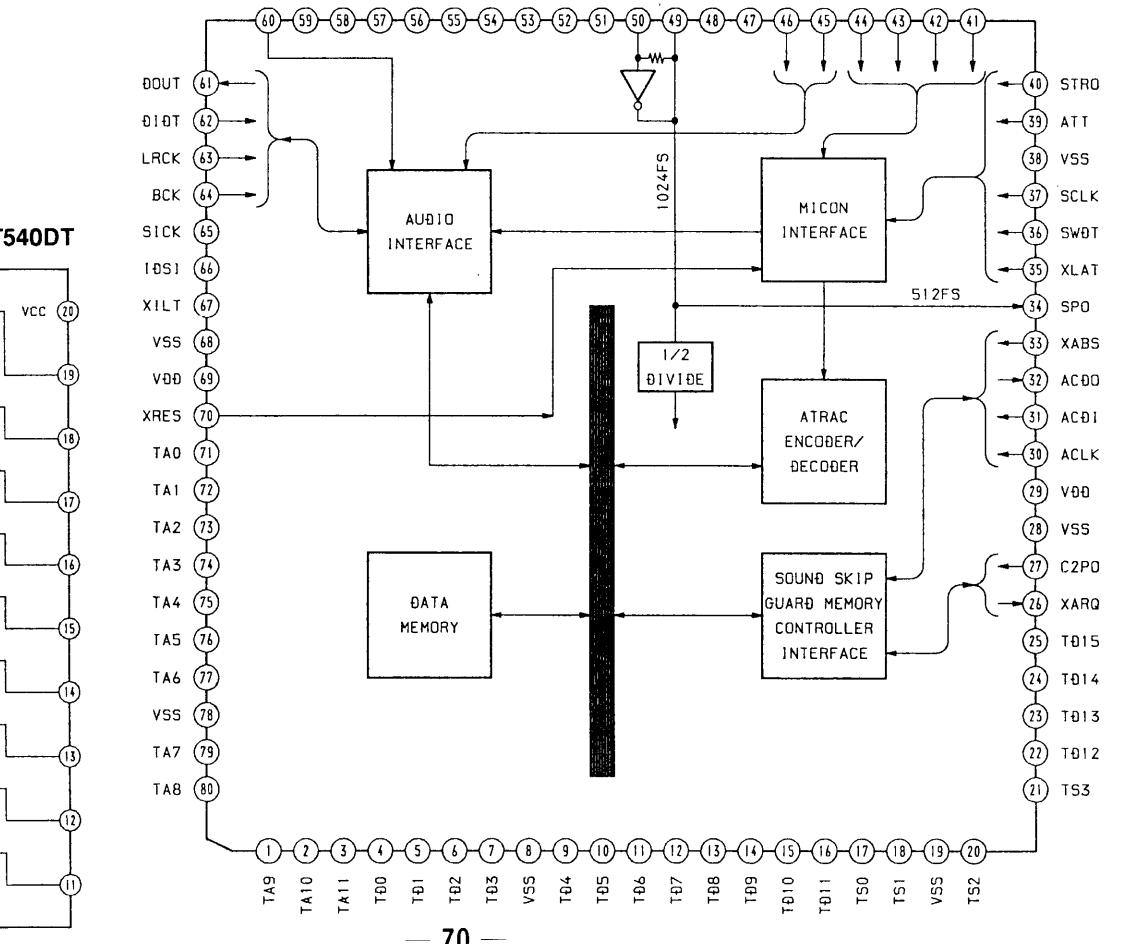


## EXPLODED VIEWS

NOTE:

- Les composants identifiés par une  
marque  sont critiques pour la  
sécurité.  
Ne les remplacer que par une pièce  
portant le numéro spécifié.


## 7-1. CABINET BLOCK

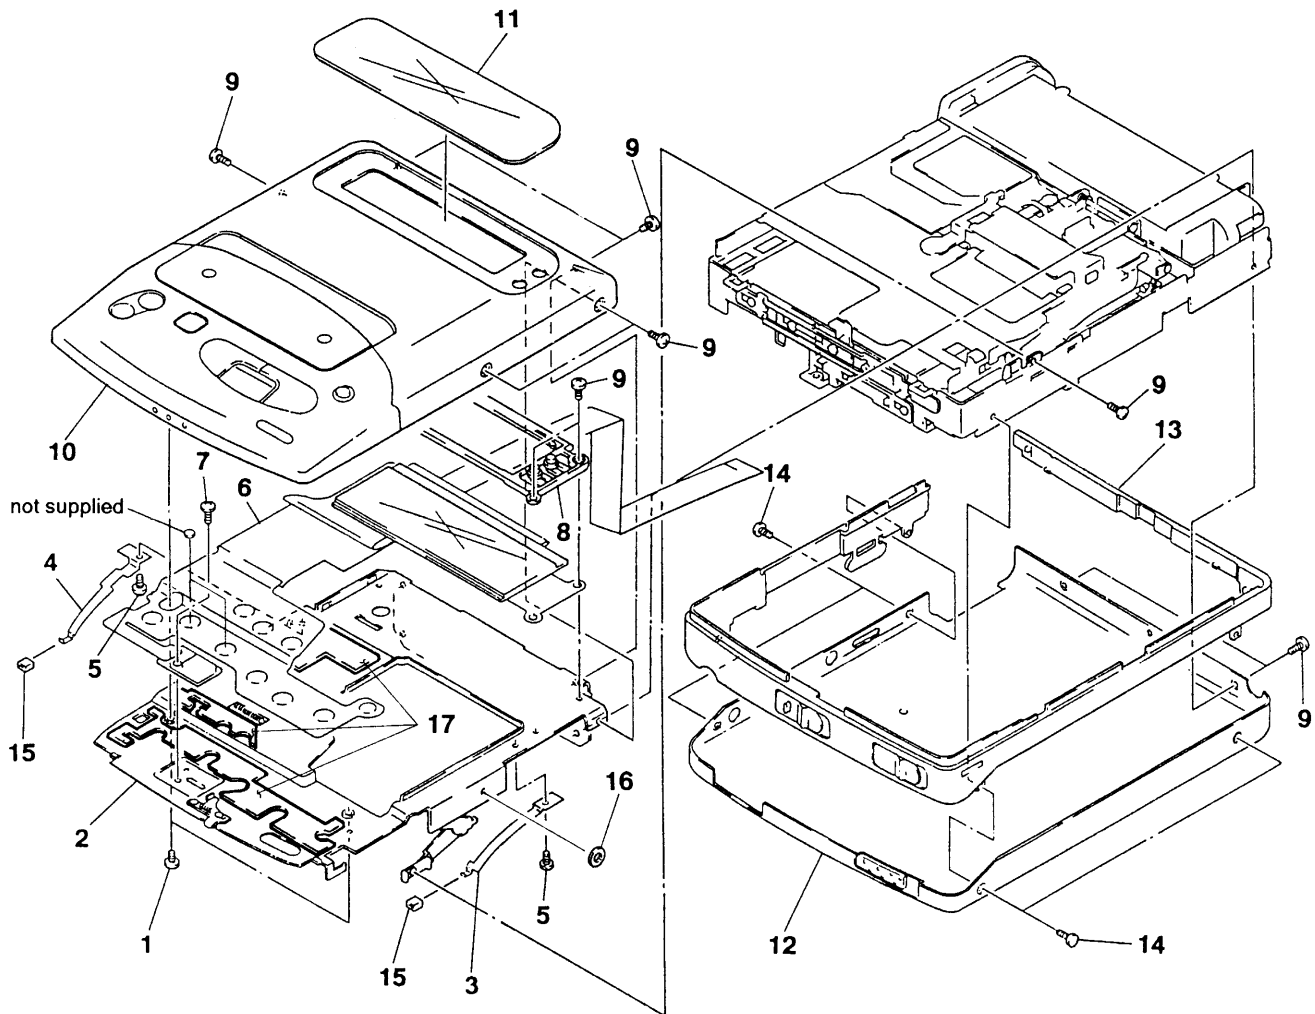

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
1	3-893-942-41	SCREW (1.7X3), TAPPING (B)		10	X-4944-459-1	PANEL ASSY, UPPER	
2	X-4944-460-1	COVER ASSY, LID		11	4-963-925-01	WINDOW (LCD)	
3	4-963-943-01	SPRING (MD RETAINER A), LEAF		12	X-4944-457-1	PANEL ASSY, BOTTOM	
4	4-963-944-01	SPRING (MD RETAINER B), LEAF		13	X-4944-453-1	PLATE (CABINET) ASSY, ORNAMENTAL	
5	3-366-890-11	SCREW (M1.4)		14	3-704-197-13	SCREW (M1.4X2.0), LOCKING	
6	1-810-410-11	LCD MODULE		15	4-963-945-01	CUSHION (DAMPER)	
7	3-366-890-01	SCREW (M1.4)		* 16	3-563-124-11	WASHER, RATTLE ABSORBER	
8	4-963-946-01	HOLDER (LCD)		17	4-964-707-01	SHEET (LCD FLEXIBLE), ADHESIVE	
9	3-704-197-03	SCREW (M1.4X1.6), LOCKING					




## 7-2. MAIN BOARD BLOCK

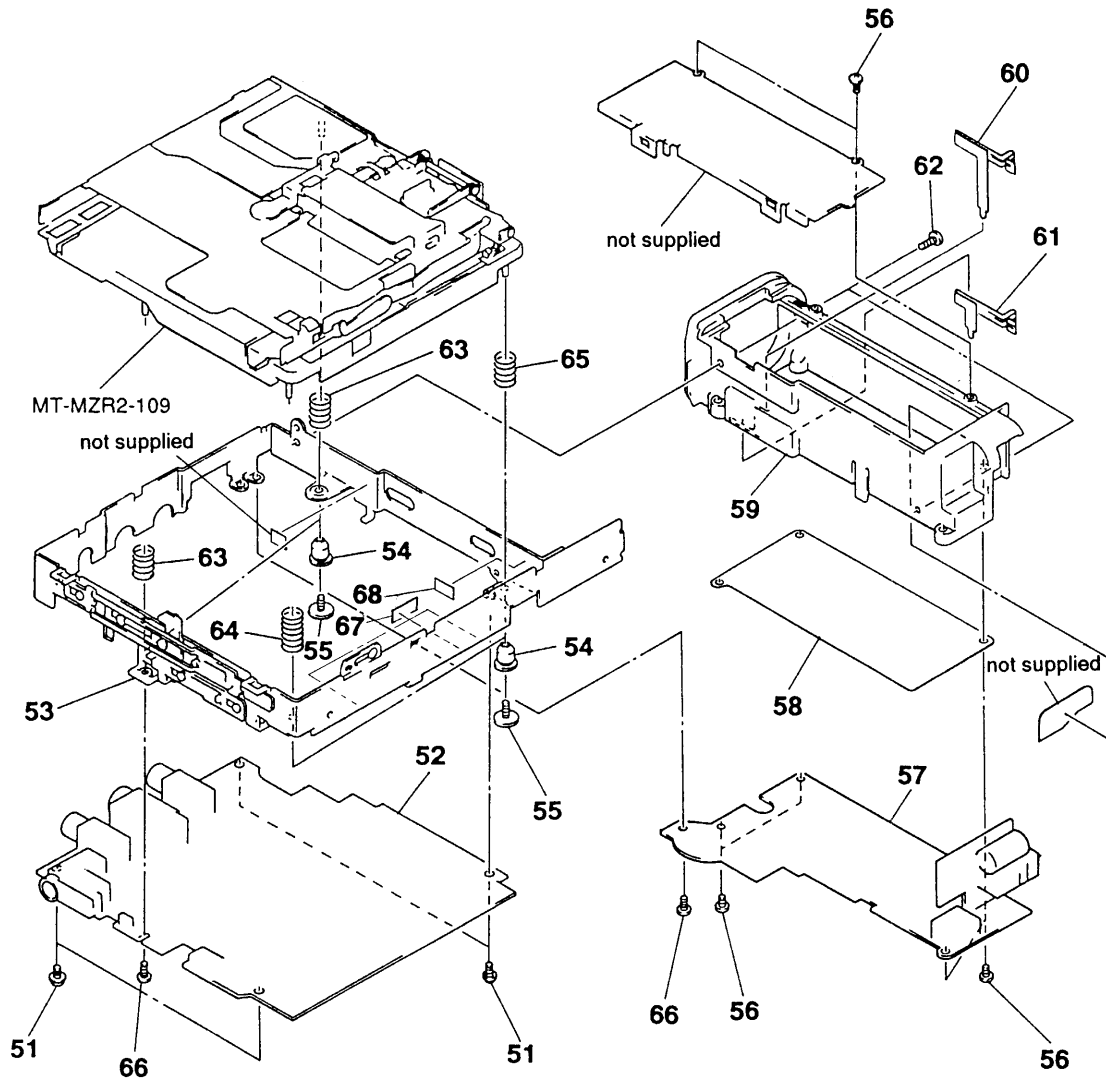


Ref.No.	Part No.	Description	Remark
51	3-335-797-01	SCREW (M1.4X2), TOOTHED LOCK	
52	A-3264-999-A	MAIN BOARD, COMPLETE (US, CND, AEP, UK, AUS)	
52	A-3276-264-A	MAIN BOARD, COMPLETE (E, JE)	
53	X-4944-452-1	CHASSIS ASSY, INNER	
54	4-963-909-01	DAMPER	
55	4-963-924-01	SCREW (DAMPER)	
56	3-893-942-41	SCREW (1.7X3), TAPPING (B)	
57	1-467-509-11	DD CONVERTER UNIT	
58	4-963-936-01	SHEET, INSULATING	
59	X-4944-458-1	CASE ASSY, BATTERY	

Ref.No.	Part No.	Description	Remark
60	4-963-934-01	TERMINAL (PLUS), BATTERY	
61	4-963-935-01	TERMINAL (MINUS), BATTERY	
62	3-704-197-13	SCREW (M1.4X2.0), LOCKING	
63	4-963-922-01	SPRING (MD3), COMPRESSION	
64	4-963-911-01	SPRING (MD1), COMPRESSION	
65	4-963-912-01	SPRING (MD2), COMPRESSION	
66	3-348-160-71	SCREW (M1.4X2), PRECISION PAN	
* 67	3-303-838-00	SHEET, REC. SW	
* 68	3-335-905-01	SHEET	


### 7-3. MECHANISM DECK 1 (MT-MZR2-109)

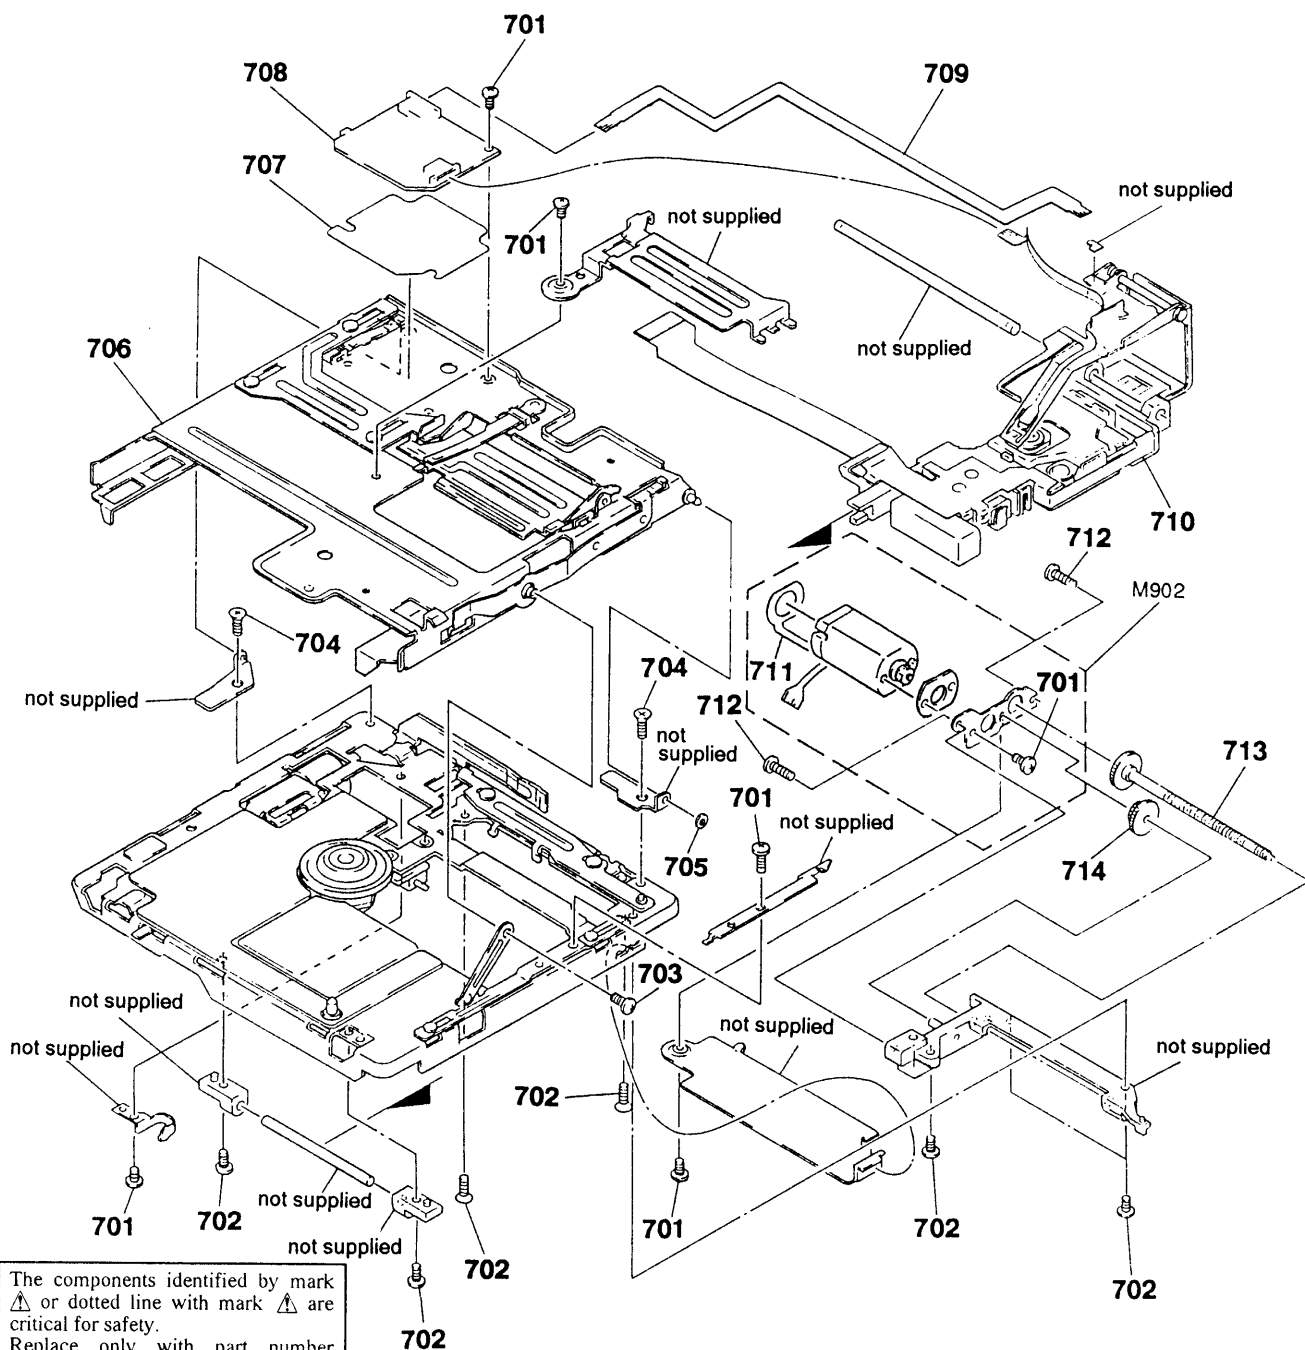

Ref. No.	Part No.	Description
701	3-366-890-11	SCREW (M1.4)
702	3-704-197-33	SCREW (M1.4X3.0), LOCKING
703	4-963-883-31	SCREW (M1.4), PRECISION PAN
704	4-964-538-01	SCREW (M1.4X2)
705	3-338-645-31	WASHER (0.8-2.5)
706	X-4944-451-1	HOLDER ASSY
707	4-964-223-01	SHEET (REC PC BOARD), INSULATING
* 708	1-651-019-11	REC BOARD

Remark	Ref. No.	Part No.	Description	Remark
	709	1-651-016-11	REC FLEXIBLE BOARD	
		710	A-3300-221-A OPTICAL PICK-UP BLOCK	
	711	1-651-018-11	SLED FLEXIBLE BOARD	
	712	4-964-537-01	SCREW (M1.4X4.5), TAPPING	
	713	A-3300-218-A	SCREW BLOCK ASSY, LEAD	
	714	4-963-904-01	GEAR (B)	
	M902	A-3300-219-A	MOTOR BLOCK ASSY, SLED	

## 7-4. MECHANISM DECK 2 (MT-MZR2-109)

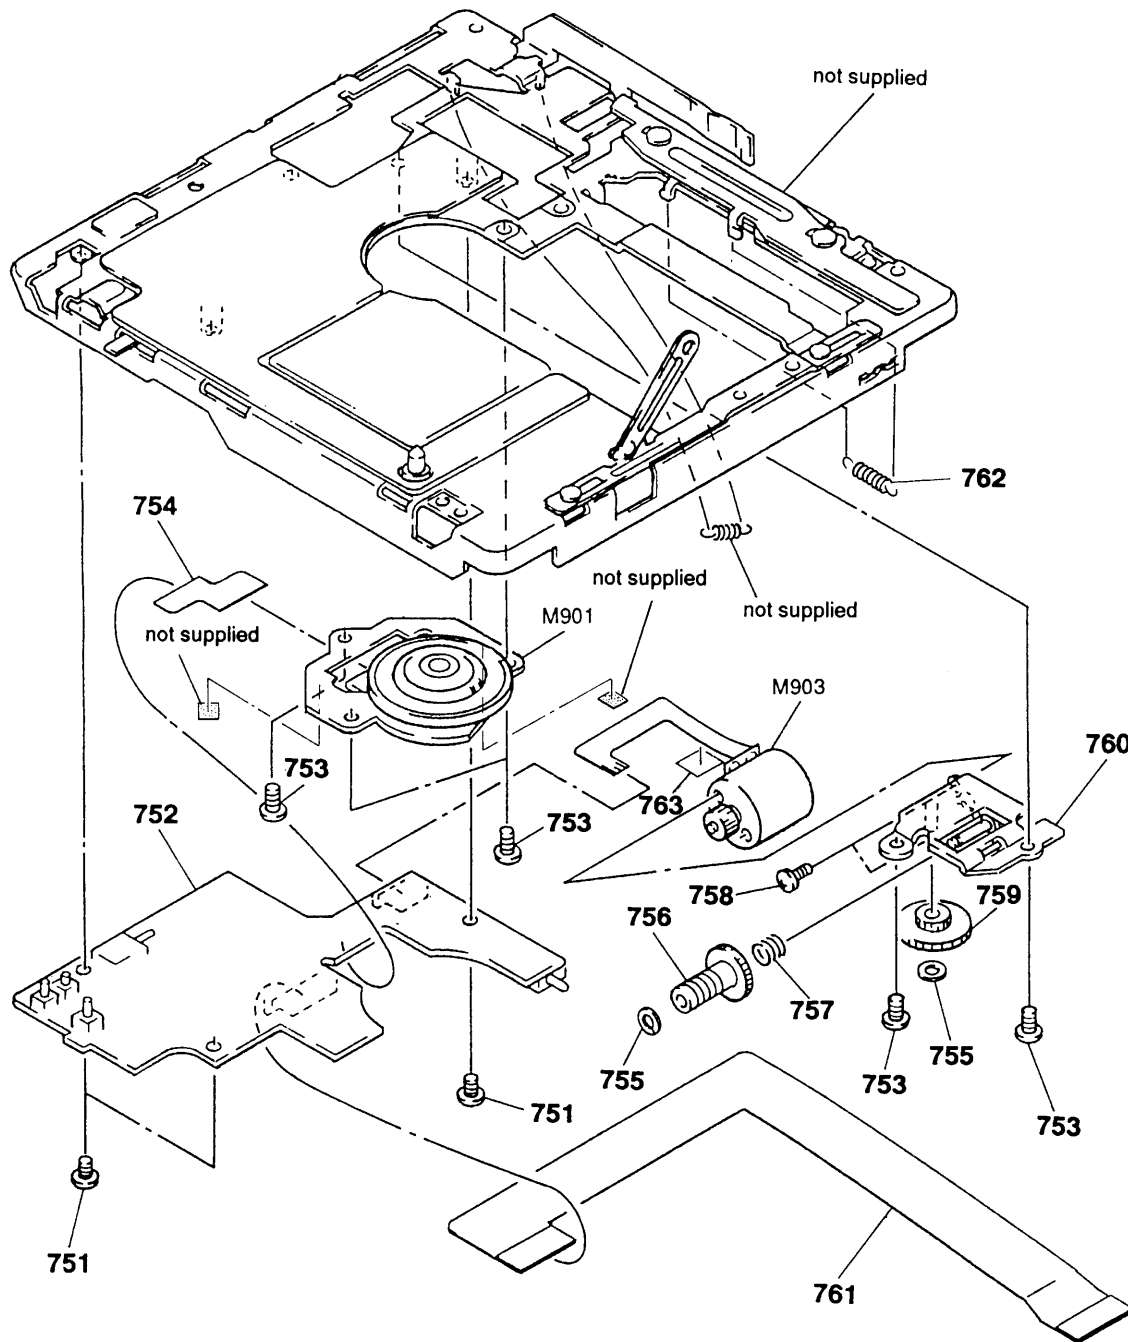

Ref.No.	Part No.	Description
751	3-366-890-11	SCREW (M1.4)
752	A-3276-233-A	MECHA CON BOARD, COMPLETE
753	4-955-841-01	SCREW
754	1-651-017-11	CLV FLEXIBLE BOARD
755	3-315-384-11	WASHER, STOPPER
756	4-963-901-01	GEAR, WORM
757	4-963-902-01	SPRING, COMPRESSION
758	4-964-564-01	SCREW (M1.2X1.6)

Ref.No.	Part No.	Description
759	4-963-898-01	GEAR (WORM WHEEL)
760	X-4944-449-2	CHASSIS ASSY, GEAR
761	1-651-015-11	MD FLEXIBLE BOARD
762	4-963-900-01	SPRING (LOCK), TENSION
763	3-309-595-11	SHEET, INSULATING, PACK
M901	1-698-313-11	MOTOR
M903	A-3300-216-A	STEPPER BLOCK ASSY

Remark



# SECTION 8

## ELECTRICAL PARTS LIST

MAIN

### NOTE:

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

• Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

• Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• -XX, -X mean standardized parts, so they may have some difference from the original one.

• Color Indication of Appearance Parts Example:  
KNOB, BALANCE (WHITE) ... (RED)

↑  
Parts color

↑  
Cabinet's color

- CND : Canadian model
- AUS : Australian model
- JE : Tourist model

### RESISTORS

All resistors are in ohms  
METAL: Metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F : nonflammable

### SEMICONDUCTORS

In each case, u:  $\mu$ , for example:  
uA...:  $\mu$  A..., uPA...:  $\mu$  PA...,  
uPB...:  $\mu$  PB..., uPC...:  $\mu$  PC...,  
uPD...:  $\mu$  PD...

### CAPACITORS

uF :  $\mu$  F

### COILS

uH :  $\mu$  H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-3264-999-A	MAIN BOARD, COMPLETE (EXCEPT E, JE)		C201	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
	*****			C202	1-164-874-11	CERAMIC CHIP	100PF 5% 16V
	A-3276-264-A	MAIN BOARD, COMPLETE (E, JE)		C203	1-107-812-11	TANTAL. CHIP	4.7uF 20% 6.3V
	*****			C204	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
*	3-556-804-01	SHEET (F), ADHESIVE		C205	1-164-730-11	CERAMIC CHIP	0.0012uF 10% 50V
	3-831-441-XX	SPACER, KNOB		C206	1-107-813-11	TANTAL. CHIP	10uF 20% 6.3V
	< CAPACITOR >			C207	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V
	C101	1-164-937-11 CERAMIC CHIP	0.001uF 10% 16V	C208	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V
	C102	1-164-874-11 CERAMIC CHIP	100PF 5% 16V	C209	1-107-811-11	TANTAL. CHIP	47uF 20% 4V
	C103	1-107-812-11 TANTAL. CHIP	4.7uF 20% 6.3V	C210	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V
	C104	1-164-937-11 CERAMIC CHIP	0.001uF 10% 16V	C211	1-164-949-11	CERAMIC CHIP	0.047uF 16V
	C105	1-164-730-11 CERAMIC CHIP	0.0012uF 10% 50V	C212	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
	C106	1-107-813-11 TANTAL. CHIP	10uF 20% 6.3V	C213	1-164-864-11	CERAMIC CHIP	39PF 5% 16V
	C107	1-135-337-11 TANTAL. CHIP	1uF 20% 6.3V	C214	1-107-815-11	TANTAL. CHIP	2.2uF 20% 4V
	C108	1-135-337-11 TANTAL. CHIP	1uF 20% 6.3V	C215	1-164-473-11	CERAMIC CHIP	820PF 10% 50V
	C109	1-107-811-11 TANTAL. CHIP	47uF 20% 4V	C216	1-164-874-11	CERAMIC CHIP	100PF 5% 16V
	C110	1-135-337-11 TANTAL. CHIP	1uF 20% 6.3V	C217	1-164-868-11	CERAMIC CHIP	56PF 5% 16V
	C111	1-164-949-11 CERAMIC CHIP	0.047uF 16V	C218	1-164-876-11	CERAMIC CHIP	120PF 5% 16V
	C112	1-164-937-11 CERAMIC CHIP	0.001uF 10% 16V	C219	1-164-870-11	CERAMIC CHIP	68PF 5% 16V
	C113	1-164-864-11 CERAMIC CHIP	39PF 5% 16V	C220	1-164-876-11	CERAMIC CHIP	120PF 5% 16V
	C114	1-107-815-11 TANTAL. CHIP	2.2uF 20% 4V	C221	1-104-551-11	FILM CHIP	0.01uF 5% 16V
	C115	1-164-473-11 CERAMIC CHIP	820PF 10% 50V	C222	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V
	C116	1-164-874-11 CERAMIC CHIP	100PF 5% 16V	C223	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V
	C117	1-164-868-11 CERAMIC CHIP	56PF 5% 16V	C224	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V
	C118	1-164-876-11 CERAMIC CHIP	120PF 5% 16V	C225	1-165-128-11	CERAMIC CHIP	0.22uF 16V
	C119	1-164-870-11 CERAMIC CHIP	68PF 5% 16V	C226	1-164-876-11	CERAMIC CHIP	120PF 5% 16V
	C120	1-164-876-11 CERAMIC CHIP	120PF 5% 16V	C229	1-164-949-11	CERAMIC CHIP	0.047uF 16V
	C121	1-104-551-11 FILM CHIP	0.01uF 5% 16V	C231	1-107-812-11	TANTAL. CHIP	4.7uF 20% 6.3V
	C122	1-135-337-11 TANTAL. CHIP	1uF 20% 6.3V	C233	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
	C123	1-164-939-11 CERAMIC CHIP	0.0022uF 10% 16V				(EXCEPT E, JE)
	C124	1-135-337-11 TANTAL. CHIP	1uF 20% 6.3V	C234	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
	C125	1-165-128-11 CERAMIC CHIP	0.22uF 16V				(EXCEPT E, JE)
	C126	1-164-876-11 CERAMIC CHIP	120PF 5% 16V	C235	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
	C129	1-164-949-11 CERAMIC CHIP	0.047uF 16V				(EXCEPT E, JE)
	C131	1-107-812-11 TANTAL. CHIP	4.7uF 20% 6.3V	C301	1-104-630-11	TANTAL. CHIP	33uF 20% 6.3V
	C133	1-164-937-11 CERAMIC CHIP	0.001uF 10% 16V	C302	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V
		(EXCEPT E, JE)		C303	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
	C134	1-164-937-11 CERAMIC CHIP	0.001uF 10% 16V	C304	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V
		(EXCEPT E, JE)		C308	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V
	C135	1-164-937-11 CERAMIC CHIP	0.001uF 10% 16V	C309	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
		(EXCEPT E, JE)		C310	1-164-949-11	CERAMIC CHIP	0.047uF 16V
				C311	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V
				C312	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V

# MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C313	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C508	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
C314	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	C509	1-107-811-11	TANTAL. CHIP	47uF 20% 4V
C315	1-104-847-11	TANTAL. CHIP	22uF 20% 4V				
C316	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C510	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V
				C511	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
C317	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C512	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V
C318	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C513	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
C319	1-107-813-11	TANTAL. CHIP	10uF 20% 6.3V	C514	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C320	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V				
C321	1-104-929-11	TANTAL. CHIP	22uF 20% 6.3V	C519	1-104-929-11	TANTAL. CHIP	22uF 20% 6.3V
				C520	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
C322	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C521	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C324	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C522	1-135-191-21	TANTAL. CHIP	0.22uF 10% 20V
C325	1-164-346-11	CERAMIC CHIP	1uF 16V	C523	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C326	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V				
C327	1-164-949-11	CERAMIC CHIP	0.047uF 16V	C524	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
				C525	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V
C328	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V	C526	1-164-949-11	CERAMIC CHIP	0.047uF 16V
C329	1-164-949-11	CERAMIC CHIP	0.047uF 16V	C527	1-162-979-11	CERAMIC CHIP	0.0027uF 10% 50V
C330	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C529	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V
C333	1-164-360-11	CERAMIC CHIP	0.1uF 16V				
C334	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C530	1-164-874-11	CERAMIC CHIP	100PF 5% 16V
				C531	1-164-941-11	CERAMIC CHIP	0.0047uF 10% 16V
C335	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C532	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C336	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V	C533	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C337	1-107-812-11	TANTAL. CHIP	4.7uF 20% 6.3V	C534	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C338	1-107-812-11	TANTAL. CHIP	4.7uF 20% 6.3V				
C340	1-104-630-11	TANTAL. CHIP	33uF 20% 6.3V	C535	1-164-933-11	CERAMIC CHIP	220PF 10% 16V
				C536	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V
C341	1-104-630-11	TANTAL. CHIP	33uF 20% 6.3V	C537	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C342	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	C538	1-164-949-11	CERAMIC CHIP	0.047uF 16V
C343	1-135-337-11	TANTAL. CHIP	1uF 20% 6.3V	C539	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C344	1-107-815-11	TANTAL. CHIP	2.2uF 20% 4V				
C345	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V	C540	1-165-112-11	CERAMIC CHIP	0.33uF 16V
				C541	1-164-941-11	CERAMIC CHIP	0.0047uF 10% 16V
C346	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C542	1-104-813-11	TANTAL. CHIP	10uF 20% 16V
C347	1-107-816-11	TANTAL. CHIP	0.68uF 20% 10V	C543	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C348	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C544	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C350	1-164-874-11	CERAMIC CHIP	100PF 5% 16V				
C351	1-164-949-11	CERAMIC CHIP	0.047uF 16V	C545	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
				C546	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C352	1-164-949-11	CERAMIC CHIP	0.047uF 16V	C547	1-164-874-11	CERAMIC CHIP	100PF 5% 16V
C354	1-107-816-11	TANTAL. CHIP	0.68uF 20% 10V	C548	1-164-933-11	CERAMIC CHIP	220PF 10% 16V
C355	1-107-813-11	TANTAL. CHIP	10uF 20% 6.3V	C549	1-164-490-11	CERAMIC CHIP	0.068uF 16V
C358	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V				
C359	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V (EXCEPT E, JE)	C550	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
				C551	1-164-916-11	CERAMIC CHIP	82PF 5% 16V
C366	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V (EXCEPT E, JE)	C552	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C368	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V (EXCEPT E, JE)	C553	1-164-949-11	CERAMIC CHIP	0.047uF 16V
C369	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V (EXCEPT E, JE)	C554	1-164-949-11	CERAMIC CHIP	0.047uF 16V
C501	1-104-929-11	TANTAL. CHIP	22uF 20% 6.3V				
C502	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C555	1-164-874-11	CERAMIC CHIP	100PF 5% 16V
				C556	1-107-811-11	TANTAL. CHIP	47uF 20% 4V
C503	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C557	1-164-949-11	CERAMIC CHIP	0.047uF 16V
C504	1-107-811-11	TANTAL. CHIP	47uF 20% 4V	C558	1-164-949-11	CERAMIC CHIP	0.047uF 16V
C506	1-107-813-11	TANTAL. CHIP	10uF 20% 6.3V	C561	1-104-929-11	TANTAL. CHIP	22uF 20% 6.3V
				C565	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V
				C567	1-164-949-11	CERAMIC CHIP	0.047uF 16V
				C570	1-164-949-11	CERAMIC CHIP	0.047uF 16V

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
C572	1-104-929-11	TANTAL. CHIP	22uF	20%	6.3V		C815	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C574	1-164-005-11	CERAMIC CHIP	0.47uF		25V		C820	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C578	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V		C821	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C581	1-135-246-11	TANTAL. CHIP	33uF	20%	6.3V		C822	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C582	1-135-208-11	TANTAL. CHIP	1uF	10%	10V		C823	1-164-936-11	CERAMIC CHIP	680PF	10%	16V	
C586	1-164-346-11	CERAMIC CHIP	1uF		16V		C824	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C587	1-164-346-11	CERAMIC CHIP	1uF		16V		C826	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C588	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C827	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C589	1-164-346-11	CERAMIC CHIP	1uF		16V		C830	1-164-346-11	CERAMIC CHIP	1uF		16V	
C590	1-164-346-11	CERAMIC CHIP	1uF		16V		C831	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	
C591	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C832	1-165-112-11	CERAMIC CHIP	0.33uF		16V	
C592	1-164-346-11	CERAMIC CHIP	1uF		16V		C833	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C593	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C834	1-104-630-11	TANTAL. CHIP	33uF	20%	6.3V	
C596	1-135-208-11	TANTAL. CHIP	1uF	10%	10V		C835	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	
C601	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V		C838	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C602	1-164-874-11	CERAMIC CHIP	100PF	5%	16V		C839	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C603	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V		C840	1-165-112-11	CERAMIC CHIP	0.33uF		16V	
C604	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V		C841	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C605	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V		C842	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C606	1-162-952-11	CERAMIC CHIP	82PF	5%	50V		C843	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C608	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C844	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C622	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V		C5013	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V	
C623	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C5014	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V	
C624	1-104-700-11	CERAMIC CHIP	0.027uF	10%	16V		C5015	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C626	1-164-005-11	CERAMIC CHIP	0.47uF		25V		C5016	1-164-949-11	CERAMIC CHIP	0.047uF		16V	
C627	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C5022	1-164-363-11	CERAMIC CHIP	560PF	5%	50V	
C628	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C5026	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	
C629	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C5030	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V	
C631	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C5031	1-107-814-11	TANTAL. CHIP	33uF	20%	10V	
C632	1-164-949-11	CERAMIC CHIP	0.047uF		16V		C5056	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	
C645	1-109-847-11	TANTAL. CHIP	0.47uF	20%	16V		C5057	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	
C646	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V		(EXCEPT E, JE)						
C647	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V		C5059	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	
C658	1-164-847-11	CERAMIC CHIP	7PF	0.5PF	16V		C5092	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V	
C659	1-164-847-11	CERAMIC CHIP	7PF	0.5PF	16V		C5094	1-107-814-11	TANTAL. CHIP	33uF	20%	10V	
C660	1-164-005-11	CERAMIC CHIP	0.47uF		25V		C5095	1-104-700-11	CERAMIC CHIP	0.027uF	10%	16V	
C661	1-165-112-11	CERAMIC CHIP	0.33uF		16V		C5096	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V	
C662	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C5097	1-107-817-11	TANTAL. CHIP	0.33uF	20%	16V	
C663	1-165-112-11	CERAMIC CHIP	0.33uF		16V		C5098	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C664	1-107-820-11	CERAMIC CHIP	0.1uF		16V		< CONNECTOR >						
C801	1-104-813-11	TANTAL. CHIP	10uF	20%	16V		CN501	1-573-931-11	CONNECTOR, FFC/FPC (ZIF) 22P				
C802	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V		CN801	1-573-927-11	CONNECTOR, FFC/FPC (ZIF) 18P				
C803	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V		CN802	1-573-346-21	CONNECTOR, FFC/FPC 6P				
C805	1-164-949-11	CERAMIC CHIP	0.047uF		16V		CN803	1-573-357-11	CONNECTOR, FFC/FPC 17P				
C806	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V		CN804	1-573-928-11	CONNECTOR, FFC/FPC (ZIF) 19P.				
C808	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V		< DIODE >						
C809	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V		D301	8-719-046-90	DIODE MA2S111				
C810	1-164-949-11	CERAMIC CHIP	0.047uF		16V		D302	8-719-046-90	DIODE MA2S111				
C811	1-164-949-11	CERAMIC CHIP	0.047uF		16V								
C813	1-164-949-11	CERAMIC CHIP	0.047uF		16V								

# MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D303	8-719-046-88	DIODE MA2S082		IC305	8-759-252-90	IC TLV2362IPW-ELM1500	
D304	8-719-046-88	DIODE MA2S082		IC306	8-759-252-39	IC AK4502-VS-E1	
D305	8-719-046-88	DIODE MA2S082		IC307	8-759-252-90	IC TLV2362IPW-ELM1500	
D307	8-719-989-03	DIODE DAN222		IC308	8-759-166-95	IC LA4805V-TLM	
D308	8-719-989-00	DIODE DA221		IC309	8-759-165-04	IC TK11230MTL	
D309	8-719-989-03	DIODE DAN222		IC310	8-759-234-77	IC TC4S66F	
D310	8-719-026-26	DIODE MA786WK		IC311	8-759-252-43	IC TK15210MTL	
D501	8-719-975-33	DIODE RB110C		IC312	8-759-252-43	IC TK15210MTL	
D504	8-719-023-69	DIODE SB007T03Q		IC314	8-759-255-51	IC DS1267E-50	
D505	8-719-031-17	DIODE SB007-03Q		IC315	8-759-255-51	IC DS1267E-50	
D506	8-719-046-88	DIODE MA2S082		IC316	8-759-710-79	IC NJM2107F	
D601	8-719-981-25	DIODE KV1450		IC317	8-759-234-77	IC TC4S66F	
D801	8-719-938-72	DIODE SB01-05CP		IC318	8-759-255-92	IC XC62AP3201MR	
D802	8-719-420-79	DIODE MA724		IC319	8-759-257-94	IC TK11245AMTL	
D803	8-719-989-08	DIODE RB717F		IC320	8-759-173-00	IC XC61AN1102MR	
D804	8-719-046-84	DIODE MA2S728		IC501	8-752-068-49	IC CXA1861R	
D805	8-719-988-82	DIODE RB715F		IC502	8-752-064-33	IC CXA1380N	
D806	8-719-989-08	DIODE RB717F		IC505	8-759-082-60	IC TC7S66FU	
D808	8-719-033-72	LED CL-181UR-C-TS (REC →)		IC506	8-759-252-31	IC MB88347APFV-EF	
D809	8-719-989-08	DIODE RB717F		IC507	8-752-055-94	IC CXA1602R	
D810	8-719-989-08	DIODE RB717F		IC508	8-759-058-57	IC TC7S04FU-TE85L	
D811	8-719-046-84	DIODE MA2S728		IC509	8-759-084-72	IC MPC1718FU	
D812	8-719-046-84	DIODE MA2S728		IC510	8-759-058-61	IC TC7S08FU-TE85L	
D813	8-719-046-84	DIODE MA2S728		IC511	8-759-252-38	IC CXD8498N-ELL2000	
D814	8-719-046-84	DIODE MA2S728		IC512	8-759-710-79	IC NJM2107F	
< FERRITE BEAD >				IC513	8-759-255-49	IC DS1267E-10	
FB103	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC514	8-759-255-51	IC DS1267E-50	
FB135	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC515	8-759-082-60	IC TC7S66FU	
FB203	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC516	8-759-058-61	IC TC7S08FU	
FB235	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC517	8-759-259-06	IC XC61AN1902MR	
FB301	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC601	8-752-364-98	IC CXD2525R-1	
FB302	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC602	8-752-363-57	IC CXD2526AR	
FB303	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC603	8-752-365-90	IC CXD2531BR	
FB304	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC604	8-759-255-94	IC XC62AP3102MR	
FB305	1-414-228-11	INDUCTOR, FERRITE BEAD 600 (EXCEPT E, JE)		IC605	8-752-362-58	IC CXK41V4400ATM-10	
FB310	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC606	8-759-082-61	IC TC4W53FU	
FB311	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC607	8-759-710-79	IC NJM2107F	
FB601	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC608	8-759-255-94	IC XC62AP3102MR	
FB602	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC801	8-759-252-27	IC RS5RJ3720B	
FB603	1-414-228-11	INDUCTOR, FERRITE BEAD 600		IC802	8-759-252-54	IC S-80745SL-A9	
FB610	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC803	8-759-267-57	IC MB89133A-PFM-170	
FB623	1-414-385-11	INDUCTOR, FERRITE BEAD 1K (EXCEPT E, JE)		IC804	8-759-252-57	IC S-2900AUT	
FB840	1-414-228-11	INDUCTOR, FERRITE BEAD 600 (EXCEPT E, JE)		IC805	8-752-852-81	IC XCP81848-603R	
< IC >				IC806	8-759-252-29	IC S-80725SL-AN	
IC301	8-759-257-94	IC TK11245AMTL		IC807	8-759-255-94	IC XC62AP3102MR	
IC302	8-759-711-85	IC NJM4580E-D		IC808	8-759-082-61	IC TC4W53FU	
IC303	8-759-512-62	IC CXA1497N		IC809	8-759-259-06	IC XC61AN1902MR	
IC304	8-759-252-90	IC TLV2362IPW-ELM1500		IC810	8-759-259-06	IC XC61AN1902MR	
				IC811	8-759-058-57	IC TC7S04FU	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< JACK >				Q512	8-729-928-27	TRANSISTOR	DTA144EE
J201	8-759-252-45	IC GP1F365R (OPT/LINE IN)		Q514	8-729-024-46	TRANSISTOR	2SK2035
J301	1-764-460-21	JACK (MIC, PLUG IN POWER)		Q515	8-729-930-13	TRANSISTOR	UMH2
J302	1-764-453-11	JACK (Q/REMOTE)		Q801	8-729-927-99	TRANSISTOR	2SC4617
J303	1-764-460-11	JACK (LINE OUT)		Q802	8-729-930-00	TRANSISTOR	UMD2
< COIL >				Q803	8-729-928-81	TRANSISTOR	DTC144EE
L308	1-412-988-11	INDUCTOR 5.6uH (EXCEPT E, JE)		Q804	8-729-928-81	TRANSISTOR	DTC144EE
L501	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		Q805	8-729-927-99	TRANSISTOR	2SC4617
L502	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		Q806	8-729-928-81	TRANSISTOR	DTC144EE
L503	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		Q808	8-729-930-00	TRANSISTOR	UMD2
L504	1-402-831-21	COIL, CHOKE 68uH		Q809	8-729-023-89	TRANSISTOR	2SJ305
L505	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		< RESISTOR >			
L506	1-414-203-11	INDUCTOR 100uH		R101	1-208-703-11	METAL CHIP	6.8K 0.50% 1/16W
L507	1-412-991-11	INDUCTOR 10uH		R102	1-218-975-11	METAL GLAZE	68K 5% 1/16W
L508	1-414-203-11	INDUCTOR 100uH		R103	1-216-864-11	METAL CHIP	0 5% 1/16W (E, JE)
L509	1-414-203-11	INDUCTOR 100uH		R107	1-208-699-11	METAL CHIP	4.7K 0.50% 1/16W
L603	1-414-357-41	INDUCTOR 1uH		R108	1-208-679-11	METAL CHIP	680 0.50% 1/16W
L801	1-412-031-11	INDUCTOR CHIP 47uH		R110	1-220-398-11	METAL GLAZE	1.5M 5% 1/16W
< LINE FILTER >				R111	1-218-734-11	METAL CHIP	56K 0.50% 1/16W
LF301	1-403-601-21	FILTER, COMMON MODE (EXCEPT E, JE)		R112	1-208-714-11	METAL CHIP	20K 0.50% 1/16W
LF302	1-403-601-21	FILTER, COMMON MODE		R114	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
LF303	1-403-601-21	FILTER, COMMON MODE (EXCEPT E, JE)		R115	1-208-681-11	METAL CHIP	820 0.50% 1/16W
LF304	1-403-601-21	FILTER, COMMON MODE (EXCEPT E, JE)		R116	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
< TRANSISTOR >				R117	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
Q101	8-729-929-32	TRANSISTOR DTC144TE		R118	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
Q102	8-729-144-16	TRANSISTOR 2SD2228-D44D45		R119	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
Q201	8-729-929-32	TRANSISTOR DTC144TE		R120	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
Q202	8-729-144-16	TRANSISTOR 2SD2228-D44D45		R121	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
Q302	8-729-930-13	TRANSISTOR UMH2		R122	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
Q303	8-729-928-81	TRANSISTOR DTC144EE		R123	1-218-734-11	METAL CHIP	56K 0.50% 1/16W
Q304	8-729-144-16	TRANSISTOR 2SD2228-D44D45		R124	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
Q305	8-729-928-31	TRANSISTOR DTA114YE		R125	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
Q306	8-729-927-99	TRANSISTOR 2SC4617		R126	1-218-736-11	METAL CHIP	68K 0.50% 1/16W
Q307	8-729-928-81	TRANSISTOR DTC144EE		R127	1-208-719-11	METAL CHIP	33K 0.50% 1/16W
Q308	8-729-928-81	TRANSISTOR DTC144EE		R128	1-208-719-11	METAL CHIP	33K 0.50% 1/16W
Q309	8-729-930-00	TRANSISTOR UMD2		R129	1-218-736-11	METAL CHIP	68K 0.50% 1/16W
Q310	8-729-930-05	TRANSISTOR UMD3		R130	1-208-696-11	METAL CHIP	3.6K 0.50% 1/16W
Q311	8-729-930-00	TRANSISTOR UMD2		R131	1-208-685-11	METAL CHIP	1.2K 0.50% 1/16W
Q312	8-729-928-19	TRANSISTOR 2SA1774R		R132	1-218-989-11	METAL GLAZE	1M 5% 1/16W
Q313	8-729-930-05	TRANSISTOR UMD3		R133	1-216-789-11	METAL CHIP	2.2 5% 1/16W
Q501	8-729-422-39	TRANSISTOR XN4404		R134	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
Q502	8-729-928-27	TRANSISTOR DTA144EE		R135	1-216-864-11	METAL CHIP	0 5% 1/16W (E, JE)
Q503	8-729-928-85	TRANSISTOR DTC114YE		R136	1-218-990-11	METAL GLAZE	0 5% 1/16W
Q506	8-729-923-45	TRANSISTOR 2SB1308-QR		R139	1-218-945-11	METAL GLAZE	220 5% 1/16W
Q508	8-729-928-81	TRANSISTOR DTC144EE		R140	1-218-945-11	METAL GLAZE	220 5% 1/16W
Q510	8-729-023-89	TRANSISTOR 2SJ305		R141	1-218-977-11	METAL GLAZE	100K 5% 1/16W
Q511	8-729-927-59	TRANSISTOR UMZ1		R142	1-218-990-11	METAL GLAZE	0 5% 1/16W (E, JE)
				R143	1-218-990-11	METAL GLAZE	0 5% 1/16W (E, JE)
				R144	1-218-990-11	METAL GLAZE	0 5% 1/16W (E, JE)

# MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R201	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W	R318	1-208-719-11	METAL CHIP	33K	0.50%	1/16W
R202	1-218-975-11	METAL GLAZE	68K	5%	1/16W	R319	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R203	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R320	1-216-861-11	METAL CHIP	2.2M	5%	1/16W
R207	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R321	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R208	1-208-679-11	METAL CHIP	680	0.50%	1/16W	R322	1-208-719-11	METAL CHIP	33K	0.50%	1/16W
R210	1-218-988-11	METAL GLAZE	820K	5%	1/16W	R323	1-208-681-11	METAL CHIP	820	0.50%	1/16W
R211	1-218-734-11	METAL CHIP	56K	0.50%	1/16W	R324	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R212	1-208-714-11	METAL CHIP	20K	0.50%	1/16W	R325	1-220-162-11	METAL GLAZE	20	5%	1/16W
R214	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R326	1-216-861-11	METAL CHIP	2.2M	5%	1/16W
R215	1-208-681-11	METAL CHIP	820	0.50%	1/16W	R327	1-208-691-11	METAL GLAZE	2.2K	0.5%	1/16W
R216	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R328	1-208-691-11	METAL GLAZE	2.2K	0.5%	1/16W
R217	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R329	1-208-715-11	METAL CHIP	22K	0.50%	1/16W
R218	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R330	1-208-715-11	METAL CHIP	22K	0.50%	1/16W
R219	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R331	1-218-975-11	METAL GLAZE	68K	5%	1/16W
R220	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R332	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R221	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R333	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W
R222	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R334	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R223	1-218-734-11	METAL CHIP	56K	0.50%	1/16W	R335	1-208-715-11	METAL CHIP	22K	0.50%	1/16W
R224	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R337	1-216-789-11	METAL CHIP	2.2	5%	1/16W
R225	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R343	1-208-720-11	METAL CHIP	36K	0.50%	1/16W
R226	1-218-736-11	METAL CHIP	68K	0.50%	1/16W	R344	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R227	1-208-719-11	METAL CHIP	33K	0.50%	1/16W	R345	1-208-720-11	METAL CHIP	36K	0.50%	1/16W
R228	1-208-719-11	METAL CHIP	33K	0.50%	1/16W	R346	1-218-967-11	METAL GLAZE	15K	5%	1/16W
R229	1-218-736-11	METAL CHIP	68K	0.50%	1/16W	R347	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R230	1-208-696-11	METAL CHIP	3.6K	0.50%	1/16W	R348	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R231	1-208-685-11	METAL CHIP	1.2K	0.50%	1/16W	R350	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)
R232	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R351	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)
R233	1-216-789-11	METAL CHIP	2.2	5%	1/16W	R352	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)
R234	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R353	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R235	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R354	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R236	1-218-990-11	METAL GLAZE	0	5%	1/16W	R355	1-218-979-11	METAL GLAZE	150K	5%	1/16W
R239	1-218-945-11	METAL GLAZE	220	5%	1/16W	R356	1-218-985-11	METAL GLAZE	470K	5%	1/16W
R240	1-218-945-11	METAL GLAZE	220	5%	1/16W	R357	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R241	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R358	1-208-719-11	METAL CHIP	33K	0.50%	1/16W
R242	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)	R359	1-216-864-11	METAL CHIP	0	5%	1/16W
R243	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)	R501	1-218-979-11	METAL GLAZE	150K	5%	1/16W
R244	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)	R502	1-218-950-11	METAL GLAZE	560	5%	1/16W
R301	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R506	1-218-976-11	METAL GLAZE	82K	5%	1/16W
R304	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R507	1-218-957-11	METAL GLAZE	2.2K	5%	1/16W
R305	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R510	1-218-980-11	METAL GLAZE	180K	5%	1/16W
R306	1-208-721-11	METAL CHIP	39K	0.50%	1/16W	R511	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R307	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R512	1-220-214-11	METAL GLAZE	430K	5%	1/16W
R308	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R513	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R309	1-216-864-11	METAL CHIP	0	5%	1/16W	R514	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R310	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R515	1-218-980-11	METAL GLAZE	180K	5%	1/16W
R312	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R516	1-218-975-11	METAL GLAZE	68K	5%	1/16W
R314	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R518	1-208-701-11	METAL CHIP	5.6K	0.50%	1/16W
R315	1-208-721-11	METAL CHIP	39K	0.50%	1/16W	R519	1-208-679-11	METAL CHIP	680	0.50%	1/16W
R316	1-220-209-11	METAL GLAZE	160K	5%	1/16W	R520	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R317	1-208-719-11	METAL CHIP	33K	0.50%	1/16W	R521	1-208-715-11	METAL CHIP	22K	0.50%	1/16W

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R522	1-208-701-11	METAL CHIP	5.6K	0.50%	1/16W	R617	1-216-864-11	METAL CHIP	0	5%	1/16W
R524	1-220-181-11	METAL GLAZE	750	5%	1/16W	R623	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R525	1-208-701-11	METAL CHIP	5.6K	0.50%	1/16W	R630	1-216-864-11	METAL CHIP	0	5%	1/16W
R526	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R631	1-218-990-11	METAL GLAZE	0	5%	1/16W
R527	1-218-967-11	METAL GLAZE	15K	5%	1/16W	R637	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R529	1-208-717-11	METAL CHIP	27K	0.50%	1/16W	R643	1-216-864-11	METAL CHIP	0	5%	1/16W
R531	1-218-941-11	METAL GLAZE	100	5%	1/16W	R655	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R533	1-218-945-11	METAL GLAZE	220	5%	1/16W	R656	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R535	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R661	1-218-984-11	METAL GLAZE	390K	5%	1/16W
R536	1-216-001-00	METAL CHIP	10	5%	1/10W	R802	1-202-974-11	METAL GLAZE	3.3M	5%	1/16W
R539	1-208-701-11	METAL CHIP	5.6K	0.50%	1/16W	R803	1-218-751-11	METAL CHIP	300K	0.50%	1/16W
R540	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W	R804	1-218-744-11	METAL CHIP	150K	0.50%	1/16W
R546	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R805	1-218-751-11	METAL CHIP	300K	0.50%	1/16W
R547	1-218-957-11	METAL GLAZE	2.2K	5%	1/16W	R806	1-218-744-11	METAL CHIP	150K	0.50%	1/16W
R549	1-218-957-11	METAL GLAZE	2.2K	5%	1/16W	R808	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R550	1-218-978-11	METAL GLAZE	120K	5%	1/16W	R810	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R551	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R812	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R553	1-218-968-11	METAL GLAZE	18K	5%	1/16W	R813	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R556	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R814	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R557	1-220-398-11	METAL GLAZE	1.5M	5%	1/16W	R815	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R558	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R816	1-208-706-11	METAL CHIP	9.1K	0.50%	1/16W
R559	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R817	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R561	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R818	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R565	1-208-681-11	METAL CHIP	820	0.50%	1/16W	R819	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R566	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R820	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R567	1-218-986-11	METAL GLAZE	560K	5%	1/16W	R821	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R568	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R822	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R569	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R823	1-218-732-11	METAL CHIP	47K	0.50%	1/16W
R571	1-218-949-11	METAL GLAZE	470	5%	1/16W	R824	1-218-749-11	METAL CHIP	240K	0.50%	1/16W
R572	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R825	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R573	1-218-975-11	METAL GLAZE	68K	5%	1/16W	R826	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R574	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R827	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W
R575	1-218-981-11	METAL GLAZE	220K	5%	1/16W	R828	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R576	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R829	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R577	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R830	1-220-179-11	METAL GLAZE	510	5%	1/16W
R578	1-218-980-11	METAL GLAZE	180K	5%	1/16W	R831	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W
R581	1-218-967-11	METAL GLAZE	15K	5%	1/16W	R832	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R582	1-208-709-11	METAL CHIP	12K	0.50%	1/16W	R833	1-202-974-11	METAL GLAZE	3.3M	5%	1/16W
R590	1-218-983-11	METAL GLAZE	330K	5%	1/16W	R834	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R592	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R835	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R593	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R836	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R594	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R837	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R601	1-218-967-11	METAL GLAZE	15K	5%	1/16W	R838	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R602	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R839	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R603	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W	R840	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R604	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R841	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R610	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R842	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R613	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R843	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R614	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W	R844	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R615	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R845	1-218-973-11	METAL GLAZE	47K	5%	1/16W

# MAIN

# MECHA CON

Ref. No.	Part No.	Description	Remark
R846	1-218-989-11	METAL GLAZE	1M 5% 1/16W
R860	1-218-977-11	METAL GLAZE	100K 5% 1/16W
R861	1-218-988-11	METAL GLAZE	820K 5% 1/16W
R862	1-218-978-11	METAL GLAZE	120K 5% 1/16W
R863	1-218-989-11	METAL GLAZE	1M 5% 1/16W
R864	1-208-685-11	METAL CHIP	1.2K 0.50% 1/16W
R865	1-218-965-11	METAL GLAZE	10K 5% 1/16W
R866	1-218-977-11	METAL GLAZE	100K 5% 1/16W
R867	1-218-988-11	METAL GLAZE	820K 5% 1/16W
R868	1-218-977-11	METAL GLAZE	100K 5% 1/16W
R870	1-218-977-11	METAL GLAZE	100K 5% 1/16W
R871	1-218-983-11	METAL GLAZE	330K 5% 1/16W
R872	1-218-965-11	METAL GLAZE	10K 5% 1/16W
R873	1-218-977-11	METAL GLAZE	100K 5% 1/16W
R874	1-218-985-11	METAL GLAZE	470K 5% 1/16W
R875	1-218-985-11	METAL GLAZE	470K 5% 1/16W
R876	1-202-974-11	METAL GLAZE	3.3M 5% 1/16W
R877	1-202-974-11	METAL GLAZE	3.3M 5% 1/16W
R878	1-202-974-11	METAL GLAZE	3.3M 5% 1/16W
R880	1-202-974-11	METAL GLAZE	3.3M 5% 1/16W
R881	1-202-974-11	METAL GLAZE	3.3M 5% 1/16W
R882	1-218-990-11	METAL GLAZE	0 5% 1/16W
R5001	1-208-685-11	METAL CHIP	1.2K 0.50% 1/16W
R5010	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
R5011	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
R5012	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
R5014	1-208-683-11	METAL CHIP	1K 0.50% 1/16W
R5015	1-208-719-11	METAL CHIP	33K 0.50% 1/16W
R5016	1-208-719-11	METAL CHIP	33K 0.50% 1/16W
R5017	1-218-975-11	METAL GLAZE	68K 5% 1/16W
R5018	1-218-975-11	METAL GLAZE	68K 5% 1/16W
R5020	1-216-860-11	METAL GLAZE	1.8M 5% 1/16W
R5021	1-218-981-11	METAL GLAZE	220K 5% 1/16W
R5027	1-218-965-11	METAL GLAZE	10K 5% 1/16W
R5030	1-218-978-11	METAL GLAZE	120K 5% 1/16W
R5032	1-218-975-11	METAL GLAZE	68K 5% 1/16W
R5039	1-218-990-11	METAL GLAZE	0 5% 1/16W
R5055	1-218-977-11	METAL GLAZE	100K 5% 1/16W
R5056	1-218-990-11	METAL GLAZE	0 5% 1/16W
R5067	1-218-980-11	METAL GLAZE	180K 5% 1/16W
R5081	1-208-703-11	METAL CHIP	6.8K 0.50% 1/16W
R5082	1-216-001-00	METAL CHIP	10 5% 1/10W
R5092	1-218-944-11	METAL GLAZE	180 5% 1/16W
R5095	1-220-398-11	METAL GLAZE	1.5M 5% 1/16W
R5098	1-208-719-11	METAL CHIP	33K 0.50% 1/16W
R5099	1-208-717-11	METAL CHIP	27K 0.50% 1/16W
R5100	1-208-715-11	METAL CHIP	22K 0.50% 1/16W
R5102	1-218-989-11	METAL GLAZE	1M 5% 1/16W
R5103	1-208-699-11	METAL CHIP	4.7K 0.50% 1/16W
R5105	1-218-965-11	METAL GLAZE	10K 5% 1/16W

Ref. No.	Part No.	Description	Remark
R5107	1-208-721-11	METAL CHIP	39K 0.50% 1/16W
R5108	1-208-721-11	METAL CHIP	39K 0.50% 1/16W
R5109	1-218-965-11	METAL GLAZE	10K 5% 1/16W
R5116	1-216-796-11	METAL GLAZE	8.2 5% 1/16W
R5117	1-218-965-11	METAL GLAZE	10K 5% 1/16W
R5200	1-216-864-11	METAL CHIP	0 5% 1/16W
R5202	1-218-990-11	METAL GLAZE	0 5% 1/16W
R5206	1-216-013-00	METAL CHIP	33 5% 1/10W
R5207	1-216-013-00	METAL CHIP	33 5% 1/10W
< SWITCH >			
S801	1-572-467-31	SWITCH, PUSH (1 KEY) (REC →)	
S802	1-571-275-31	SWITCH, SLIDE (HOLD →)	
S803	1-692-088-11	SWITCH, TACTILE (BASS BOOST)	
S804	1-572-473-11	SWITCH, TACTIL (CLOCK SET)	
S805	1-572-473-11	SWITCH, TACTIL (RESET)	
< VIBRATOR >			
X602	1-760-173-11	VIBRATOR, CRYSTAL (45MHz)	
X801	1-760-172-11	VIBRATOR, CERAMIC (4.19MHz)	
X802	1-579-886-21	VIBRATOR, CRYSTAL (32.768kHz)	
X803	1-760-174-11	VIBRATOR, CERAMIC (12MHz)	
*****			
A-3276-233-A MECHA CON BOARD, COMPLETE			
*****			
1-651-017-11 CLV FLEXIBLE BOARD			
< CAPACITOR >			
C701	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C702	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C703	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C704	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C705	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C706	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C707	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C708	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C709	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C710	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C711	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C712	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C713	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C714	1-107-813-11	TANTAL. CHIP	10uF 20% 6.3V
C715	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C716	1-107-813-11	TANTAL. CHIP	10uF 20% 6.3V
< CONNECTOR >			
* CN701	1-573-925-11	CONNECTOR, FFC/FPC (Z1F) 16P	
CN702	1-573-915-11	CONNECTOR, FFC/FPC (Z1F) 6P	



<b>MECHA CON</b>	<b>REC</b>
------------------	------------

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
		< IC >					
IC701	8-759-098-52	IC CXA-8027N		Q904	8-729-024-44	TRANSISTOR 2SK2315TYTR	
IC702	8-759-252-32	IC MPC1730VMEL				< RESISTOR >	
		< TRANSISTOR >		R901	1-216-853-11	METAL CHIP 470K 5% 1/16W	
Q701	8-729-905-12	TRANSISTOR DTA144EU		R902	1-216-853-11	METAL CHIP 470K 5% 1/16W	
Q702	8-729-904-07	TRANSISTOR FMG2		R903	1-216-853-11	METAL CHIP 470K 5% 1/16W	
		< RESISTOR >		R904	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R701	1-218-716-11	METAL CHIP 10K 0.50% 1/16W		R905	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R702	1-218-716-11	METAL CHIP 10K 0.50% 1/16W				*****	
R703	1-216-815-11	METAL CHIP 330 5% 1/16W				MISCELLANEOUS	
R704	1-217-671-11	METAL CHIP 1 5% 1/10W				*****	
R705	1-217-671-11	METAL CHIP 1 5% 1/10W		6	1-810-410-11	LCD MODULE	
R706	1-216-827-11	METAL CHIP 3.3K 5% 1/16W		57	1-467-509-11	DD CONVERTER UNIT	
R708	1-216-845-11	METAL CHIP 100K 5% 1/16W		709	1-651-016-11	REC FLEXIBLE BOARD	
R709	1-216-845-11	METAL CHIP 100K 5% 1/16W		△710	A-3300-221-A	OPTICAL PICK-UP BLOCK	
		< SWITCH >		711	1-651-018-11	SLED FLEXIBLE BOARD	
S701	1-692-849-21	SWITCH, PUSH (1 KEY) (MEDIA)		754	1-651-017-11	CLV FLEXIBLE BOARD	
S702	1-692-847-21	SWITCH, PUSH (1 KEY) (PROTECT)		761	1-651-015-11	MD FLEXIBLE BOARD	
S703	1-692-377-31	SWITCH, PUSH (1 KEY) (REFLECT)		M901	1-698-313-11	MOTOR	
S704	1-572-467-31	SWITCH, PUSH (1 KEY) (INITIAL)		M902	A-3300-219-A	MOTOR BLOCK ASSY, SLED	
S705	1-572-467-31	SWITCH, PUSH (1 KEY) (INLIMMIT)		M903	A-3300-216-A	STEPPER BLOCK ASSY	
		*****				*****	
*	1-651-019-11	REC BOARD				ACCESSORIES & PACKING MATERIALS	
		*****				*****	
		< CAPACITOR >				1-467-505-11	REMOCON UNIT (RM-MZR2-MP)
C901	1-164-360-11	CERAMIC CHIP 0.1uF 16V		△	1-467-510-11	ADAPTOR, AC (AC-MZ60) (US, CND)	
C902	1-107-810-11	TANTAL. CHIP 33uF 20% 4V		△	1-467-511-11	ADAPTOR, AC (AC-MZ60) (AEP)	
C903	1-109-814-11	CAP, CHIP MICA 220PF 100V		△	1-467-512-11	ADAPTOR, AC (AC-MZ60) (UK)	
C904	1-165-112-11	CERAMIC CHIP 0.33uF 16V		△	1-467-513-11	ADAPTOR, AC (AC-MZ60) (AUS)	
		< CONNECTOR >		△	1-467-514-31	ADAPTOR, AC (AC-MZ60) (E, JE)	
CN901	1-573-915-11	CONNECTOR, FFC/FPC (ZIF) 6P			1-528-501-11	BATTERY CASE	
CN902	1-573-915-11	CONNECTOR, FFC/FPC (ZIF) 6P			1-528-502-13	BATTERY Y, LITHIUM ION (LIP-12(H))	
		< DIODE >			1-559-906-32	CORD, CONNECTION	
D901	8-719-046-86	DIODE FIJ6TP		△	1-569-007-11	ADAPTER, CONVERSION 2P (E, JE)	
D902	8-719-046-86	DIODE FIJ6TP			3-758-089-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, SPANISH) (CND, AEP, E, JE)	
		< IC >			3-758-089-21	MANUAL, INSTRUCTION (ENGLISH) (US, UK, AUS)	
IC901	8-759-252-34	IC MC74ACT540DTEL			3-758-089-41	MANUAL, INSTRUCTION (DUTCH, SWEDISH, ITALIAN, PORTUGUESE) (AEP)	
		< TRANSISTOR >			3-758-089-51	MANUAL, INSTRUCTION (JAPANESE, KOREAN) (JE)	
Q901	8-729-024-44	TRANSISTOR 2SK2315TYTR			4-963-933-01	CASE, CARRYING	
Q902	8-729-024-44	TRANSISTOR 2SK2315TYTR		*	4-964-419-01	CASE, INDIVIDUAL (JE)	
Q903	8-729-024-44	TRANSISTOR 2SK2315TYTR		*	4-964-420-01	CASE, ACCESSORY	
				*	4-964-926-01	CUSHION, MAIN	
				*	4-966-814-01	INDIVIDUAL CARTON (U)	
				*	4-966-819-01	INDIVIDUAL CARTON (CND, AEP, UK, E, AUS)	
					8-953-009-90	HEADPHONE MDR-014MP SET (US)	
					8-953-537-94	HEADPHONE MDR-E741MP/K2 SET (CND, AEP, UK, E, AUS, JE)	

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.



# MZ-R2

## SONY<sup>®</sup> SERVICE MANUAL

1994.05


*US Model*  
*Canadian Model*  
*AEP Model*  
*UK Model*  
*E Model*  
*Australian Model*  
*Tourist Model*

### SUPPLEMENT-1

File this Supplement with the Service Manual.

**Subject : Main board change**



New type identification :  
**[MAIN BOARD]** (SIDE A)

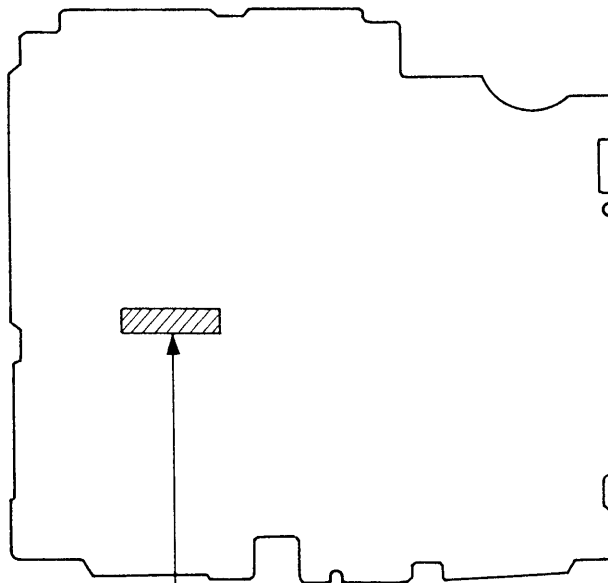


1-651-014-14




SCHEMATIC DIAGRAM — RF/SERVO SECTION —  
• Refer to page 19 for Printed Wiring Boards.  
• Refer to pages 65 to 70 of Service Manual for IC Block Diagrams.

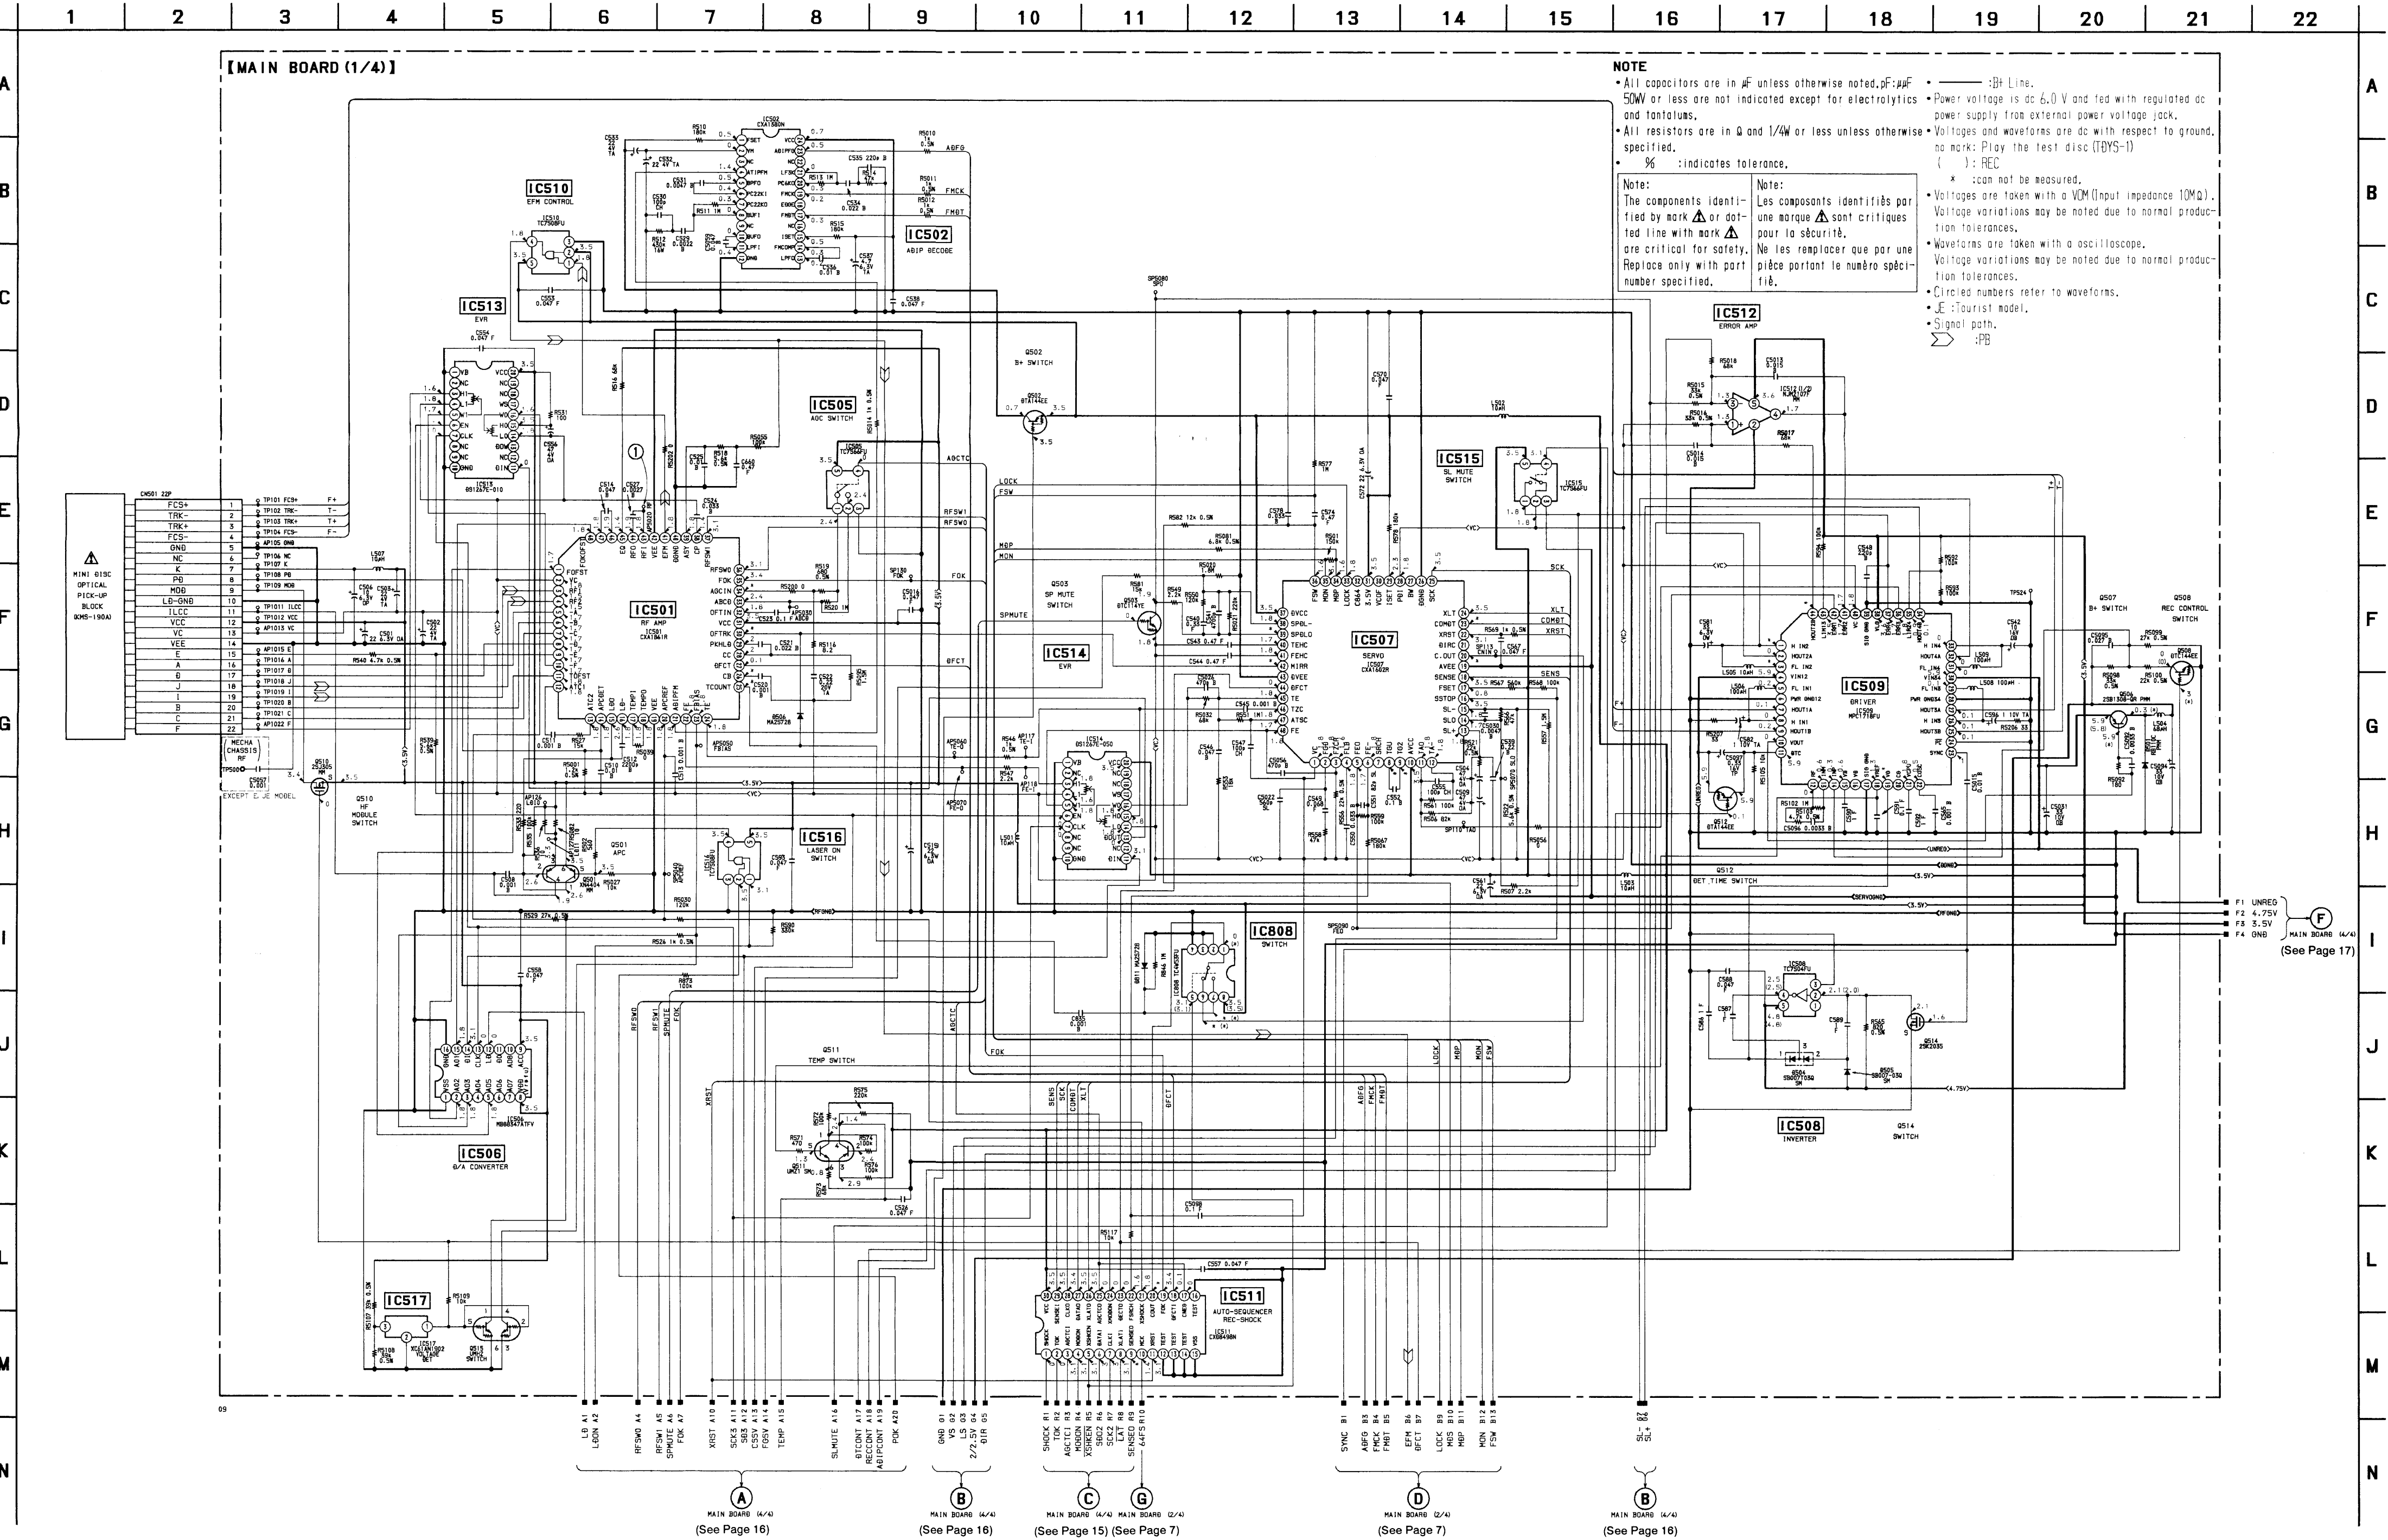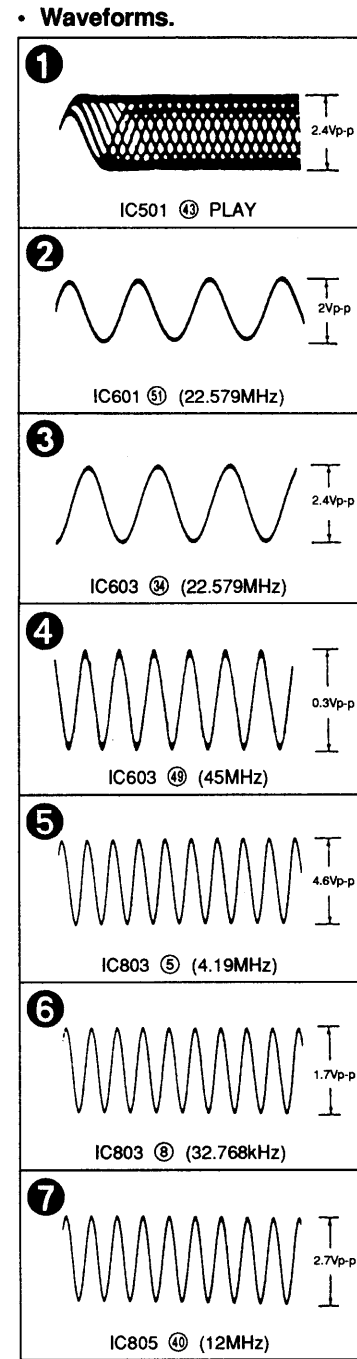


**SCHEMATIC DIAGRAM — PROCESS SECTION —**  
 • Refer to page 19 for Printed Wiring Boards.  
 • See page 3 for Waveforms.  
 • Refer to pages 34 to 41 of Service Manual for IC Pin Functions.  
 • Refer to pages 65 to 70 of Service Manual for IC Block Diagrams.

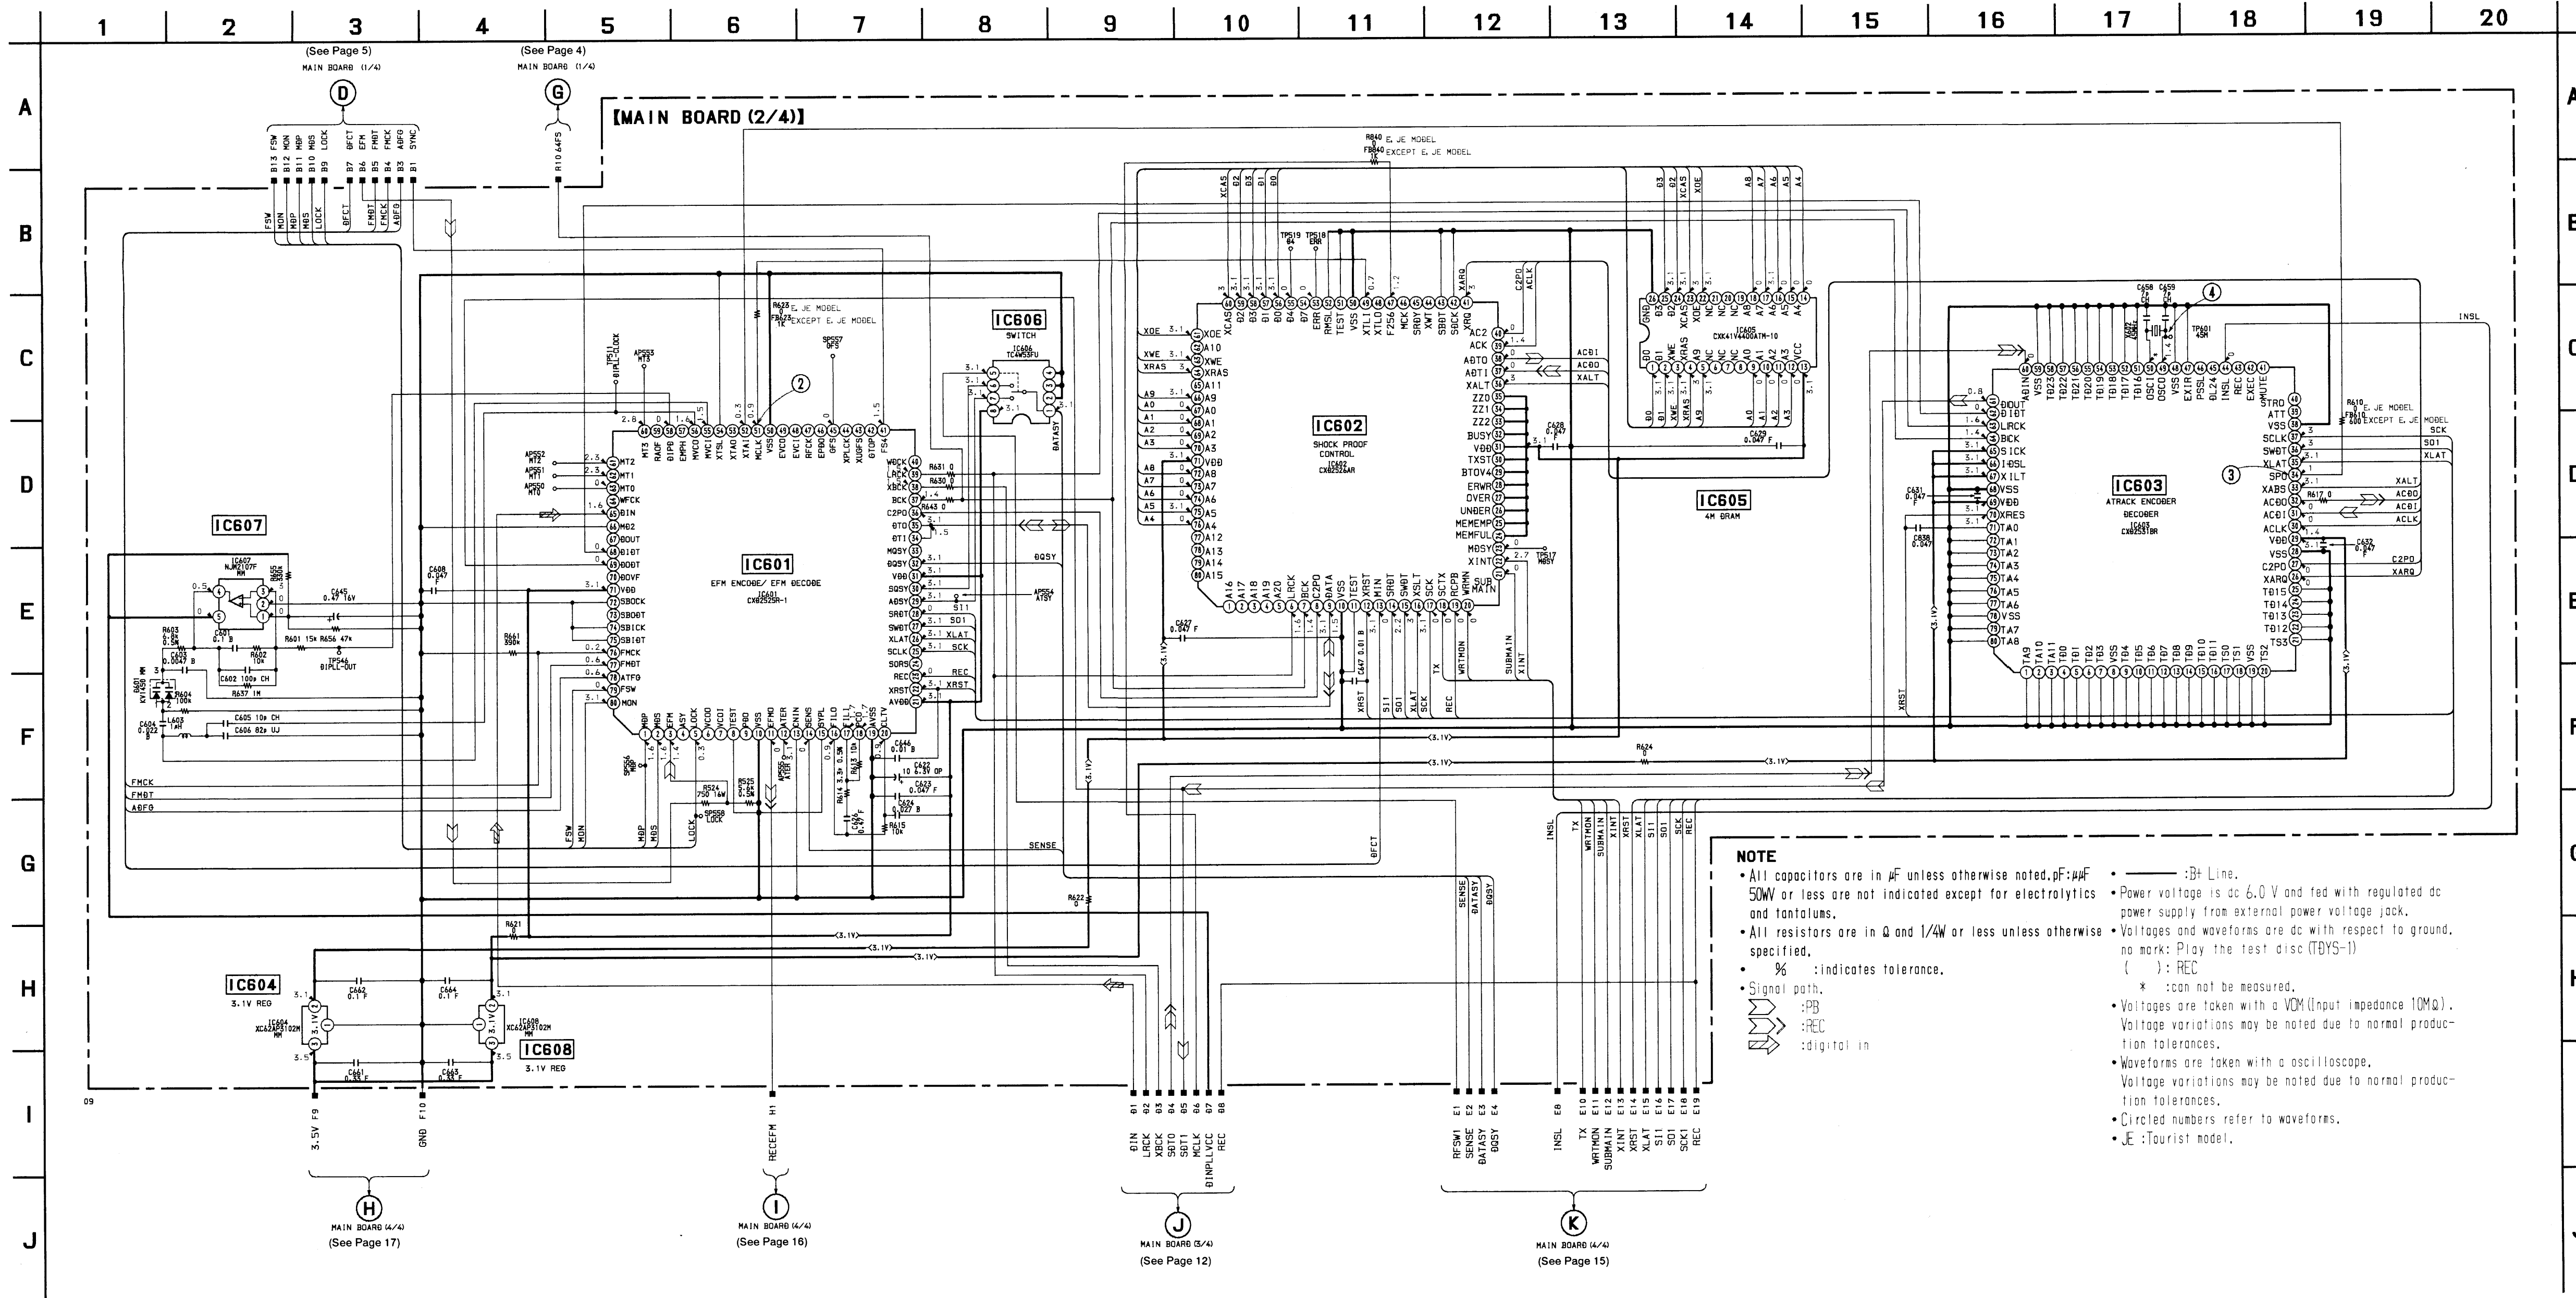




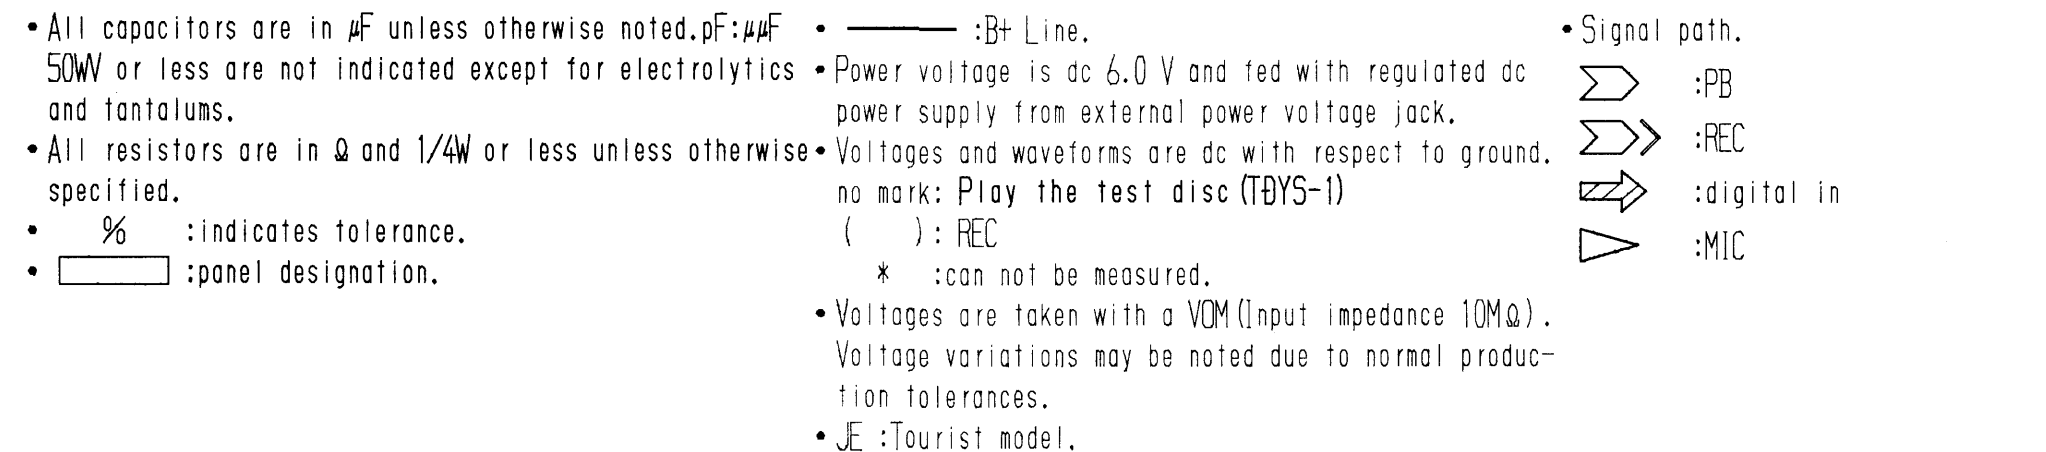

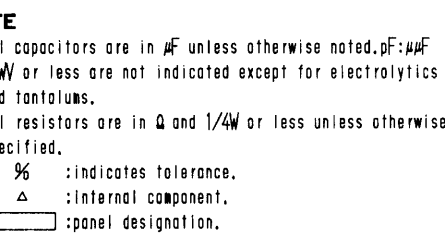



PRINTED WIRING BOARDS  
• Refer to pages 32, 33 of Service Manual for Semiconductor Lead Layouts.

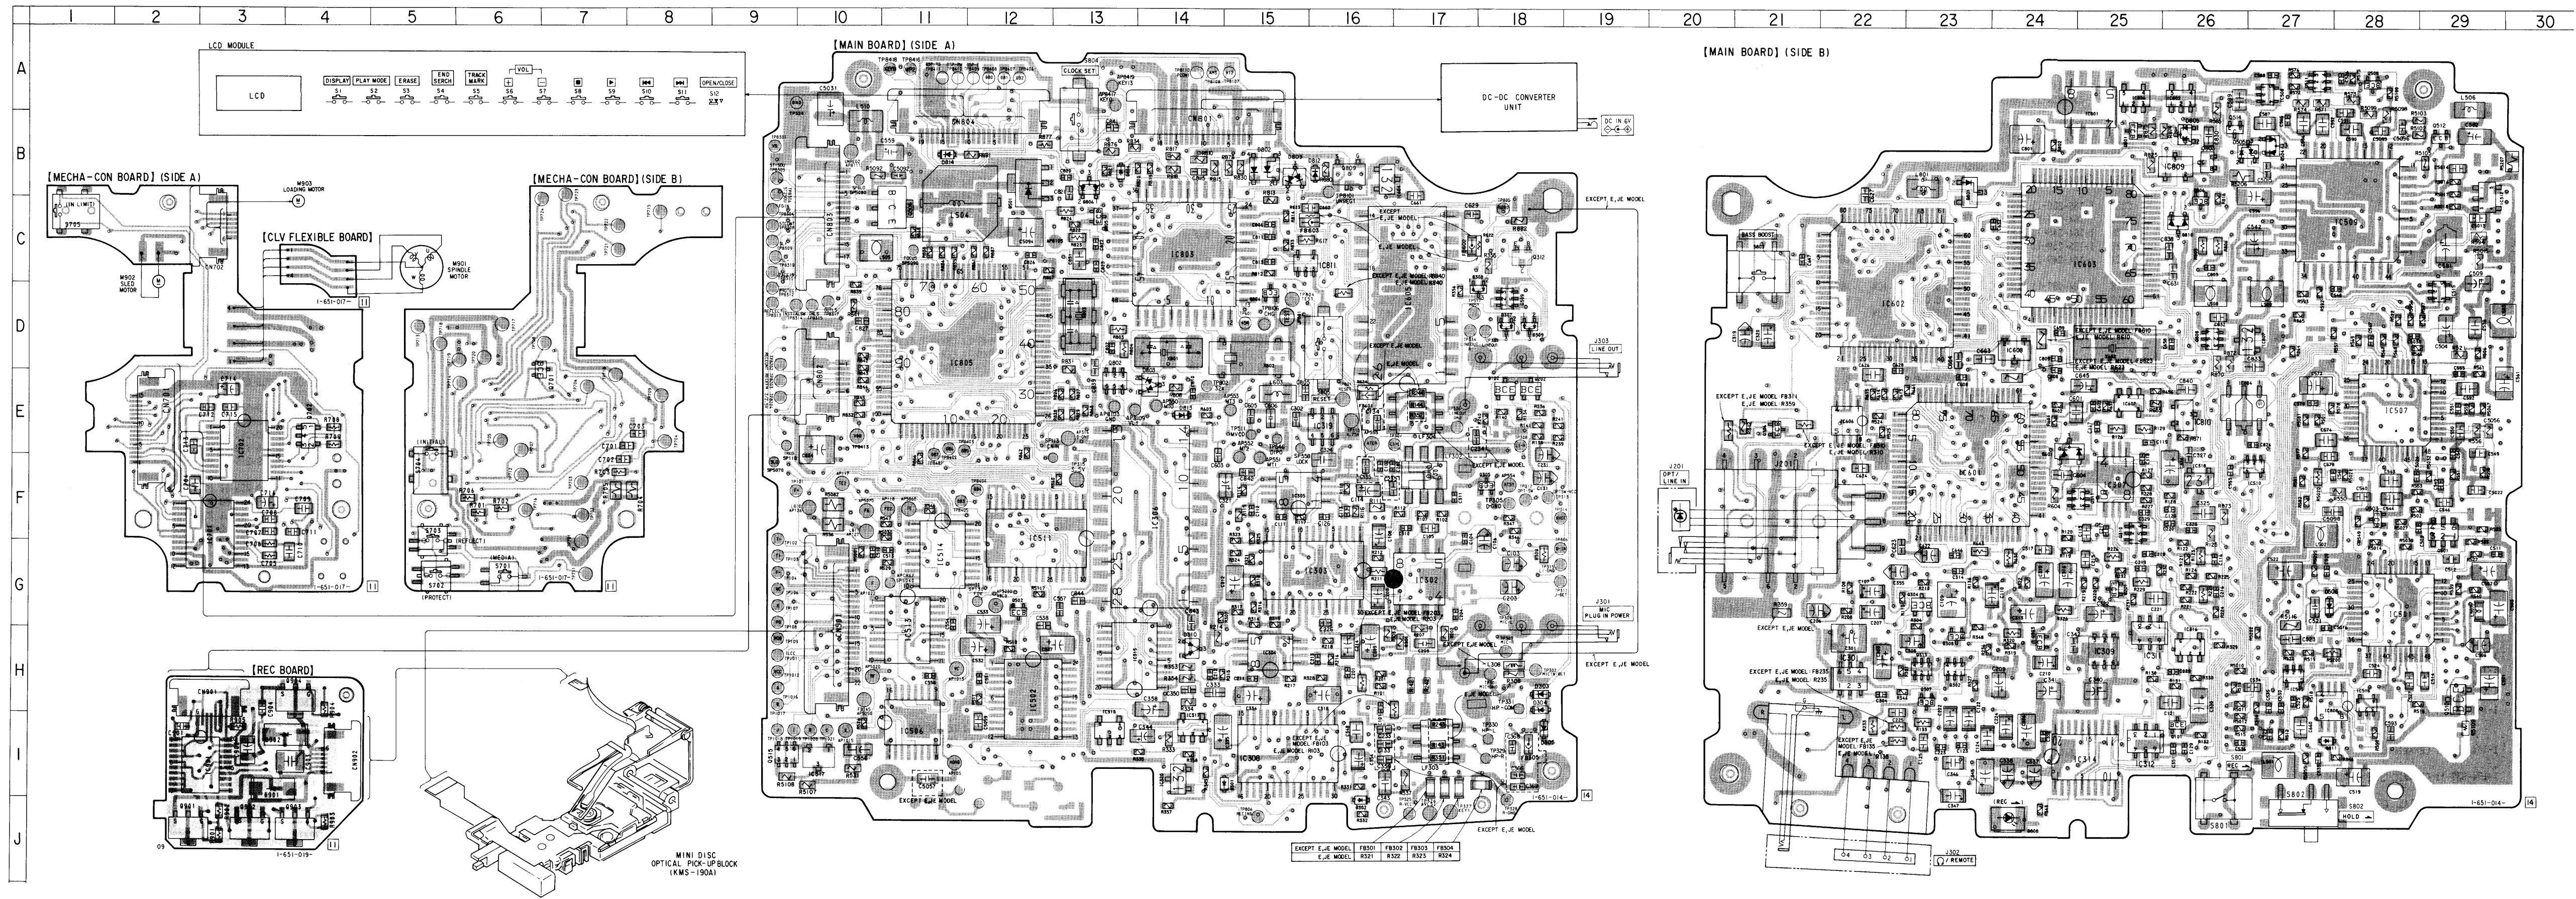

Semiconductor Location			
Ref. No.	Location	Ref. No.	Location
D301	I-15	IC601	F-23
D302	J-16	IC602	D-22
D303	H-18	IC603	C-25
D304	I-18	IC604	B-17
D305	I-18	IC605	D-17
D307	D-18	IC606	E-22
D308	C-18	IC607	E-25
D309	D-18	IC608	D-24
D310	H-14	IC701	F-3
D501	C-12	IC702	E-3
D504	B-27	IC801	A-25
D505	B-27	IC802	A-26
D506	G-28	IC803	C-14
D601	E-24	IC804	E-27
D801	B-23	IC805	D-11
D802	B-15	IC806	A-25
D803	E-14	IC807	D-27
D804	B-13	IC808	H-28
D805	B-26	IC809	B-26
D806	C-13	IC810	E-26
D808	J-24	IC811	C-16
D809	B-15	IC901	I-3
D810	C-26		
D811	I-28	Q101	I-26
D812	B-16	Q102	E-18
D813	E-14	Q201	G-25
D814	B-11	Q202	E-18
D901	I-3	Q302	H-23
D902	I-3	Q303	H-24
		Q304	G-23
		Q305	F-18
IC301	H-22	Q306	E-21
IC302	G-17	Q307	H-23
IC303	G-16	Q308	H-23
IC304	H-15	Q309	D-18
IC305	F-15	Q310	F-25
IC306	F-14	Q311	F-25
IC307	F-25	Q312	C-18
IC308	I-15	Q313	H-23
IC309	H-25	Q501	G-29
IC310	H-13	Q502	G-12
IC311	H-25	Q503	F-28
IC312	I-25	Q504	C-11
IC313	I-25	Q505	A-28
IC314	H-14	Q506	I-29
IC315	H-26	Q507	A-27
IC316	I-14	Q508	B-29
IC317	F-26	Q509	B-26
IC318	E-16	Q510	I-9
IC319	I-14	Q701	E-4
IC320	G-28	Q702	B-25
IC501	H-27	Q801	D-13
IC502	I-11	Q802	B-26
IC503	E-28	Q803	D-15
IC504	A-27	Q804	C-13
IC505	F-27	Q805	B-26
IC506	F-12	Q806	D-26
IC507	B-30	Q807	B-16
IC508	H-11	Q901	J-2
IC509	G-11	Q902	J-3
IC510	D-29	Q903	J-4
IC511	H-28	Q904	H-4
IC512	I-10		
IC513			
IC514			
IC515			
IC516			
IC517			

Note:  
• — : parts extracted from the component side.  
• ○ : Through hole.  
• △ : internal component.  
• ■ : Pattern from the side which enable seeing.  
• ▨ : Pattern of the rear side.



SECTION 8  
ELECTRICAL PARTS LIST

MAIN

MAIN

MAIN

MAIN

NOTE:

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts Example:  
KNOB, BALANCE (WHITE) ... (RED)  
↑  
Parts color  
• JE : Tourist model

- RESISTORS  
All resistors are in ohms  
METAL: Metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F : nonflammable
- SEMICONDUCTORS  
In each case, u:  $\mu$  , for example:  
uA...:  $\mu$  A..., uPA...:  $\mu$  PA...,  
uPB...:  $\mu$  PB..., uPC...:  $\mu$  PC...,  
uPD...:  $\mu$  PD...
- CAPACITORS  
uF:  $\mu$  F
- COILS  
uH:  $\mu$  H

Ref.No.	Part No.	Description	Remark
	A-3264-999-A	MAIN BOARD, COMPLETE (EXCEPT E, JE) *****	
	A-3276-264-A	MAIN BOARD, COMPLETE (E, JE) *****	
*	3-556-804-01	SHEET (F), ADHESIVE	
	3-831-441-XX	SPACER, KNOB	
	< CAPACITOR >		
C101	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C102	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C103	1-107-812-11	TANTAL. CHIP 4.7uF 20% 6.3V	
C104	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C105	1-164-730-11	CERAMIC CHIP 0.0012uF 10% 50V	
C106	1-107-813-11	TANTAL. CHIP 10uF 20% 6.3V	
C107	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C108	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C109	1-107-811-11	TANTAL. CHIP 47uF 20% 4V	
C110	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C111	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C112	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C113	1-164-864-11	CERAMIC CHIP 39PF 5% 16V	
C114	1-107-815-11	TANTAL. CHIP 2.2uF 20% 4V	
C115	1-164-473-11	CERAMIC CHIP 820PF 10% 50V	
C116	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C117	1-164-868-11	CERAMIC CHIP 56PF 5% 16V	
C118	1-164-876-11	CERAMIC CHIP 120PF 5% 16V	
C119	1-164-870-11	CERAMIC CHIP 68PF 5% 16V	
C120	1-164-876-11	CERAMIC CHIP 120PF 5% 16V	
C121	1-104-551-11	FILM CHIP 0.01uF 5% 16V	
C122	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C123	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 16V	
C124	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C125	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
C126	1-164-876-11	CERAMIC CHIP 120PF 5% 16V	
C129	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C131	1-107-812-11	TANTAL. CHIP 4.7uF 20% 6.3V	
C133	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C134	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C135	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)

Ref.No.	Part No.	Description	Remark
C201	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C202	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C203	1-107-812-11	TANTAL. CHIP 4.7uF 20% 6.3V	
C204	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C205	1-164-730-11	CERAMIC CHIP 0.0012uF 10% 50V	
C206	1-107-813-11	TANTAL. CHIP 10uF 20% 6.3V	
C207	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C208	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C209	1-107-811-11	TANTAL. CHIP 47uF 20% 4V	
C210	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C211	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C212	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C213	1-164-864-11	CERAMIC CHIP 39PF 5% 16V	
C214	1-107-815-11	TANTAL. CHIP 2.2uF 20% 4V	
C215	1-164-473-11	CERAMIC CHIP 820PF 10% 50V	
C216	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C217	1-164-868-11	CERAMIC CHIP 56PF 5% 16V	
C218	1-164-876-11	CERAMIC CHIP 120PF 5% 16V	
C219	1-164-870-11	CERAMIC CHIP 68PF 5% 16V	
C220	1-164-876-11	CERAMIC CHIP 120PF 5% 16V	
C221	1-104-551-11	FILM CHIP 0.01uF 5% 16V	
C222	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C223	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 16V	
C224	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C225	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
C226	1-164-876-11	CERAMIC CHIP 120PF 5% 16V	
C229	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C231	1-107-812-11	TANTAL. CHIP 4.7uF 20% 6.3V	
C233	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C234	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C235	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C301	1-104-630-11	TANTAL. CHIP 33uF 20% 6.3V	
C302	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C303	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C304	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C308	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C309	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C310	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C311	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C312	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	

Ref.No.	Part No.	Description	Remark
C313	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C314	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C315	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C316	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C317	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C318	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C319	1-107-813-11	TANTAL. CHIP 10uF 20% 6.3V	
C320	1-135-337-11	TANTAL. CHIP 1uF 20% 6.3V	
C321	1-104-929-11	TANTAL. CHIP 22uF 20% 6.3V	
C322	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C324	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C325	1-164-346-11	CERAMIC CHIP 1uF 16V	
C326	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C327	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C328	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C329	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C330	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C333	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C334	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C335	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C336	1-135-180-21	TANTALUM CHIP 3.3uF 20% 6.3V	
C337	1-107-812-11	TANTAL. CHIP 4.7uF 20% 6.3V	
C338	1-107-812-11	TANTAL. CHIP 4.7uF 20% 6.3V	
C340	1-104-630-11	TANTAL. CHIP 33uF 20% 6.3V	
C341	1-104-630-11	TANTAL. CHIP 33uF 20% 6.3V	
C342	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C343	1-164-505-11	CERAMIC CHIP 2.2uF 20% 16V	
C344	1-107-815-11	TANTAL. CHIP 2.2uF 20% 4V	
C345	1-135-145-11	TANTALUM CHIP 0.47uF 20% 25V	
C346	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C347	1-107-816-11	TANTAL. CHIP 0.68uF 20% 10V	
C348	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C350	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C351	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C352	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C354	1-107-816-11	TANTAL. CHIP 0.68uF 20% 10V	
C355	1-107-813-11	TANTAL. CHIP 10uF 20% 6.3V	
C358	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C359	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C366	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C368	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C369	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	(EXCEPT E, JE)
C501	1-104-929-11	TANTAL. CHIP 22uF 20% 6.3V	
C502	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C503	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C504	1-107-811-11	TANTAL. CHIP 47uF 20% 4V	
C506	1-107-813-11	TANTAL. CHIP 10uF 20% 6.3V	

Ref.No.	Part No.	Description	Remark
C508	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C509	1-107-811-11	TANTAL. CHIP 47uF 20% 4V	
C510	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C511	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C512	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 16V	
C513	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C514	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C519	1-104-929-11	TANTAL. CHIP 22uF 20% 6.3V	
C520	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C521	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C522	1-135-191-21	TANTAL. CHIP 0.22uF 10% 20V	
C523	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C524	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V	
C525	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
C526	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C527	1-162-979-11	CERAMIC CHIP 0.0027uF 10% 50V	
C529	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 16V	
C530	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C531	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
C532	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C533	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C534	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C535	1-164-933-11	CERAMIC CHIP 220PF 10% 16V	
C536	1-164-941-11	CERAMIC CHIP 0.01uF 10% 16V	
C537	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V	
C538	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C539	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V	
C540	1-165-112-11	CERAMIC CHIP 0.33uF 16V	
C541	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
C542	1-104-813-11	TANTAL. CHIP 10uF 20% 16V	
C543	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C544	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C545	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C546	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C547	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C548	1-164-933-11	CERAMIC CHIP 220PF 10% 16V	
C549	1-164-490-11	CERAMIC CHIP 0.068uF 16V	
C550	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V	
C551	1-164-916-11	CERAMIC CHIP 82PF 5% 16V	
C552	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C553	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C554	1-164-940-11	CERAMIC CHIP 0.047uF 16V	
C555	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C556	1-107-811-11	TANTAL. CHIP 47uF 20% 4V	
C557	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C558	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C561	1-104-929-11	TANTAL. CHIP 22uF 20% 6.3V	
C565	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V	
C567	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C570	1-164-949-11	CERAMIC CHIP 0.047uF 16V	

Ref.No.	Part No.	Description	Remark
C572	1-104-929-11	TANTAL. CHIP 22uF 20% 6.3V	
C574	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C578	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V	
C581	1-135-246-11	TANTAL. CHIP 33uF 20% 6.3V	
C582	1-135-208-11	TANTAL. CHIP 1uF 10% 10V	
C586	1-164-346-11	CERAMIC CHIP 1uF 16V	
C587	1-164-346-11	CERAMIC CHIP 1uF 16V	
C588	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C589	1-164-346-11	CERAMIC CHIP 1uF 16V	
C590	1-164-346-11	CERAMIC CHIP 1uF 16V	
C591	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C592	1-164-346-11	CERAMIC CHIP 1uF 16V	
C593	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C596	1-135-208-11	TANTAL. CHIP 1uF 10% 10V	
C601	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C602	1-164-874-11	CERAMIC CHIP 100PF 5% 16V	
C603	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
C604	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C605	1-164-850-11	CERAMIC CHIP 10PF 0.5PF 16V	
C606	1-162-952-11	CERAMIC CHIP 82PF 5% 50V	
C608	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C622	1-107-813-11	TANTAL. CHIP 10uF 20% 6.3V	
C623	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C624	1-104-700-11	CERAMIC CHIP 0.027uF 10% 16V	
C626	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C627	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C628	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C629	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C631	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C632	1-164-949-11	CERAMIC CHIP 0.047uF 16V	
C645	1-109-847-11	TANTAL. CHIP 0.47uF 20% 16V	</

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
< JACK >							
J201	8-759-252-45	IC GP1F365R (OPT/LINE IN)		Q514	8-729-024-46	TRANSISTOR 2SK2035	
J301	1-764-460-21	JACK (MIC, PLUG IN POWER)		Q515	8-729-930-13	TRANSISTOR UMH2	
J302	1-764-453-11	JACK (C)/REMOTE		Q801	8-729-927-99	TRANSISTOR 2SC4617	
J303	1-764-460-11	JACK (LINE OUT)		Q802	8-729-930-00	TRANSISTOR UMD2	
< COIL >				Q803	8-729-928-81	TRANSISTOR DTC144EE	
L308	1-412-988-11	INDUCTOR 5.6uH (EXCEPT E, JE)		Q804	8-729-928-81	TRANSISTOR DTC144EE	
L501	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		Q805	8-729-927-99	TRANSISTOR 2SC4617	
L502	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		Q806	8-729-928-81	TRANSISTOR DTC144EE	
L503	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		Q808	8-729-930-00	TRANSISTOR UMD2	
L504	1-402-831-21	COIL, CHOKE 68uH		Q809	8-729-023-89	TRANSISTOR 2SJ305	
L505	1-414-410-21	INDUCTOR (SMALL TYPE) 10.0uH		< RESISTOR >			
L506	1-414-203-11	INDUCTOR 100uH		R101	1-208-703-11	METAL CHIP 6.8K 0.50% 1/16W	
L507	1-412-991-11	INDUCTOR 10uH		R102	1-218-975-11	METAL GLAZE 68K 5% 1/16W	
L508	1-414-203-11	INDUCTOR 100uH		R103	1-216-864-11	METAL CHIP 0 5% 1/16W (E, JE)	
L509	1-414-203-11	INDUCTOR 100uH		R107	1-208-699-11	METAL CHIP 4.7K 0.50% 1/16W	
L603	1-414-357-41	INDUCTOR 1uH		R108	1-208-679-11	METAL CHIP 680 0.50% 1/16W	
L801	1-412-031-11	INDUCTOR CHIP 47uH		R110	1-220-398-11	METAL GLAZE 1.5M 5% 1/16W	
< LINE FILTER >				R111	1-218-734-11	METAL CHIP 56K 0.50% 1/16W	
LF302	1-403-601-21	FILTER, COMMON MODE		R112	1-208-714-11	METAL CHIP 20K 0.50% 1/16W	
LF303	1-403-601-21	FILTER, COMMON MODE (EXCEPT E, JE)		R114	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
LF304	1-403-601-21	FILTER, COMMON MODE (EXCEPT E, JE)		R115	1-208-681-11	METAL CHIP 820 0.50% 1/16W	
< TRANSISTOR >				R116	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q101	8-729-929-32	TRANSISTOR DTC144TE		R117	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q102	8-729-144-16	TRANSISTOR 2SD2228-D44D45		R118	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q201	8-729-929-32	TRANSISTOR DTC144TE		R119	1-208-683-11	METAL CHIP 1K 0.50% 1/16W	
Q202	8-729-144-16	TRANSISTOR 2SD2228-D44D45		R120	1-208-683-11	METAL CHIP 1K 0.50% 1/16W	
Q302	8-729-930-13	TRANSISTOR UMH2		R121	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q303	8-729-928-81	TRANSISTOR DTC144EE		R122	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q304	8-729-144-16	TRANSISTOR 2SD2228-D44D45		R123	1-218-734-11	METAL CHIP 56K 0.50% 1/16W	
Q305	8-729-928-31	TRANSISTOR DTA114YE		R124	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q306	8-729-927-99	TRANSISTOR 2SC4617		R125	1-208-715-11	METAL CHIP 22K 0.50% 1/16W	
Q307	8-729-928-81	TRANSISTOR DTC144EE		R126	1-218-736-11	METAL CHIP 68K 0.50% 1/16W	
Q308	8-729-928-81	TRANSISTOR DTC144EE		R127	1-208-719-11	METAL CHIP 33K 0.50% 1/16W	
Q309	8-729-930-00	TRANSISTOR UMD2		R128	1-208-719-11	METAL CHIP 33K 0.50% 1/16W	
Q310	8-729-930-05	TRANSISTOR UMD3		R129	1-218-736-11	METAL CHIP 68K 0.50% 1/16W	
Q311	8-729-930-00	TRANSISTOR UMD2		R130	1-208-696-11	METAL CHIP 3.6K 0.50% 1/16W	
Q312	8-729-928-19	TRANSISTOR 2SA1774R		R131	1-208-685-11	METAL CHIP 1.2K 0.50% 1/16W	
Q313	8-729-930-05	TRANSISTOR UMD3		R132	1-218-989-11	METAL GLAZE 1M 5% 1/16W	
Q501	8-729-422-39	TRANSISTOR XN4404		R133	1-216-789-11	METAL CHIP 2.2 5% 1/16W	
Q502	8-729-928-27	TRANSISTOR DTA144EE		R134	1-208-683-11	METAL CHIP 1K 0.50% 1/16W	
Q503	8-729-928-85	TRANSISTOR DTC114YE		R135	1-216-864-11	METAL CHIP 0 5% 1/16W (E, JE)	
Q506	8-729-923-45	TRANSISTOR 2SB1308-QR		R136	1-218-990-11	METAL GLAZE 0 5% 1/16W	
Q508	8-729-928-81	TRANSISTOR DTC144EE		R139	1-218-945-11	METAL GLAZE 220 5% 1/16W	
Q510	8-729-023-89	TRANSISTOR 2SJ305		R140	1-218-945-11	METAL GLAZE 220 5% 1/16W	
Q511	8-729-927-59	TRANSISTOR UMZ1		R141	1-218-977-11	METAL GLAZE 100K 5% 1/16W	
Q512	8-729-928-27	TRANSISTOR DTA144EE		R142	1-218-990-11	METAL GLAZE 0 5% 1/16W	
				R143	1-218-990-11	METAL GLAZE 0 5% 1/16W (E, JE)	
				R144	1-218-990-11	METAL GLAZE 0 5% 1/16W (E, JE)	
				R201	1-208-703-11	METAL CHIP 6.8K 0.50% 1/16W	

# MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R202	1-218-975-11	METAL GLAZE	68K	5%	1/16W	R319	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R203	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R320	1-216-861-11	METAL CHIP	2. 2M	5%	1/16W
R207	1-208-699-11	METAL CHIP	4. 7K	0. 50%	1/16W	R321	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R208	1-208-679-11	METAL CHIP	680	0. 50%	1/16W	R322	1-208-719-11	METAL CHIP	33K	0. 50%	1/16W
R210	1-218-988-11	METAL GLAZE	820K	5%	1/16W	R323	1-208-681-11	METAL CHIP	820	0. 50%	1/16W
R211	1-218-734-11	METAL CHIP	56K	0. 50%	1/16W	R324	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R212	1-208-714-11	METAL CHIP	20K	0. 50%	1/16W	R325	1-220-162-11	METAL GLAZE	20	5%	1/16W
R214	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R326	1-216-861-11	METAL CHIP	2. 2M	5%	1/16W
R215	1-208-681-11	METAL CHIP	820	0. 50%	1/16W	R327	1-208-691-11	METAL GLAZE	2. 2K	0. 5%	1/16W
R216	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R328	1-208-691-11	METAL GLAZE	2. 2K	0. 5%	1/16W
R217	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R329	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W
R218	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R330	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W
R219	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W	R331	1-218-975-11	METAL GLAZE	68K	5%	1/16W
R220	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W	R332	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R221	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R333	1-208-699-11	METAL CHIP	4. 7K	0. 50%	1/16W
R222	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R334	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R223	1-218-734-11	METAL CHIP	56K	0. 50%	1/16W	R335	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W
R224	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R337	1-216-789-11	METAL CHIP	2. 2	5%	1/16W
R225	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R343	1-208-720-11	METAL CHIP	36K	0. 50%	1/16W
R226	1-218-736-11	METAL CHIP	68K	0. 50%	1/16W	R344	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R227	1-208-719-11	METAL CHIP	33K	0. 50%	1/16W	R345	1-208-720-11	METAL CHIP	36K	0. 50%	1/16W
R228	1-208-719-11	METAL CHIP	33K	0. 50%	1/16W	R346	1-218-967-11	METAL GLAZE	15K	5%	1/16W
R229	1-218-736-11	METAL CHIP	68K	0. 50%	1/16W	R347	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R230	1-208-696-11	METAL CHIP	3. 6K	0. 50%	1/16W	R348	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R231	1-208-685-11	METAL CHIP	1. 2K	0. 50%	1/16W	R351	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)
R232	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R352	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)
R233	1-216-789-11	METAL CHIP	2. 2	5%	1/16W	R353	1-218-977-11	METAL GLAZE	100K	5%	1/16W
R234	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W	R354	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W
R235	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R355	1-218-979-11	METAL GLAZE	150K	5%	1/16W
R236	1-218-990-11	METAL GLAZE	0	5%	1/16W	R356	1-218-985-11	METAL GLAZE	470K	5%	1/16W
R239	1-218-945-11	METAL GLAZE	220	5%	1/16W	R357	1-208-721-11	METAL CHIP	39K	0. 50%	1/16W
R240	1-218-945-11	METAL GLAZE	220	5%	1/16W	R358	1-208-719-11	METAL CHIP	33K	0. 50%	1/16W
R241	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R359	1-216-864-11	METAL CHIP	0	5%	1/16W
R242	1-218-990-11	METAL GLAZE	0	5%	1/16W	R361	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R243	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)	R362	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R244	1-218-990-11	METAL GLAZE	0	5%	1/16W (E, JE)	R363	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R301	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R364	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R304	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R501	1-218-979-11	METAL GLAZE	150K	5%	1/16W
R305	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R502	1-218-950-11	METAL GLAZE	560	5%	1/16W
R306	1-208-721-11	METAL CHIP	39K	0. 50%	1/16W	R506	1-218-976-11	METAL GLAZE	82K	5%	1/16W
R307	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R507	1-218-957-11	METAL GLAZE	2. 2K	5%	1/16W
R308	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R510	1-218-980-11	METAL GLAZE	180K	5%	1/16W
R309	1-216-864-11	METAL CHIP	0	5%	1/16W	R511	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R310	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R512	1-220-214-11	METAL GLAZE	430K	5%	1/16W
R312	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R513	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R314	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R514	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R315	1-208-721-11	METAL CHIP	39K	0. 50%	1/16W	R515	1-218-980-11	METAL GLAZE	180K	5%	1/16W
R316	1-220-209-11	METAL GLAZE	160K	5%	1/16W	R516	1-218-975-11	METAL GLAZE	68K	5%	1/16W
R317	1-208-703-11	METAL CHIP	6. 8K	0. 50%	1/16W	R518	1-208-701-11	METAL CHIP	5. 6K	0. 50%	1/16W
R318	1-208-703-11	METAL CHIP	6. 8K	0. 50%	1/16W	R519	1-208-679-11	METAL CHIP	680	0. 50%	1/16W

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R520	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R614	1-208-695-11	METAL CHIP	3. 3K	0. 50%	1/16W
R521	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R615	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R522	1-208-701-11	METAL CHIP	5. 6K	0. 50%	1/16W	R617	1-216-864-11	METAL CHIP	0	5%	1/16W
R524	1-220-181-11	METAL GLAZE	750	5%	1/16W	R621	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R525	1-208-701-11	METAL CHIP	5. 6K	0. 50%	1/16W	R622	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R526	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W	R623	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R527	1-218-967-11	METAL GLAZE	15K	5%	1/16W	R624	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)
R529	1-208-717-11	METAL CHIP	27K	0. 50%	1/16W	R630	1-216-864-11	METAL CHIP	0	5%	1/16W
R531	1-218-941-11	METAL GLAZE	100	5%	1/16W	R631	1-218-990-11	METAL GLAZE	0	5%	1/16W
R533	1-218-945-11	METAL GLAZE	220	5%	1/16W	R637	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R535	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R643	1-216-864-11	METAL CHIP	0	5%	1/16W
R536	1-216-001-00	METAL CHIP	10	5%	1/10W	R655	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R539	1-208-701-11	METAL CHIP	5. 6K	0. 50%	1/16W	R656	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R540	1-208-699-11	METAL CHIP	4. 7K	0. 50%	1/16W	R661	1-218-984-11	METAL GLAZE	390K	5%	1/16W
R546	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W	R802	1-202-974-11	METAL GLAZE	3. 3M	5%	1/16W
R547	1-218-957-11	METAL GLAZE	2. 2K	5%	1/16W	R803	1-218-751-11	METAL CHIP	300K	0. 50%	1/16W
R549	1-218-957-11	METAL GLAZE	2. 2K	5%	1/16W	R804	1-218-744-11	METAL CHIP	150K	0. 50%	1/16W
R550	1-218-978-11	METAL GLAZE	120K	5%	1/16W	R805	1-218-751-11	METAL CHIP	300K	0. 50%	1/16W
R551	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R806	1-218-744-11	METAL CHIP	150K	0. 50%	1/16W
R553	1-218-968-11	METAL GLAZE	18K	5%	1/16W	R808	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R556	1-208-715-11	METAL CHIP	22K	0. 50%	1/16W	R810	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R557	1-220-398-11	METAL GLAZE	1. 5M	5%	1/16W	R812	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R558	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R813	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R559	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R814	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R561	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R815	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R565	1-208-681-11	METAL CHIP	820	0. 50%	1/16W	R816	1-208-706-11	METAL CHIP	9. 1K	0. 50%	1/16W
R566	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R817	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R567	1-218-986-11	METAL GLAZE	560K	5%	1/16W	R818	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R568	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R819	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R569	1-208-683-11	METAL CHIP	1K	0. 50%	1/16W	R820	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R571	1-218-949-11	METAL GLAZE	470	5%	1/16W	R821	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R572	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R822	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R573	1-218-975-11	METAL GLAZE	68K	5%	1/16W	R823	1-218-732-11	METAL CHIP	47K	0. 50%	1/16W
R574	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R824	1-218-749-11	METAL CHIP	240K	0. 50%	1/16W
R575	1-218-981-11	METAL GLAZE	220K	5%	1/16W	R825	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R576	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R826	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R577	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R827	1-208-699-11	METAL CHIP	4. 7K	0. 50%	1/16W
R578	1-218-980-11	METAL GLAZE	180K	5%	1/16W	R828	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R581	1-218-967-11	METAL GLAZE	15K	5%	1/16W	R829	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R582	1-208-709-11	METAL CHIP	12K	0. 50%	1/16W	R830	1-220-179-11	METAL GLAZE	510	5%	1/16W
R590	1-218-983-11	METAL GLAZE	330K	5%	1/16W	R831	1-208-699-11	METAL CHIP	4. 7K	0. 50%	1/16W
R592	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R832	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R593	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R833	1-202-974-11	METAL GLAZE	3. 3M	5%	1/16W
R594	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R834	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R601	1-218-967-11	METAL GLAZE	15K	5%	1/16W	R835	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R602	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R836	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R603	1-208-703-11	METAL CHIP	6. 8K	0. 50%	1/16W	R837	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R604	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R838	1-218-983-11	METAL GLAZE	330K	5%	1/16W
R610	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)	R839	1-218-973-11	METAL GLAZE	47K	5%	1/16W
R613	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R840	1-216-864-11	METAL CHIP	0	5%	1/16W (E, JE)

## MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R841	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R5099	1-208-717-11	METAL CHIP	27K	0.50%	1/16W
R842	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R5100	1-208-715-11	METAL CHIP	22K	0.50%	1/16W
R843	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R5102	1-218-989-11	METAL GLAZE	1M	5%	1/16W
R844	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R5103	1-208-699-11	METAL CHIP	4.7K	0.50%	1/16W
R845	1-218-973-11	METAL GLAZE	47K	5%	1/16W	R5105	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R846	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R5107	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R860	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R5108	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R861	1-218-988-11	METAL GLAZE	820K	5%	1/16W	R5109	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R862	1-218-978-11	METAL GLAZE	120K	5%	1/16W	R5116	1-216-796-11	METAL GLAZE	8.2	5%	1/16W
R863	1-218-989-11	METAL GLAZE	1M	5%	1/16W	R5117	1-218-965-11	METAL GLAZE	10K	5%	1/16W
R864	1-208-685-11	METAL CHIP	1.2K	0.50%	1/16W	R5200	1-216-864-11	METAL CHIP	0	5%	1/16W
R865	1-218-965-11	METAL GLAZE	10K	5%	1/16W	R5202	1-218-990-11	METAL GLAZE	0	5%	1/16W
R866	1-218-977-11	METAL GLAZE	100K	5%	1/16W	R5206	1-216-013-00	METAL CHIP	33	5%	1/10W
R867	1-218-988-11	METAL GLAZE	820K	5%	1/16W	R5207	1-216-013-00	METAL CHIP	33	5%	1/10W
R868	1-218-977-11	METAL GLAZE	100K	5%	1/16W	< SWITCH >					
R870	1-218-977-11	METAL GLAZE	100K	5%	1/16W	S801	1-572-467-31	SWITCH, PUSH (1 KEY) (REC →)			
R871	1-218-983-11	METAL GLAZE	330K	5%	1/16W	S802	1-571-275-31	SWITCH, SLIDE (HOLD →)			
R872	1-218-965-11	METAL GLAZE	10K	5%	1/16W	S803	1-692-088-11	SWITCH, TACTILE (BASS BOOST)			
R873	1-218-977-11	METAL GLAZE	100K	5%	1/16W	S804	1-572-473-11	SWITCH, TACTIL (CLOCK SET)			
R874	1-218-985-11	METAL GLAZE	470K	5%	1/16W	S805	1-572-473-11	SWITCH, TACTIL (RESET)			
R875	1-218-985-11	METAL GLAZE	470K	5%	1/16W	< VIBRATOR >					
R876	1-202-974-11	METAL GLAZE	3.3M	5%	1/16W	X602	1-760-173-11	VIBRATOR, CRYSTAL (45MHz)			
R877	1-202-974-11	METAL GLAZE	3.3M	5%	1/16W	X801	1-760-172-11	VIBRATOR, CERAMIC (4.19MHz)			
R880	1-202-974-11	METAL GLAZE	3.3M	5%	1/16W	X802	1-579-886-21	VIBRATOR, CRYSTAL (32.768kHz)			
R881	1-202-974-11	METAL GLAZE	3.3M	5%	1/16W	X803	1-760-174-11	VIBRATOR, CERAMIC (12MHz)			
R882	1-218-990-11	METAL GLAZE	0	5%	1/16W	*****					
R5001	1-208-685-11	METAL CHIP	1.2K	0.50%	1/16W						
R5010	1-208-683-11	METAL CHIP	1K	0.50%	1/16W						
R5011	1-208-683-11	METAL CHIP	1K	0.50%	1/16W						
R5012	1-208-683-11	METAL CHIP	1K	0.50%	1/16W						
R5014	1-208-683-11	METAL CHIP	1K	0.50%	1/16W						
R5015	1-208-719-11	METAL CHIP	33K	0.50%	1/16W						
R5016	1-208-719-11	METAL CHIP	33K	0.50%	1/16W						
R5017	1-218-975-11	METAL GLAZE	68K	5%	1/16W						
R5018	1-218-975-11	METAL GLAZE	68K	5%	1/16W						
R5020	1-216-860-11	METAL GLAZE	1.8M	5%	1/16W						
R5021	1-218-981-11	METAL GLAZE	220K	5%	1/16W						
R5027	1-218-965-11	METAL GLAZE	10K	5%	1/16W						
R5030	1-218-978-11	METAL GLAZE	120K	5%	1/16W						
R5032	1-218-975-11	METAL GLAZE	68K	5%	1/16W						
R5039	1-218-990-11	METAL GLAZE	0	5%	1/16W						
R5055	1-218-977-11	METAL GLAZE	100K	5%	1/16W						
R5056	1-218-990-11	METAL GLAZE	0	5%	1/16W						
R5067	1-218-980-11	METAL GLAZE	180K	5%	1/16W						
R5081	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W						
R5082	1-216-001-00	METAL CHIP	10	5%	1/10W						
R5092	1-218-944-11	METAL GLAZE	180	5%	1/16W						
R5095	1-220-398-11	METAL GLAZE	1.5M	5%	1/16W						
R5098	1-208-719-11	METAL CHIP	33K	0.50%	1/16W						

# MZ-R2

## SONY<sup>®</sup> SERVICE MANUAL



1994.09

US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model  
Tourist Model



### SUPPLEMENT-2

Revise your service manual as shown below due to parts supply classification has been changed.

 : indicates revised portion.

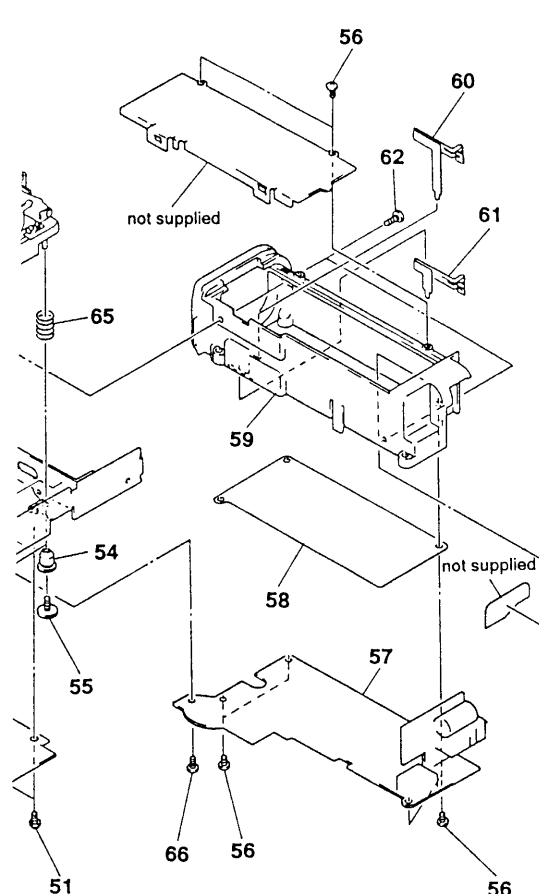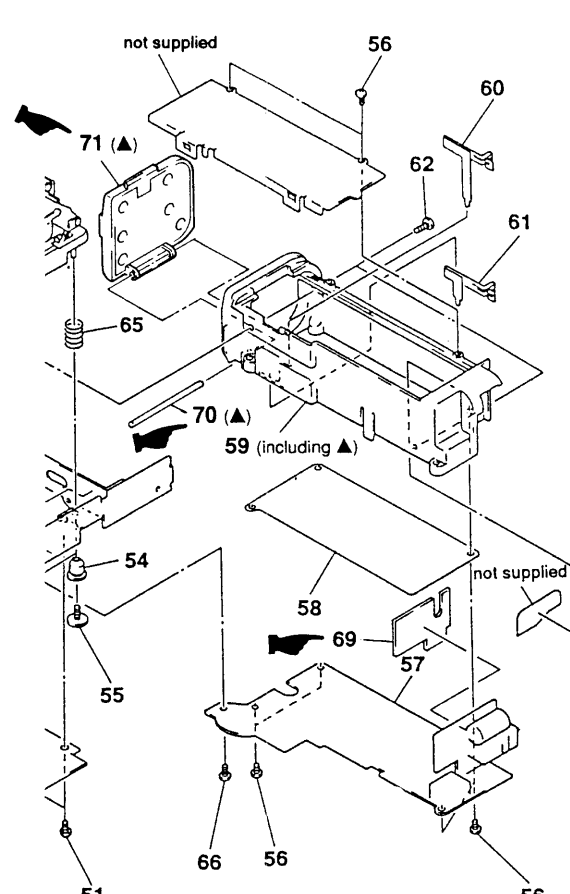Page	CURRENT	REVISED																				
72																						
	<table><tr><th>Ref. No.</th><th>Part No.</th><th>Description</th></tr><tr><td>* 69</td><td>_____</td><td>_____</td></tr><tr><td>70</td><td>_____</td><td>_____</td></tr><tr><td>71</td><td>_____</td><td>_____</td></tr></table>	Ref. No.	Part No.	Description	* 69	_____	_____	70	_____	_____	71	_____	_____	<table><tr><th>Part No.</th><th>Description</th></tr><tr><td>4-965-044-01</td><td>SHEET (1) POWER PC BOARD COVER</td></tr><tr><td>4-964-026-01</td><td>SHAFT (BATTERY CASE LID)</td></tr><tr><td>X-4944-464-1</td><td>LID ASSY. BATTERY CASE</td></tr></table>	Part No.	Description	4-965-044-01	SHEET (1) POWER PC BOARD COVER	4-964-026-01	SHAFT (BATTERY CASE LID)	X-4944-464-1	LID ASSY. BATTERY CASE
Ref. No.	Part No.	Description																				
* 69	_____	_____																				
70	_____	_____																				
71	_____	_____																				
Part No.	Description																					
4-965-044-01	SHEET (1) POWER PC BOARD COVER																					
4-964-026-01	SHAFT (BATTERY CASE LID)																					
X-4944-464-1	LID ASSY. BATTERY CASE																					

 : indicates revised portion.

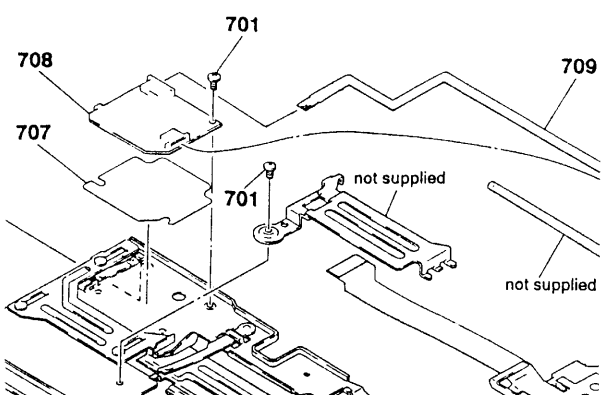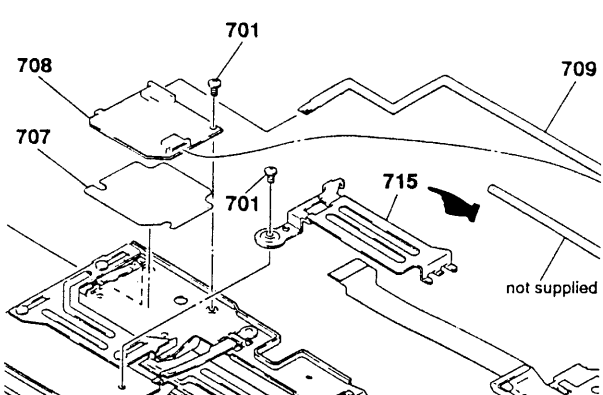Page	CURRENT	REVISED
73	 <p>708 707 701 701 not supplied not supplied 709</p> <p><u>Ref. No.</u>   <u>Part No.</u>   <u>Description</u></p> <p>*715   not supplied</p>	 <p>708 707 701 701 715 not supplied 709</p> <p><u>Part No.</u>   <u>Description</u></p> <p><u>4-963-889-02</u>   <u>GUARD. HEAD</u></p>





## REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]